



Multicrete Portable Mixing Station



MULTICRETE SYSTEMS INC.

360-555 Hervo Street
Winnipeg, MB R3T 3L6

JANUARY 2014




Multicrete Portable Mixing Station



OVERVIEW

JANUARY 2014

Multicrete Portable Mix Station Overview

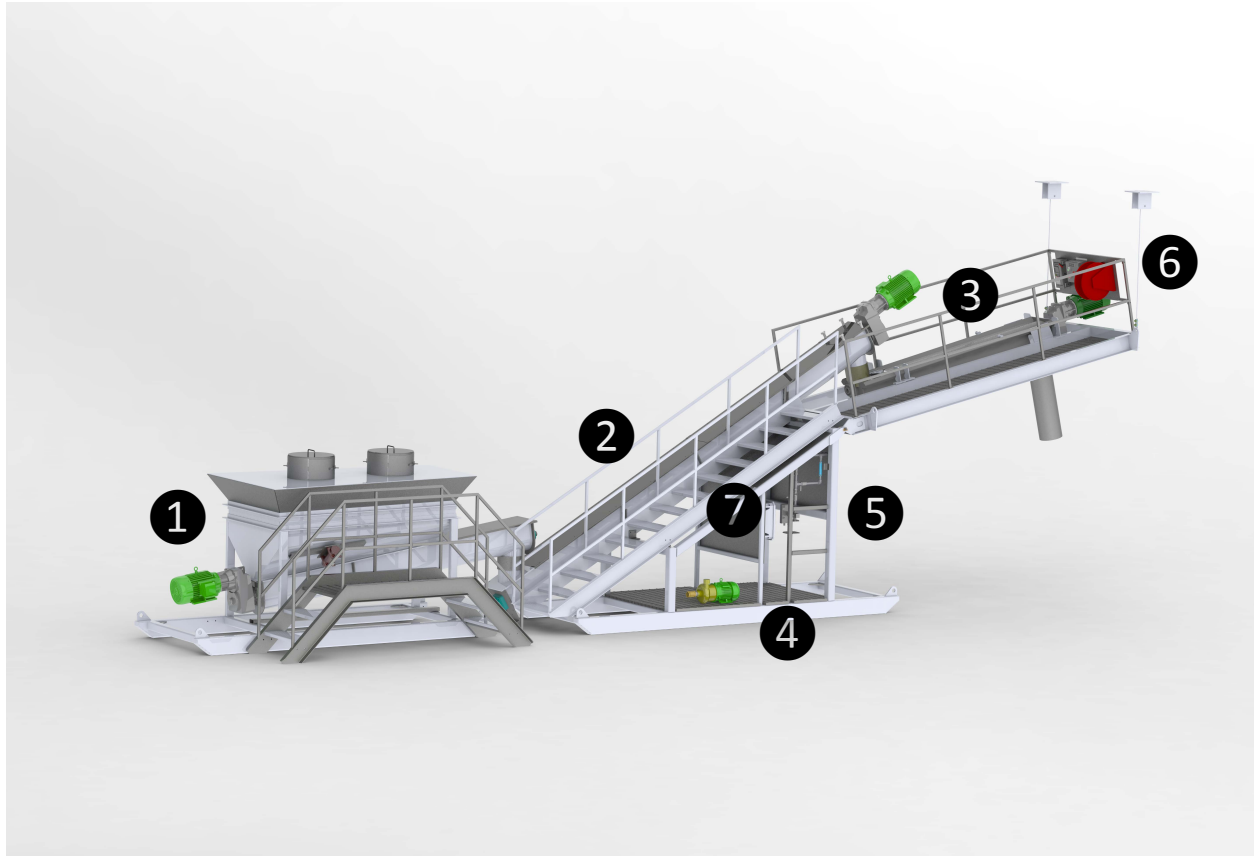

Introduction

Multicrete's Portable Mixing Station consists of:

- **Feed Auger System ①**
- **Incline Auger ②**
- **Mix Auger ③**
- **Water System ④**
- **Addmix system (optional) ⑤**
- **High Pressure Wash System (optional) ⑥**
- **Electric Control System ⑦**

Multicrete Portable Mix Station Overview

Feed Auger System



The Feed Auger System is designed to hold one yard (two yards with extensions) of pre-weighed dry shotcrete materials. The Metering Auger feeds material from the flooded hopper to the Incline Auger at a controlled rate using the Variable Frequency Drive (VFD). The Metering Auger is activated by a start/stop switch located on the Control Panel.

The Feed Auger System consists of feed hopper, vibrators and metering auger.

Incline Auger System



The Incline Auger feeds material from the Feed Auger system to the Incline Auger at a fixed speed. The Incline Auger is activated by a start/stop switch located on the Control Panel.

Mixing Auger System




The Mix Auger serves two purposes: to convey material from the Incline Auger to the transport

Multicrete Portable Mix Station Overview

vehicle, and to add mix water and Addmix chemical into the material to create a full wet mix of material.

The Mix Auger is activated by a switch on the Control Panel.

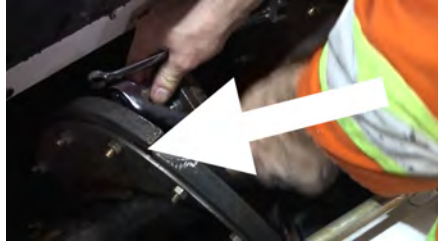

Note: Replace shoe before it wears into base metal (approx. 1/8")

Water System



The Water System is comprised of the following components:


- **Water Feed Tank:** A holding tank to supply water to the system.
Supply Pump: Manual/Auto control. When in auto, booster pump runs to supply water from the Water Feed Tank when the Batch Controller requests supply.
- Manual control has no interlocking and should primarily be used with operation of the High Pressure Wash System.
- **Mag Flow Meter:** Monitors flow rate, sends out pulse signal to the Water Batch Controller and displays flow rate.
- **Electric Actuated Ball Valve and Gate Valve:** controls water flow and is activated by the Water Batch Controller.
- **Water Batch Controller:** Monitors water volume used (Liters). Controls Water Valve accordingly.
- **Water Header:** Provides water distribution to Mix Auger.

Multicrete Portable Mix Station Overview

Addmix System (optional)

The Addmix System consists of a peristaltic tube pump, a Mag flow meter with indicator.

High Pressure Wash System (Optional)

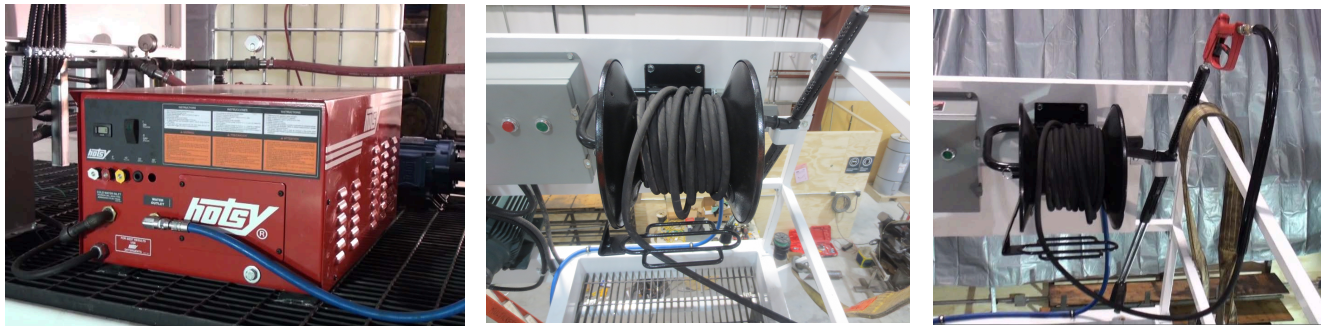

The High Pressure Wash System is a standalone unit that provides up to 2500 psi for Mix Auger and other required cleanouts.

Electrical Control System



The Portable Mix Station Electrical Design consists of:

- **Main Fused Lockable Disconnect Switch**
 - o Provides a lockable disconnect means with viewing window for stab operation verification.
 - o Fused for short circuit protection.
- **600 / 120V Transformer**

Electrical Control System-cont.

- **Main Control Panel**
 - 3 Kilo Volt Ampere (KVA) Transformer for system 120V control power
 - Mix Auger, Incline Auger and Metering Auger Start/Stop
 - Hopper Vibrators momentary Start button
 - Water Valve, Addmix and Booster Pump Hand/Off/Auto
 - E-Stop for emergency situations. Not intended to be used as a safety device for maintenance, cleanup, etc.
- **Water Batch Control Panel**
 - Monitors flow rate using pulse inputs
 - Display batch total liters (gallons optional)
- **When all switches are in Auto:**
 - Controls Water Valve operation
 - Controls Addmix operation
 - Controls Booster Pump operation
- **Mix Auger Remote Lockable Disconnect**
 - Provides a lockable disconnect means for safe isolation of Mix Auger.
- **Mix Auger Remote Start/Stop Control with system E-Stop**
 - Remote Start/Stop on catwalk, primarily used for clean out purposes. E-Stop is an entire system E-Stop for emergency situations and is not intended to be used as a safety device for maintenance, cleanup, etc.
- **Addmix Controller**
 - Displays total Addmix volume or flow.
- **Metering Auger VFD**
 - Provides speed control for the Metering Auger.





Multicrete Portable Mixing Station



OPERATION

JANUARY 2014

Multicrete Portable Mix Station Operation

Feed Auger System

The Feed Auger System provides storage for dry pre-blended material for consistent volumetric delivery of material. The Feed auger system needs to be filled with a pre weighed volume of pre-blended material. The system will use the metering auger along with the VFD to feed material at a controlled rate for a consistent feed. The operator must pre load material into hopper before starting, additional material may be added quickly to keep a consistent mix at the mix auger. The system may be stopped momentarily if required to add additional material however shut down and start up procedure must be followed to ensure consistent delivery.

The operator must monitor volume in hopper and operate the vibrators manually at the end of the batch to ensure ALL material is used in the mix.

Incline Auger System

The Incline Auger is used to convey material from feed auger to the mix auger. The Incline auger is started from the main control panel. The Incline Auger is interlocked through the Mix Auger auxiliary contact. The Mix Auger must be running to allow the Incline Auger to run. The incline auger has a clean out located at the discharge. Remove to check the discharge for buildup occasionally the frequency of this will need to be monitored to prevent excessive build up. Follow Lock out procedure by locking out main control panel prior to removing cover.

Mix Auger System

The Mix Auger is started from the main control panel. The Mix Auger is a fixed speed volumetric mixer designed to provide a complete mix of materials as they are fed volumetrically at a controlled rate. The mix auger has a remote start/stop station and local disconnect located on the catwalk to assist with clean up. The Mix auger is cleaned by opening the main cover held down with the over center handles on the main frame.

Follow lock out procedure by using the local disconnect on the catwalk before opening or removing mix auger covers.

Water System

The water system is comprised of water holding tank, supply pump, Water Mag flow meter, electric actuated valve and batch controller. There is also a standalone high pressure wash system (optional) for system cleanup.

Multicrete Portable Mix Station Operation

The water batch controller dictates the action of the water process while the system is in Auto. The batch controller is designed to deliver a preset volume of water by controlling the water valve. The batch control is able to learn the overrun value, therefore a consistent supply of water is supplied by means of the holding tank and supply pump.

The water valve, Addmix and booster pump are interlocked with the Metering Auger running signal.

The auto batch controller gets its signal from the Water mag flow meter. The water mag flow meter will provide a signal to the batch controller based on volume. The water meter will also display the actual flow rate.

Addmix System (optional)

The Addmix System can be operated in hand or auto. When used in auto the Addmix will operate while the water valve is open in the auto mode. The flow rate is adjusted using the variable speed controller located on the side of the pump drive. The pump is a peristaltic tube pump, the tube is a consumable item, and is easily replaced by removing the cover and installing a new tube. The volume of the pump is also adjusted by changing the size of tube. Tube material will be determined from the MSDS information of the chemical used.

System Set-up

To begin system set up, the system must be calibrated using the following procedure:

1. Fill the feed hopper with desired batch volume
2. Run system with no water and record time required to deliver complete batch
3. Determine approximate total water and add mix required per batch
4. Calculate desired water flow rate based on material delivery time and required water
5. Manually run water and adjust flow using the gate valve while monitoring water flow meter. Set to desired flow rate based on previous calculations.
6. Calculate desired Addmix flow rate based on total required and material delivery time.
7. Manually operate the add mix pump and adjust the flow rate using the variable speed controller located on the side of the pump drive.

Once set up is complete, proceed to produce material in auto function. Total volumes of material and desired slump must be monitored and adjustments made as required.

Multicrete Portable Mix Station Operation

Operation sequence

1. Turn on power to mix station.
2. Grease the bearing seal on the mix auger.
3. Check that the water tote is full.
4. Load the hopper with product. The first bag must be emptied into the first hole on the hopper. Three (3) will fill up the hopper. Depending on batch size, have a fourth bag hanging over the hopper and opened.
5. Ensure the transmixer is parked properly underneath the discharge chute of the mix auger.
6. Ensure that the water amount is properly programmed on the water batch system. (See separate instructions).
7. Turn the water pump and booster pump switch to Auto.
8. Start the augers in the order of: mix auger, incline auger, metering auger.
9. Wait 75 seconds* and then start the water.
10. Watch the flow meter and adjust to roughly 58 litres/min.*
11. Periodically, run the vibrator to move product in the hopper.
12. Check the transmixer to ensure that the mix is not piling up.
13. If the mix is piling up, stop the batch process by pressing the Stop button for the metering auger and incline auger. This will shut off the water after 3 seconds. Let the mix auger run for about 15 seconds to empty out any excess material.
14. The transmixer can now move to the next opening. Batching can now resume by starting the mix auger, incline auger, and metering auger in that order. The water will automatically turn on; monitor the flow rate to ensure it returns to the original setting.
15. Once the hopper is empty, turn off the metering auger.
16. Once the desired batch water has been reached, let the incline auger run for another two (2) minutes to let any material run through before turning it off.
17. Let the mix auger run for another minute before turning it off.
18. The transmixer operator can pull away from under the discharge chute and let the truck mix for another five (5) minutes.

* Adjustments to these numbers can be made.

Multicrete Portable Mix Station Operation

System Clean-up

It is critical the Mix Auger is cleaned and maintained in good condition in order to produce good consistent mix while minimizing maintenance.

It is good practice to use the last part of the batch water to start the pre-cleaning of the Mix Auger. This is done by adjusting the water and material flow rates to have the dry material to run out before the water is complete.

Upon completion of the batch, the vehicle can be removed and water can be run through the Mix Auger to start the wash procedure. After the pre wash is complete, it is necessary to do a manual wash.

1. Lock out Mix Auger using the local disconnect located on the catwalk.
2. Open Mix Auger cover and fold back
3. Remove mix spray bars and clean thoroughly
4. If the optional High Pressure Wash system is installed, use it to wash auger completely. Otherwise, use the hand wash hose to wash auger completely.
5. Close the mix auger cover and unlock local disconnect and run using the controls located on the catwalk.
6. Check auger again for material left on auger.
7. Reinstall spray bars and close cover
8. Repeat procedure as required.
9. Check incline discharge weekly or as required for build up.

Multicrete Portable Mix Station Operation

Setting Water Meter

1. Press F2 to bring up preset water total.
2. Press F1 to go to the desired number change.
3. Once on desired number, press F2 to change set number.
4. Repeat steps 2 and 3 until desired water total is reached.
5. Press F3 to confirm the total amount of water.
6. Press F2 to double check the correct total has been set.
7. Press F3 to return to the ready screen.



Multicrete Portable Mixing Station



MAINTENANCE

JANUARY 2014



MAINTENANCE SCHEDULE

Multicrete Portable Mixing Station Maintenance Checklist

Description	Frequency						
	Each batch	Daily	150 yard ³	500 yard ³	6000 yard ³	As Req.	Initial
1. Feed Hopper System							
1.1 Hopper Vibrators							
1.1.1 Check Hopper for cracks around vibrator mounts			X				
1.1.2 Check amplitude to ensure sufficient to move material and not to cause hopper failure			X				
1.2 Feed Auger Screw							
1.2.1 Visually inspect auger flighting for wear (critical wear will occur at discharge area)				X			
1.3 Check for wear on trough (annually)					X		
1.4 Check oil level and color in reducer monthly				X			
1.4.1 Replace annually					X		
1.5 Lube discharge bearing weekly one shot			X				
2. Incline Auger Screw							
2.1 Visually inspect auger flighting for wear. Remove covers 10,000 Tons increase inspection as required.				X			
2.2 Check for wear on trough annually					X		
2.3 Check oil level and color in reducer monthly				X			
2.3.1 Replace annually					X		
2.4 Lube discharge bearing weekly one shot			X				
3. Mix auger							
3.1 Lube infeed bearing		X					
3.2 Clean auger	X						
3.3 Check condition of all replaceable wear flights weekly replace as required.			X				
3.4 Check condition of trough lower belt and cover			X				
3.5 Check oil level and color in reducer monthly				X			
3.5.1 Replace annually					X		
3.6 Grease mix auger lower bearing		X					



MAINTENANCE SCHEDULE


Multicrete Portable Mixing Station Maintenance Checklist

Description	Frequency						
	Each batch	Daily	150 yard ³	500 yard ³	6000 yard ³	As required	Initial
4. Water system							
4.1 Clean infeed strainer weekly or as required			X			X	
4.2 Check pump for leaks at seal			X				
4.2.1 Replace as required						X	
4.3 Drain back wash filter or pressure washer supply weekly or as required			X			X	
4.4 Check all hoses for wear and cracks			X				
4.4.1 Replace as required						X	
5. Structure							
5.1 Check structure for cracks weekly, repair as req.			X				
5.2 Check all platform supports and anchors, repair as required			X				
5.3 Check all stairs and platform grating for condition and obstructions			X				
5.4 Check condition of all handrails for condition			X				


MULTICRETE PORTABLE MIXING STATION CALIBRATION CHECK SHEET

[illegible]


MSI PORTABLE MIXING STATION

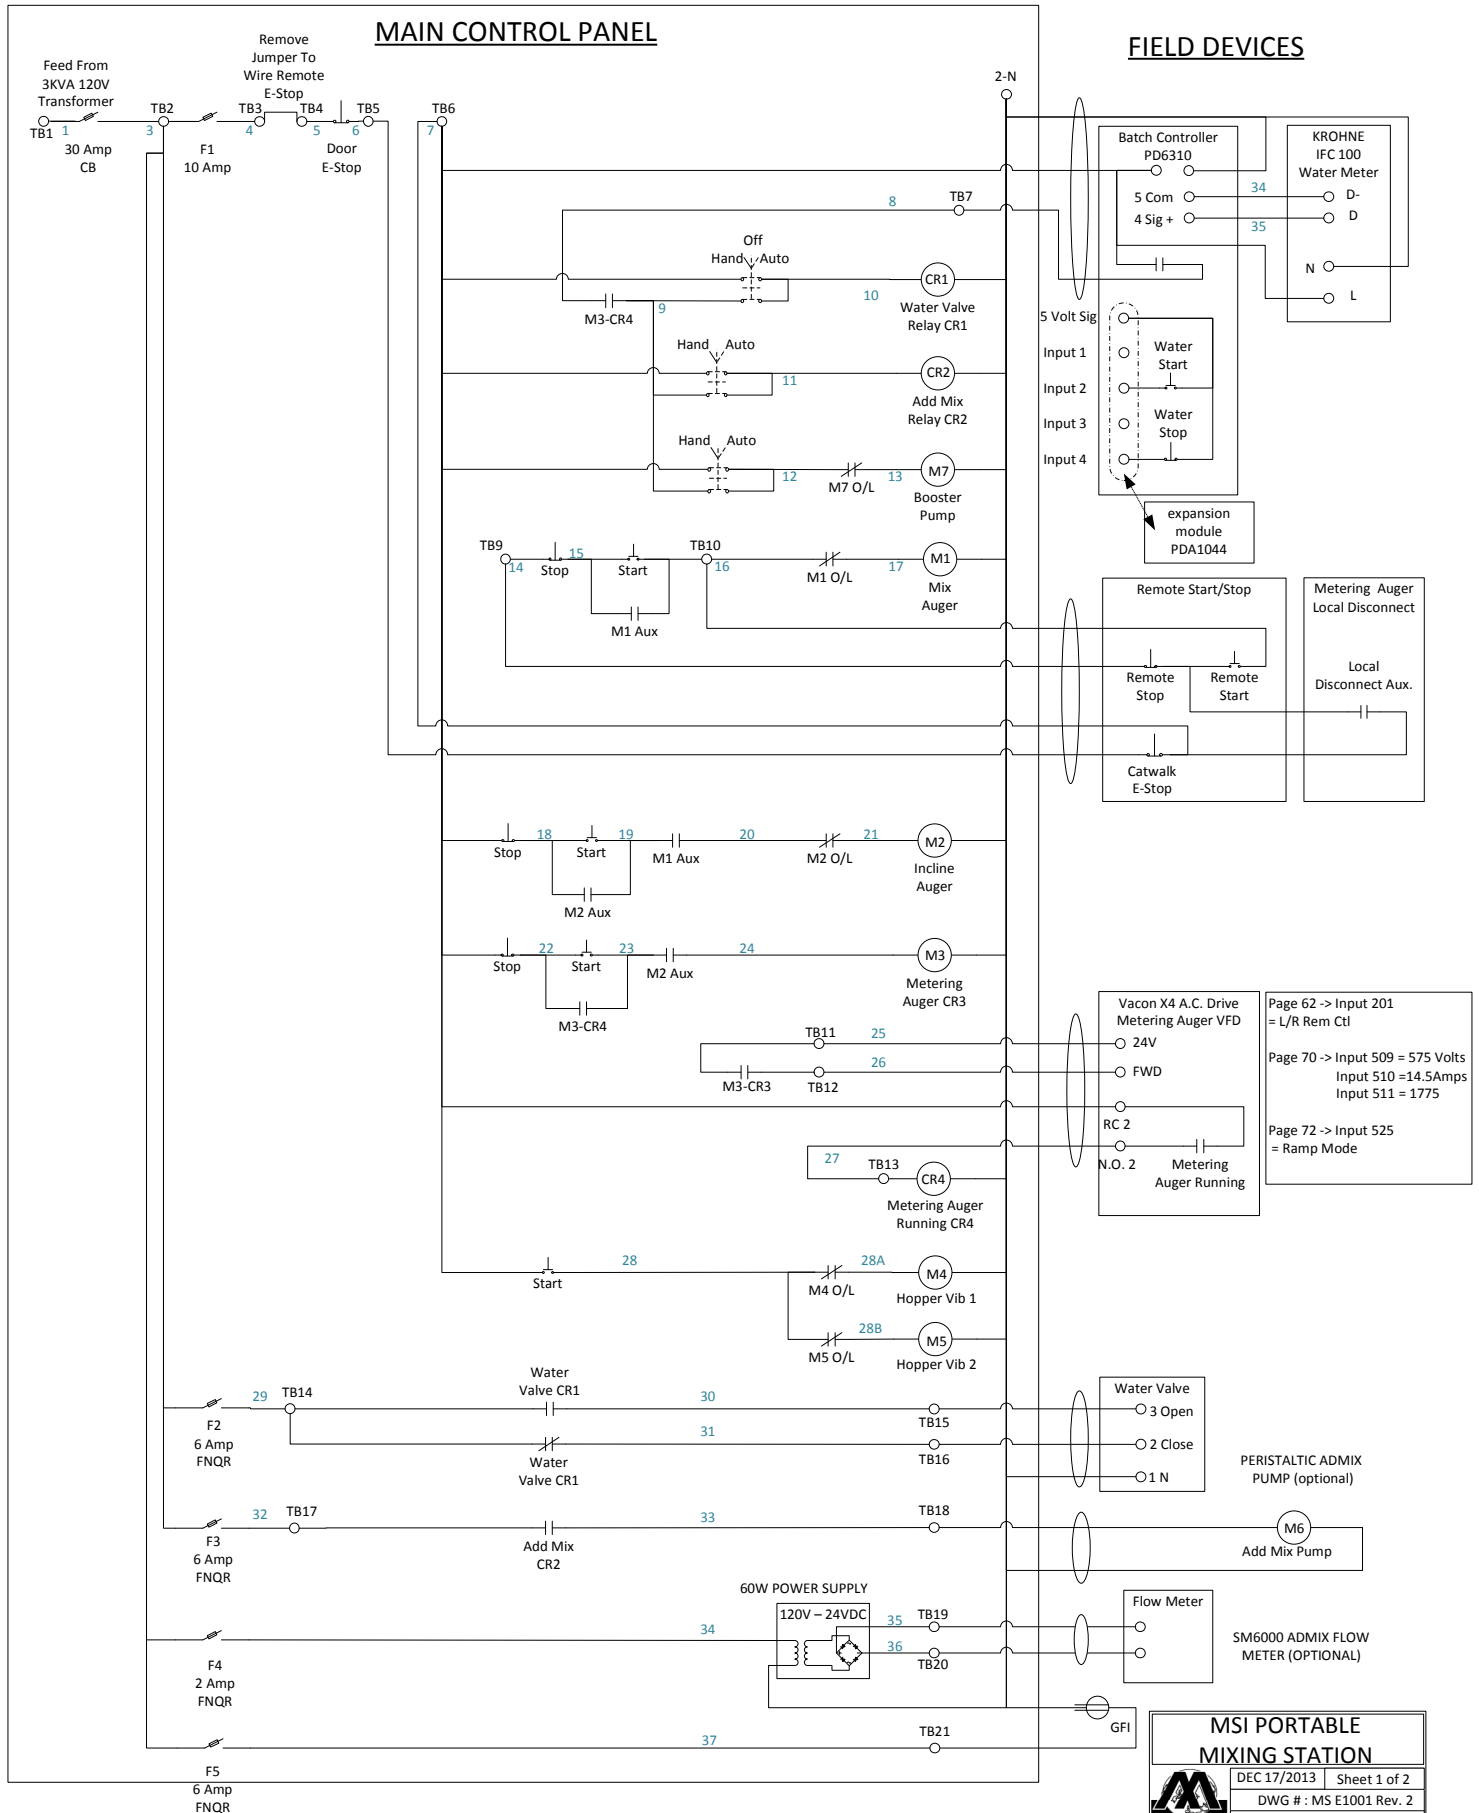


MSI PORTABLE MIXING STATION

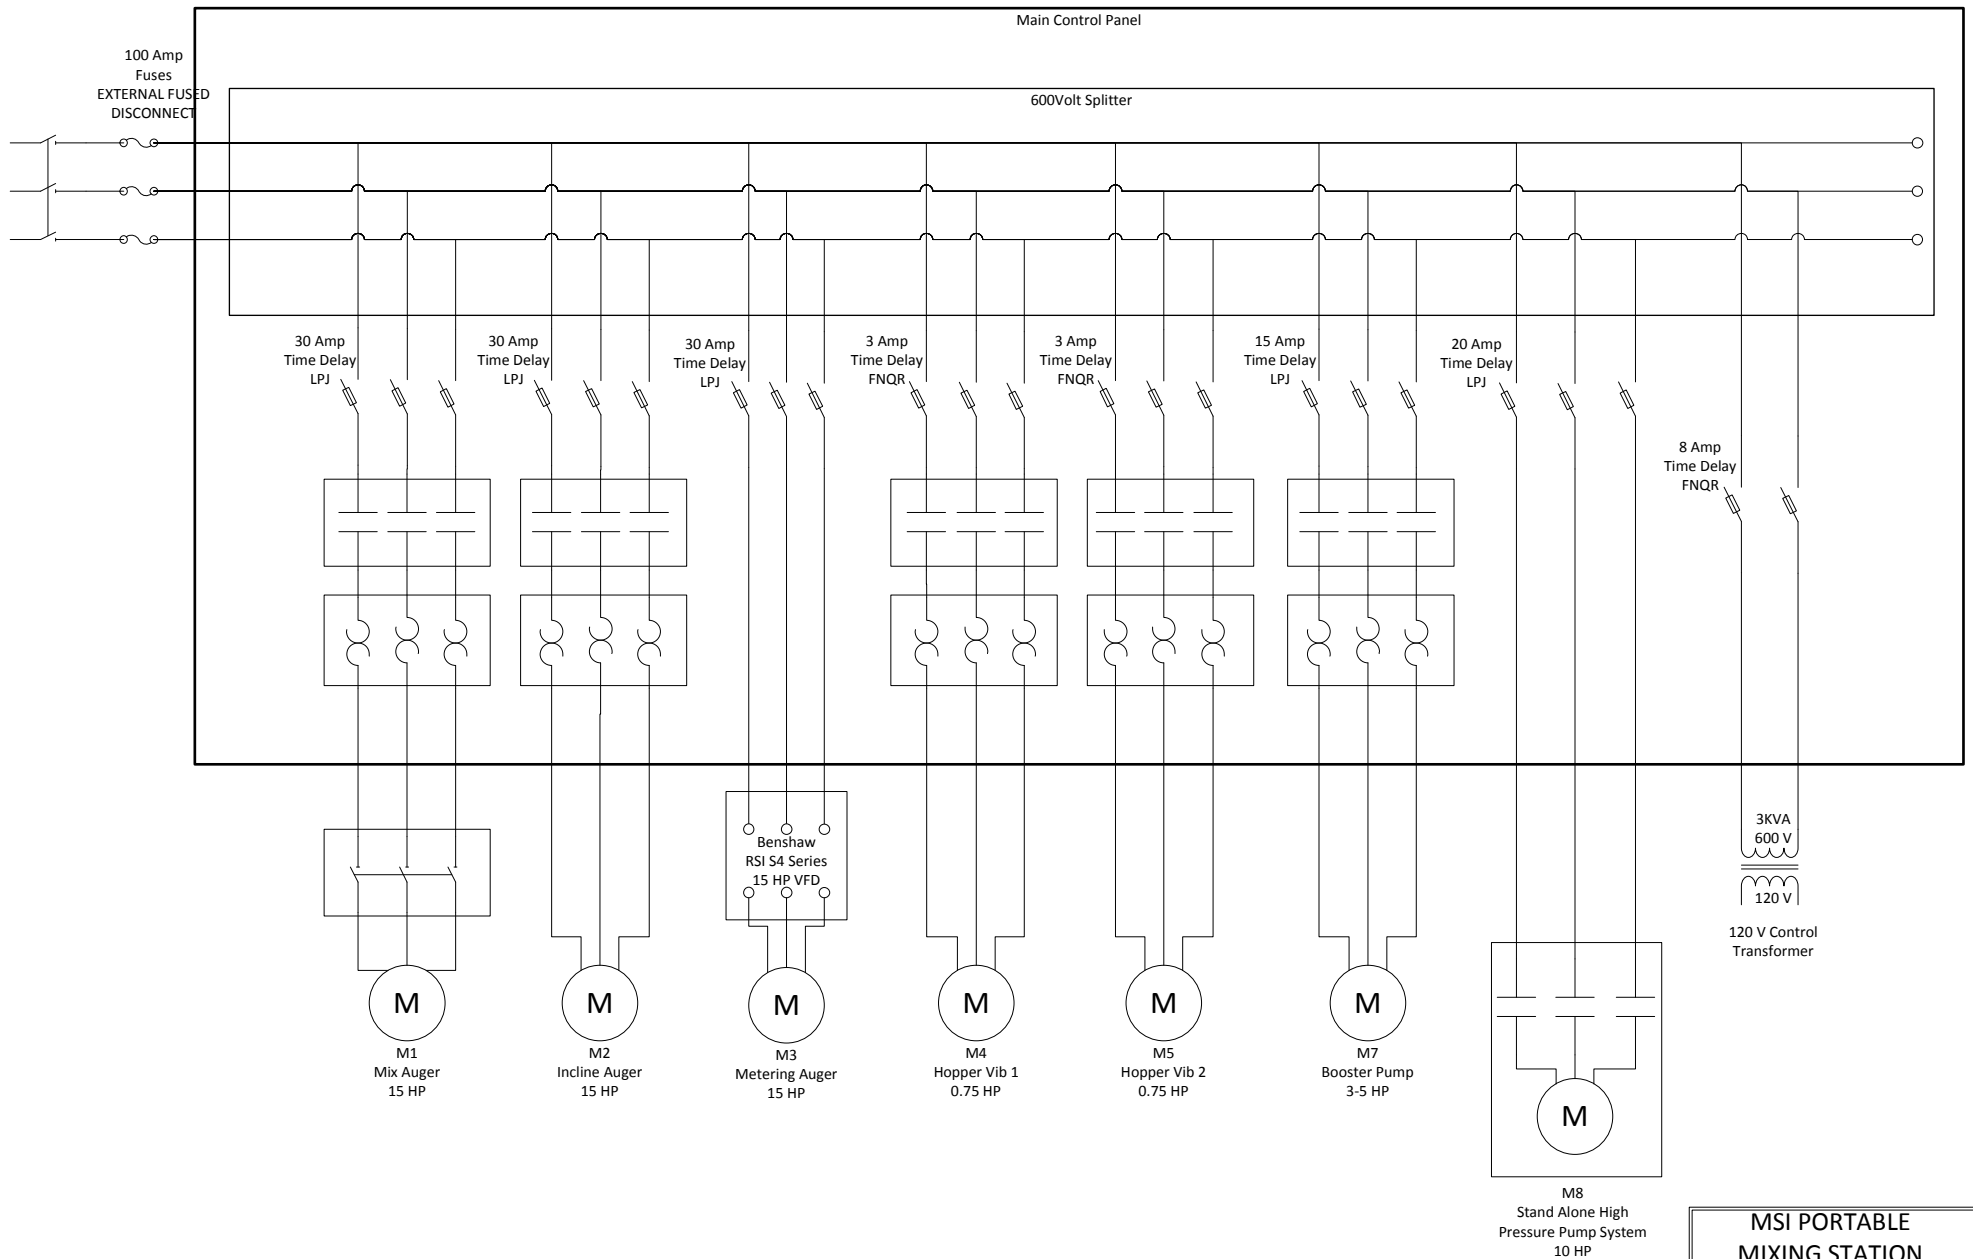

MSI PORTABLE MIX STATION PARTS CATALOGUE

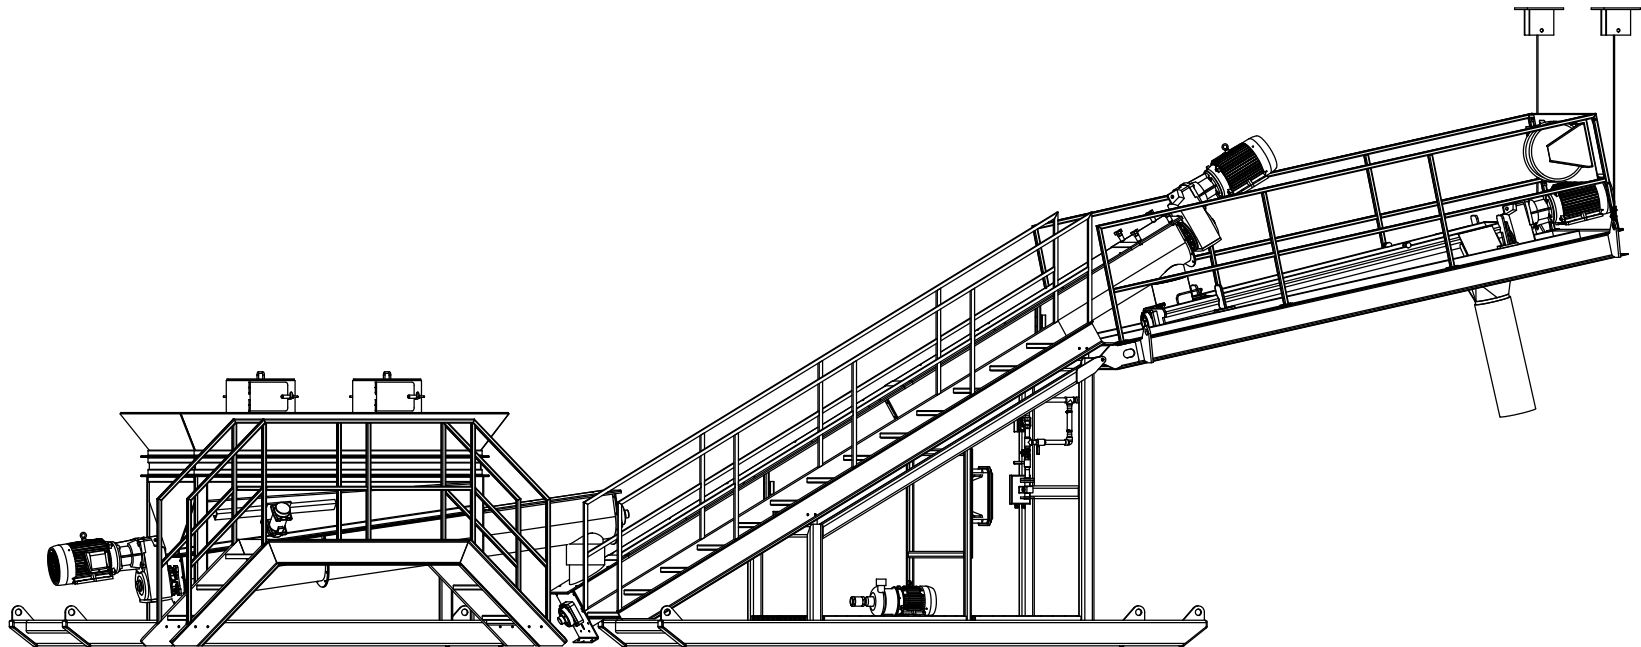

MSI PORTABLE MIX STATION PARTS CATALOGUE

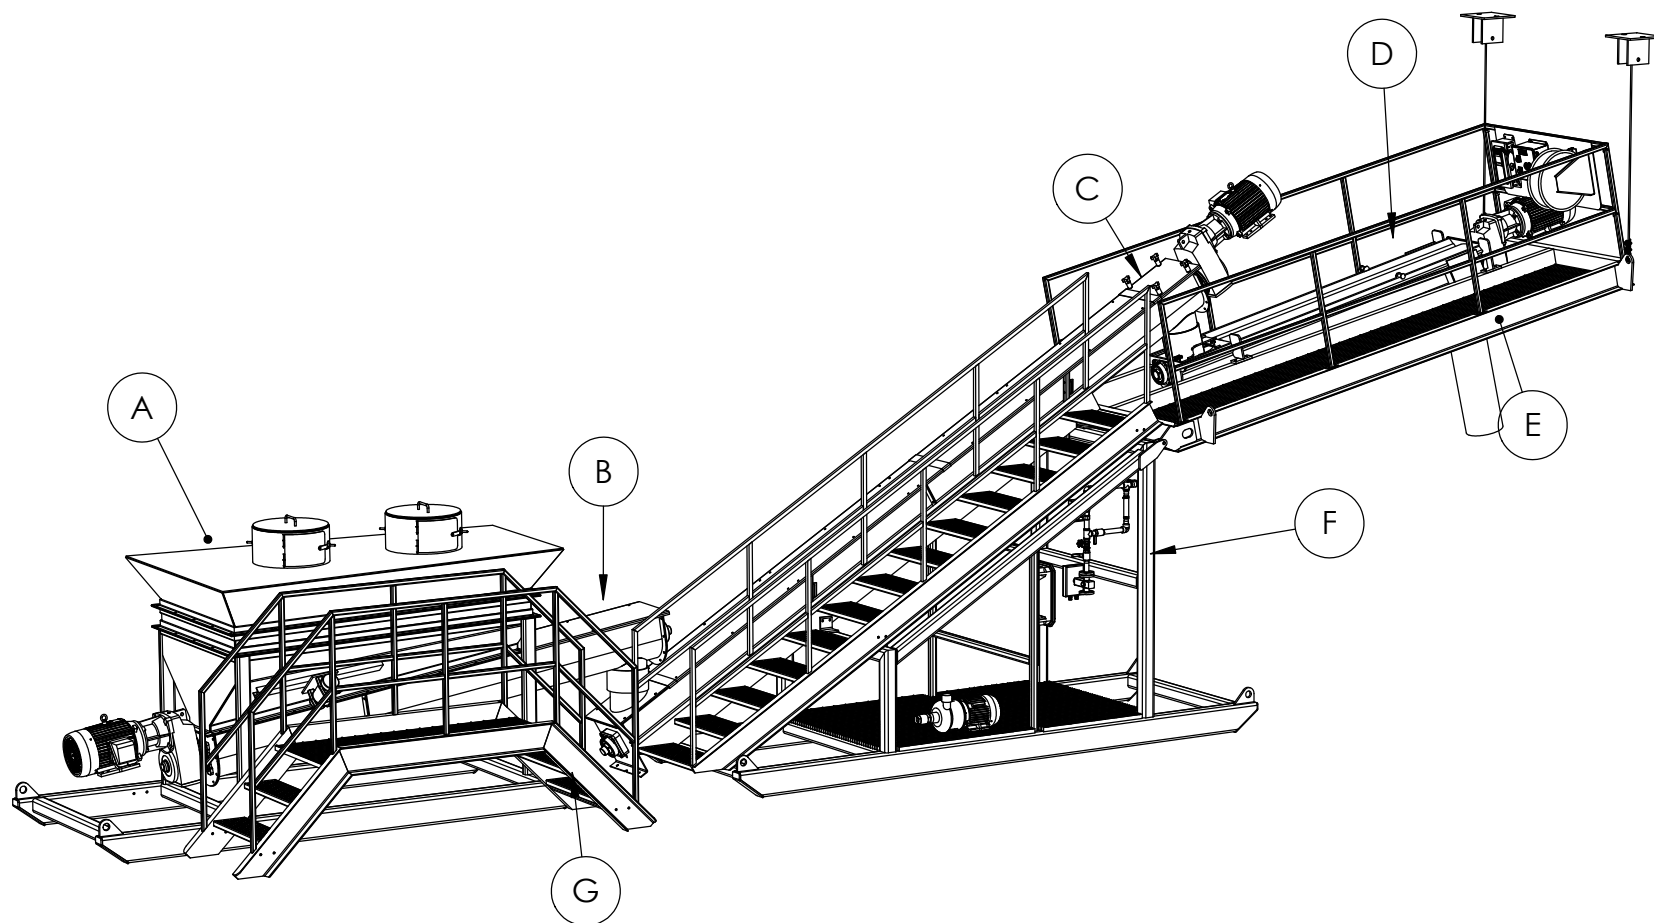


Parts Ordering Contact Multicrete

Winnipeg: (P) 204-262-5900 (F) 204-262-5909

PORTABLE MIX STATION



SECTION	DESCRIPTION	PG
A	HOPPER	A1
B	MEETERING AUGER	B1
C	INCLINE AUGER	C1
D	MIX AUGER	D1
E	SUSPENDED PLATFORM	E1
F	INCLINE SKID	F1
G	WATER / ACCELERATOR	G1
	SPARE PARTS	

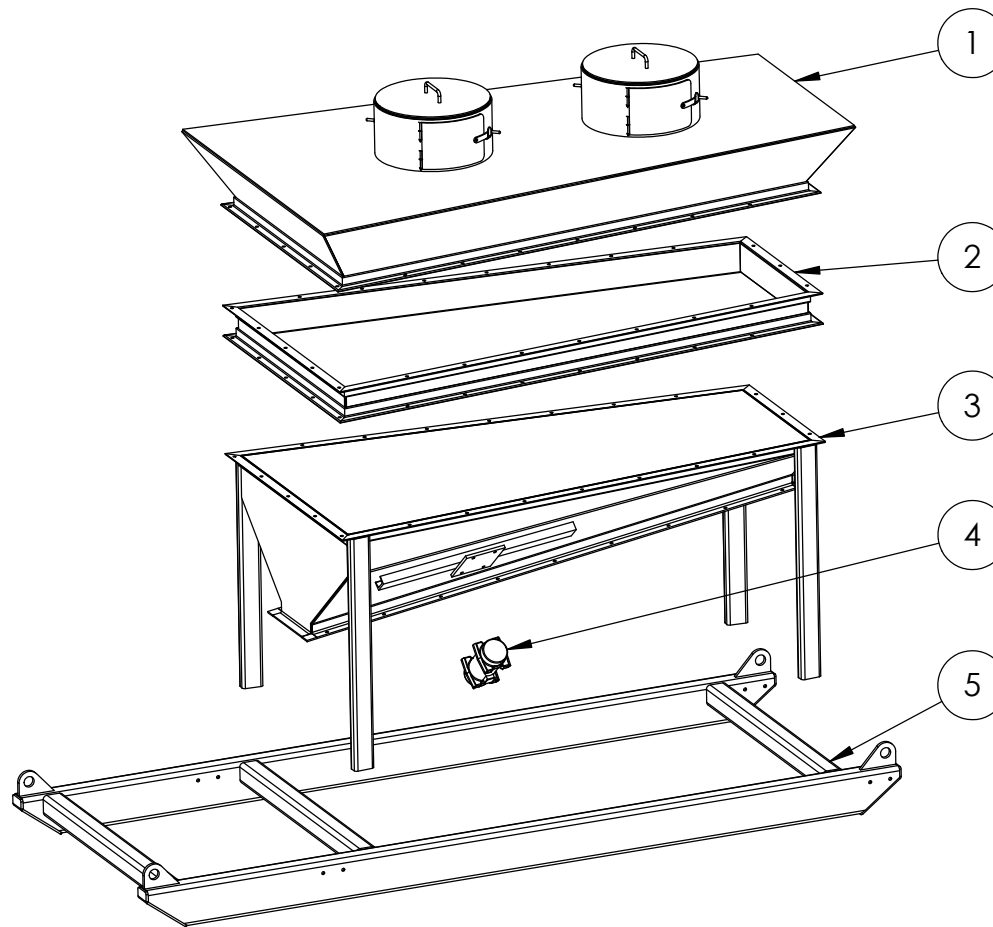

(A) INFEED HOPPER/SKID


MSI PORTABLE MIX STATION

ITEM CODE: **A**

EQUIPMENT NAME: **INFEEED HOPPER (A)**

EQUIPMENT NUMBER: -

Item N°	Part number	Part Description	Quantity required	Notes
1	5015-00053	Hopper lid	1	
2	5015-00054	Hopper extension	1	
3	5015-00055	Hopper	1	
4	1400-62102	2P-200-3-575 VIBCO VIBRATOR	2	
5	5015-00056	Skid	1	

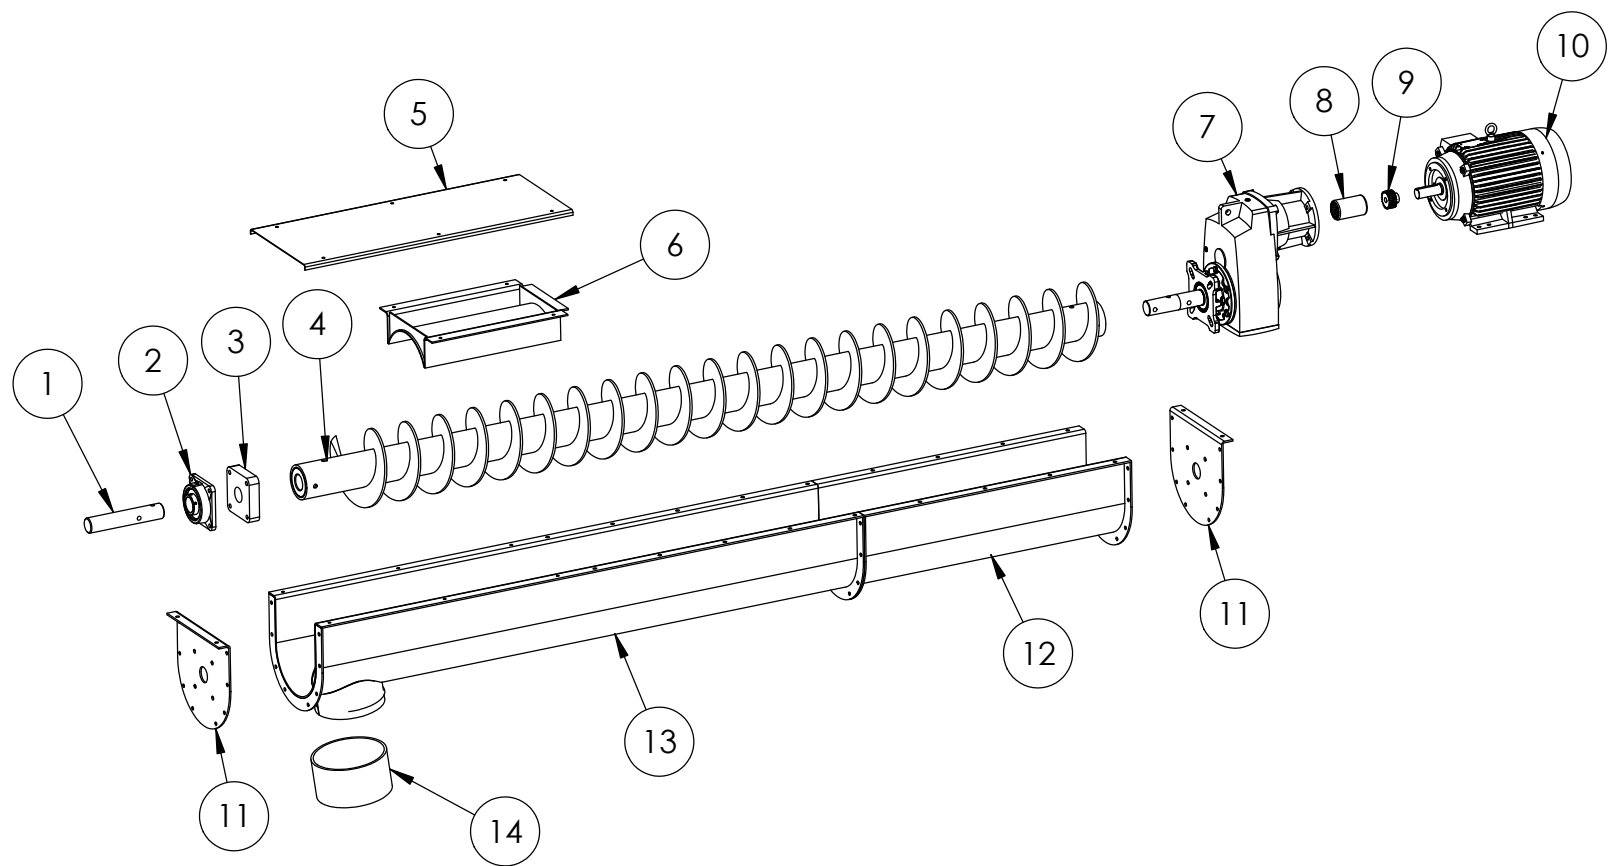

(B) METERING AUGER


MSI PORTABLE MIX STATION

ITEM CODE: **B**

EQUIPMENT NAME: **METERING AUGER (B)**

EQUIPMENT NUMBER: -

Item N°	Part number	Part Description	Quantity required	Notes
1	5015-30044	STUB SHAFT 13" LONG 2 7/16 DIA HOLES AT 1.5 & 4.5" MS S1007	1	
2	5012-10003	Flange Block Bearing 2 7/16	1	
3	5012-10002	2 7/16" Waste Pack Seal	1	
3 - A	5012-10034	Waste paking material	1	Item not shown - ordered by the pound
4	5015-30065	Metering auger assy with bushings	1	
5	5015-10003	Trough cover	1	
6	5015-10047	Trough shroud	1	
7	5012-00020	NORD SK5282SCP/VL 250TC 43 RPM 20 HP 2 7/16"	1	
8	5012-00034	NORD COUPLING SLEEVE FOR 250TC	1	
9	5012-00026	NORD SK 5282SCP/VL and 4282 COUPLING HALF 52683390	1	
10	5010-00001	15 HP-35-18T-254TC 575V Elec Motor	1	
11	5015-10048	End plate	2	
12	5015-10049	Trough with flanges	1	
13	5015-10050	Trough with flanges with discharge spout	1	
14	1309-04810	Discharge sock 10"ID	per foot	

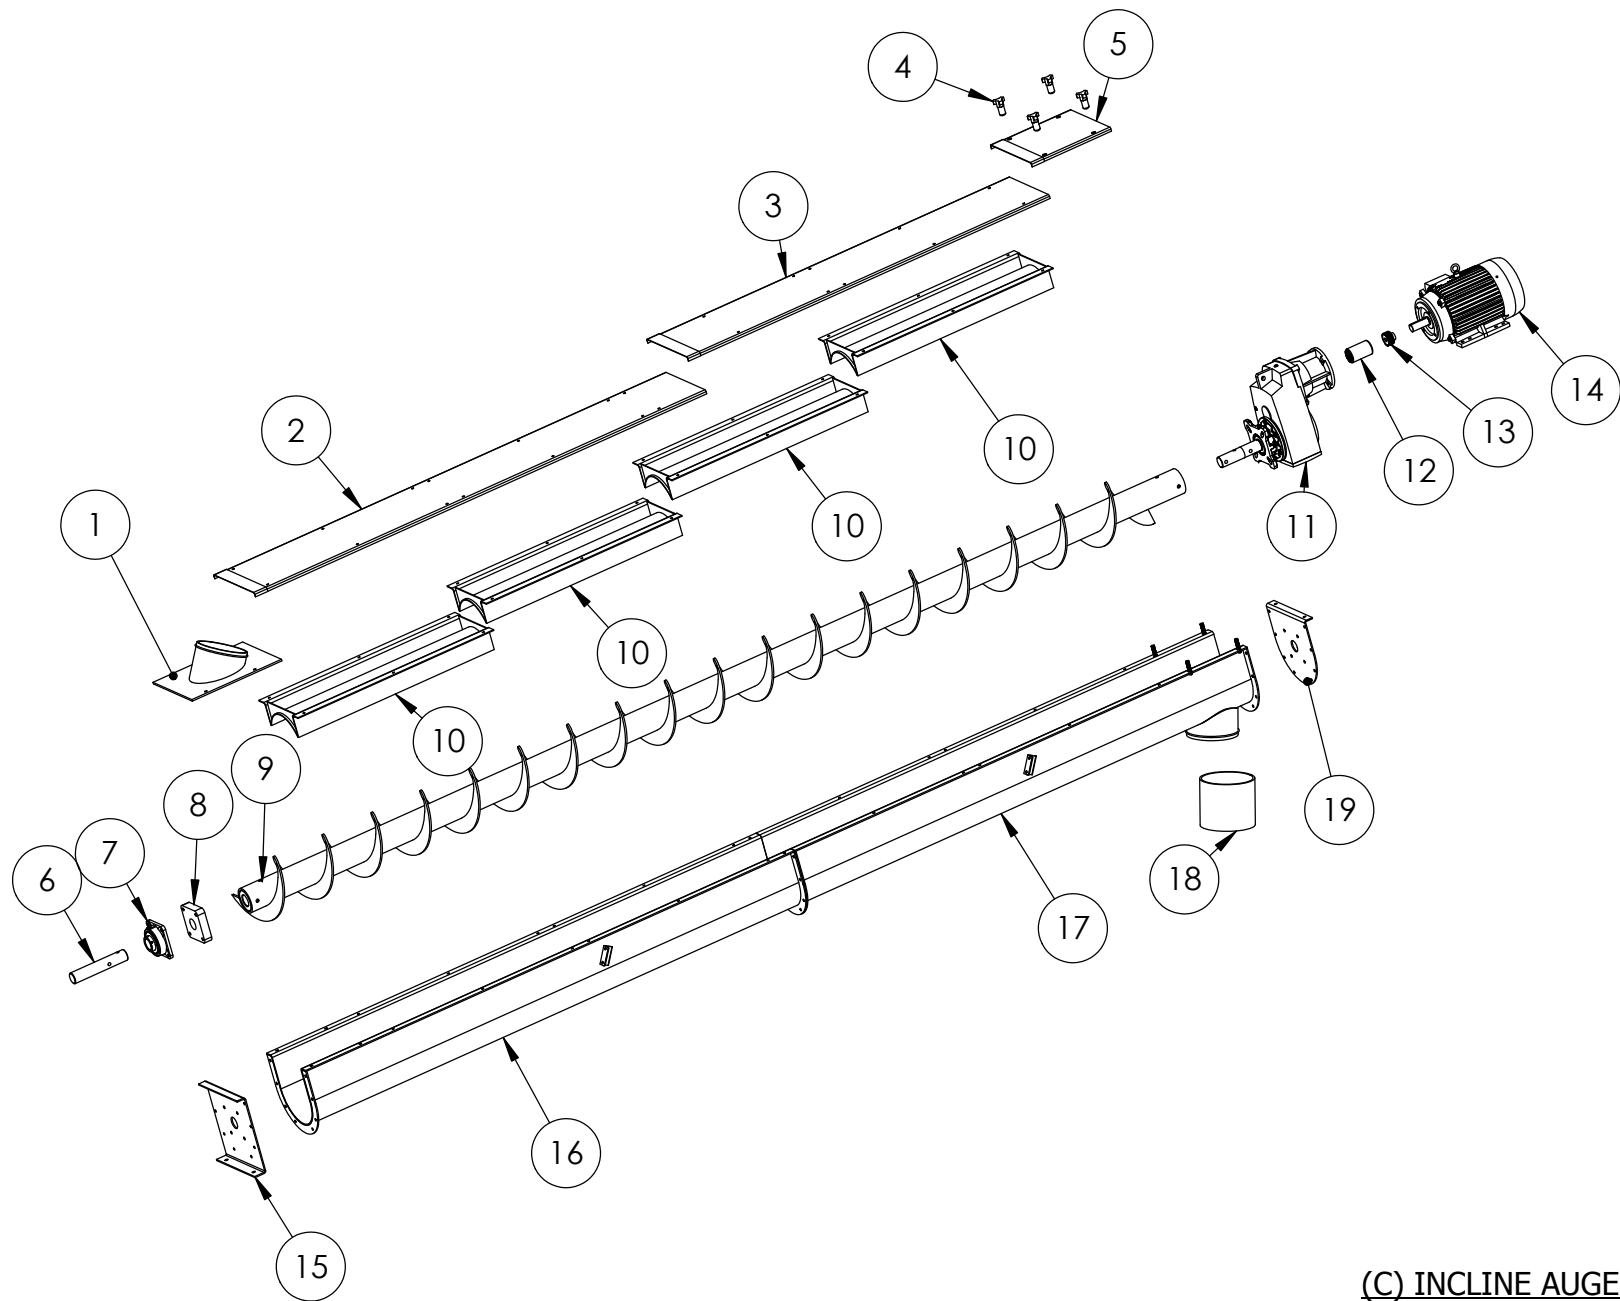

(C) INCLINE AUGER


MSI PORTABLE MIX STATION

ITEM CODE: **C**

EQUIPMENT NAME: **INCLINE AUGER (C)**

EQUIPMENT NUMBER: -

Item N°	Part number	Part Description	Quantity required	Notes
1	5015-10053	Inlet Assembly	1	
2	5015-10054	12" Trough cover	1	12" Trough cover custom 108 ¾" Long - Mix Station
3	5015-10055	12" Trough cover	1	12" Trough cover custom 86 ¾" Long - Mix Station
4	1365-40145	5/8" DWYIDAG NUT WITH MSI MACHINED BOTTOM	1	
5	5015-10056	Trough cover	1	
6	5015-30044	STUB SHAFT 13" LONG 2 7/16 DIA HOLES AT 1.5 & 4.5" MS S1007	1	
7	5012-10003	Flange Block Bearing 2 7/16	1	
8	5012-10002	2 7/16" Waste Pack Seal	1	
8 -A	5012-10034	Waste paking material	1	Item not shown - ordered by the pound
9	5015-30066	Incline auger assy with bushings	1	
10	5015-10014	Trough shroud	4	
11	5012-00049	NORD SK5282SCP/VL-210TC 2 7/16" SHAFT 25:1 70 RPM	1	
12	5012-00034	NORD COUPLING SLEEVE FOR 250TC	1	
13	5012-00026	NORD SK 5282SCP/VL and 4282 COUPLING HALF 52683390	1	
14	5010-00001	15 HP-35-18T-254TC 575V Elec Motor	1	
15	5015-10006	End Plate	1	
16	5015-10051	Trough with flanges - 10' Long	1	Brackets supplied loose
17	5015-10052	Trough with flanges and discharge - 9½' Long	1	
18	1309-04810	Discharge sock	Per foot	
19	5015-10048	End plate	1	

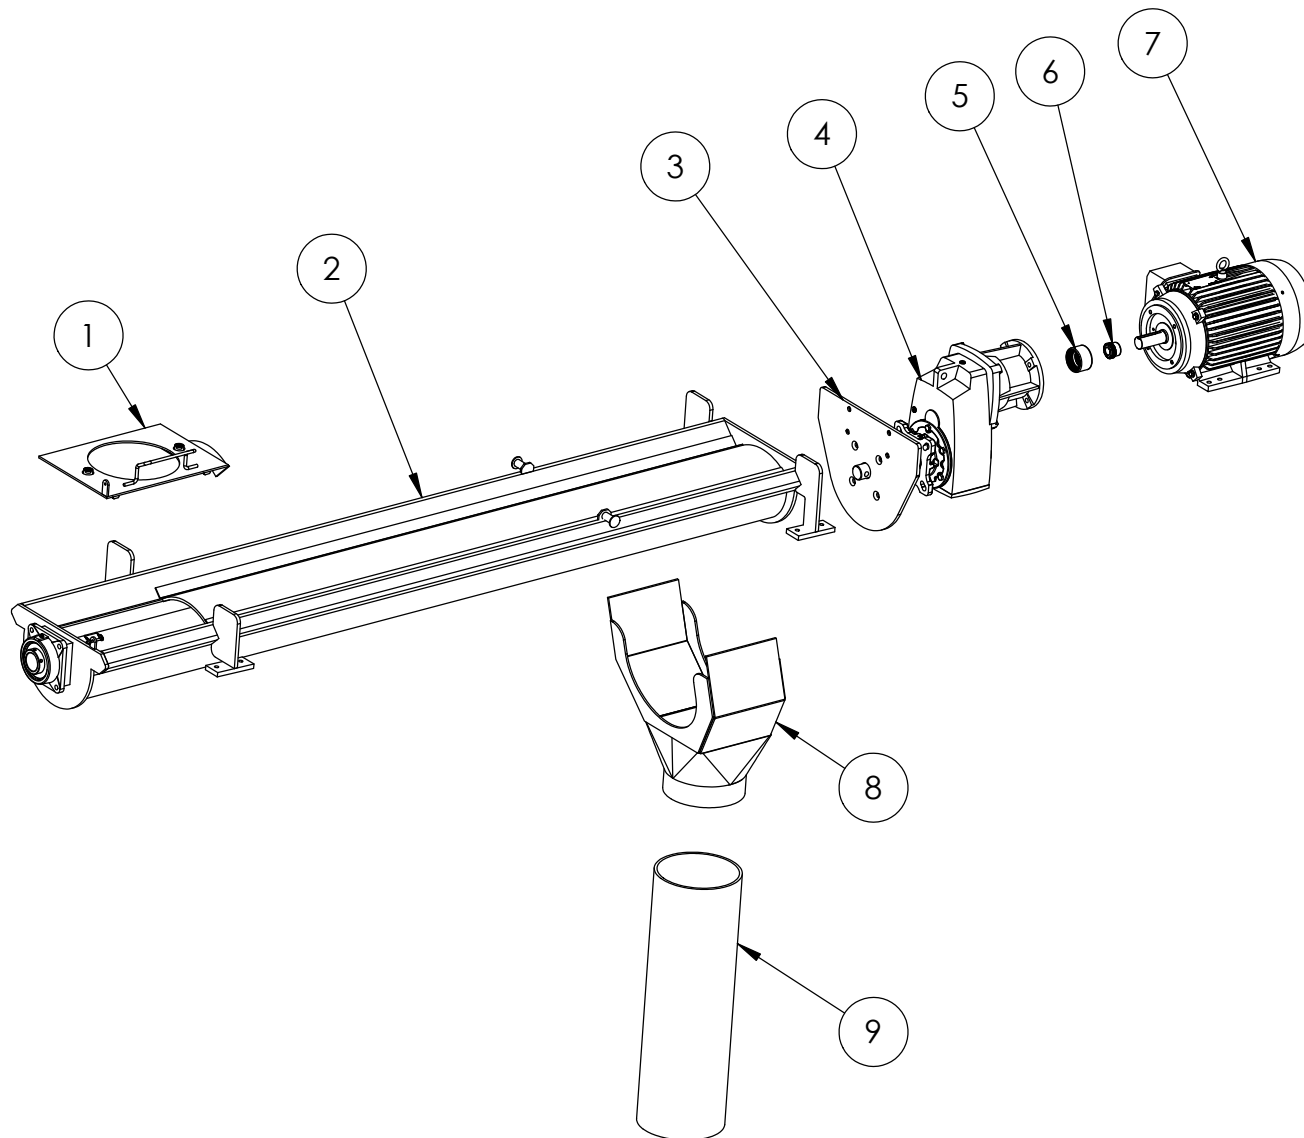

(D) MIX AUGER

MSI PORTABLE MIX STATION


ITEM CODE: **D**

EQUIPMENT NAME: **MIX AUGER (D)**

EQUIPMENT NUMBER: -


Item N°	Part number	Part Description	Quantity required	Notes
1	5015-10056	Mix auger inlet cover with spray bars	1	
2	5015-00052	Mix auger assembly with mounts	1	See catalogue
3	5015-10057	Gearbox mount plate	1	
4	5012-00024	NORD SK 4282SCP/VL 250TC 2" SHAFT 289 RPM	1	
5	5012-00026	NORD SK 5282SCP/VL and 4282 COUPLING HALF 52683390	1	
6	5012-00034	NORD COUPLING SLEEVE FOR 250TC	1	
7	5010-00001	15 HP-35-18T-254TC 575V Elec Motor	1	
8	5015-10058	Mix auger discharge assy	1	
9	1309-04810	Sleeve sock- 10" ID	Per foot	

MIX AUGER ASSEMBLY - 9 X 96

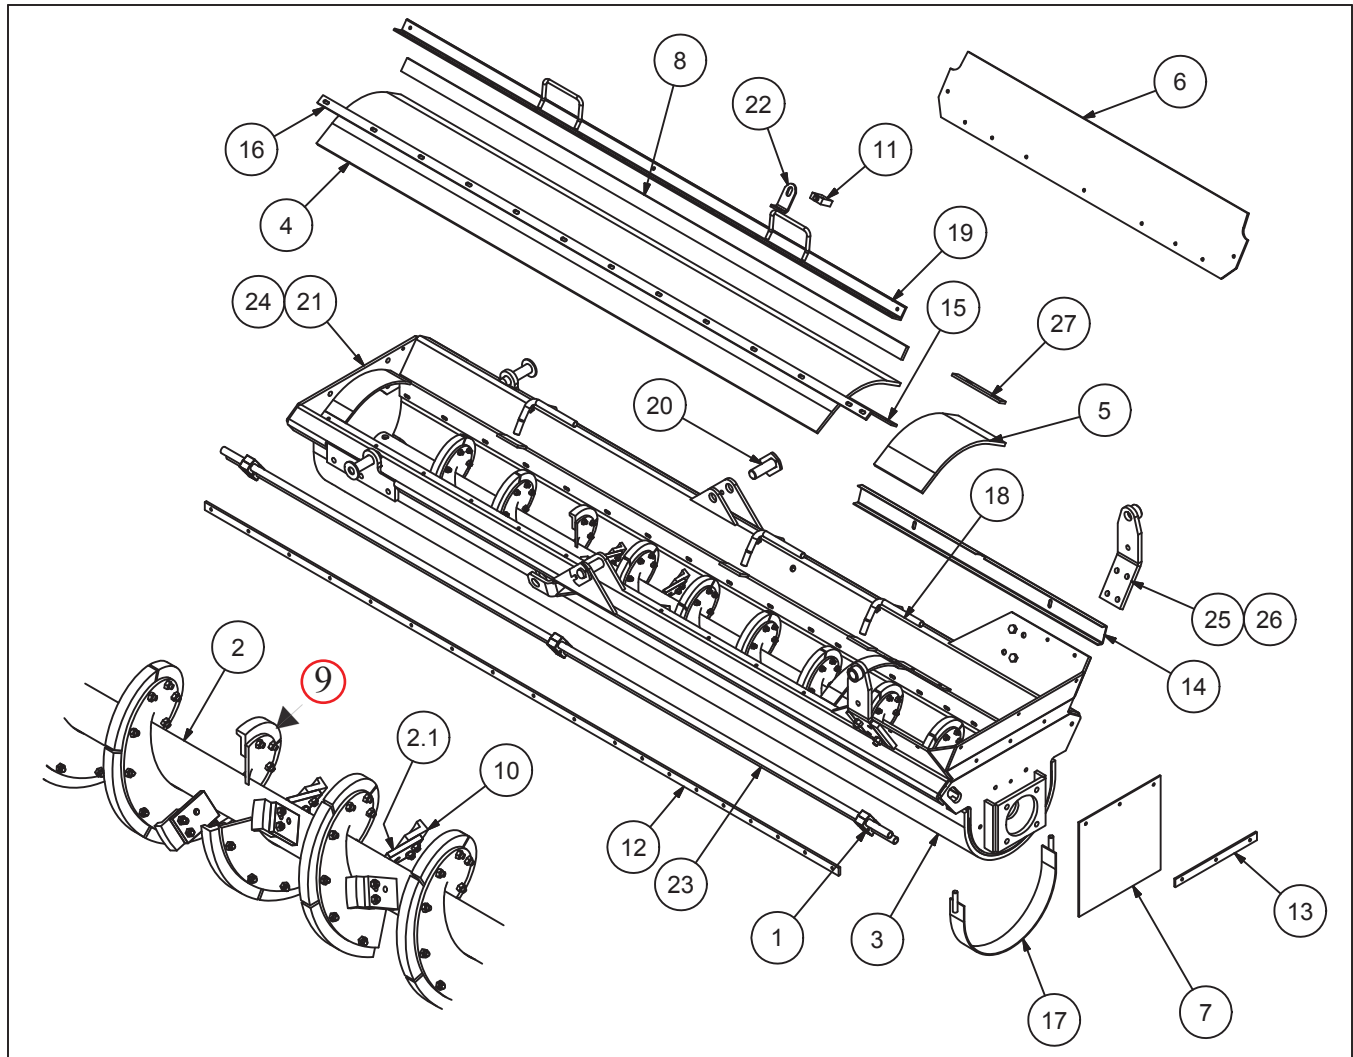


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	193312	3	Tube Clamp, 3/4	14	RE0588	1	Hose Carrier
2	AG001C	1	Auger Weldment, 9 x 96	15	RE0896	1	Clamp Plate, 73-3/8"
2.1	RE0511	6	Stir Tab, 3"	16	RE0904	1	Clamp Plate, 80 3/4"
3	AGRR001	1	Auger Mat, 9 x 96	17	REI535	1	Retaining Strap, 9"
4	AGRR001C	1	Cover Mat, 9 x 96	18	REI702	3	Latch
5	AGRR001G	1	Top Cover Extension, 9"	19	REI704	1	Clamp Angle Weldment, 73 1/2"
6	AGRR005	1	Auger Trough Extension	20	REI716	2	Pin, Auger Lift
7	AGRR007	1	Bearing Splash Guard	21	REJ330	1	Frame Weldment, 9 x 96
8	AGRR009	1	Latch Seal 96"	22	REJ331	1	Bracket, Sensor Target
9	1400-51001	51	Wear Plate, 9" Auger	23	REJ332	2	Hydraulic Line, 98 1/4"
10	1400-51003	6	Wear Plate, Stir Tab	24	REJ334	1	Frame Weldment, 9 x 96, 400
11	EL003	1	Auger Cover Switch	25	REJ368	2	Hinge Plate Weldment
12	RE0228	2	Clamp Plate, 93 3/8"	26	REJ369	2	Hinge Plate Weldment, 400
13	RE0333	1	Clamp Plate, 12"	27	REJ479	1	Clamp Plate, 7"


AUGER SEAL ASSEMBLY, 2" BEARING

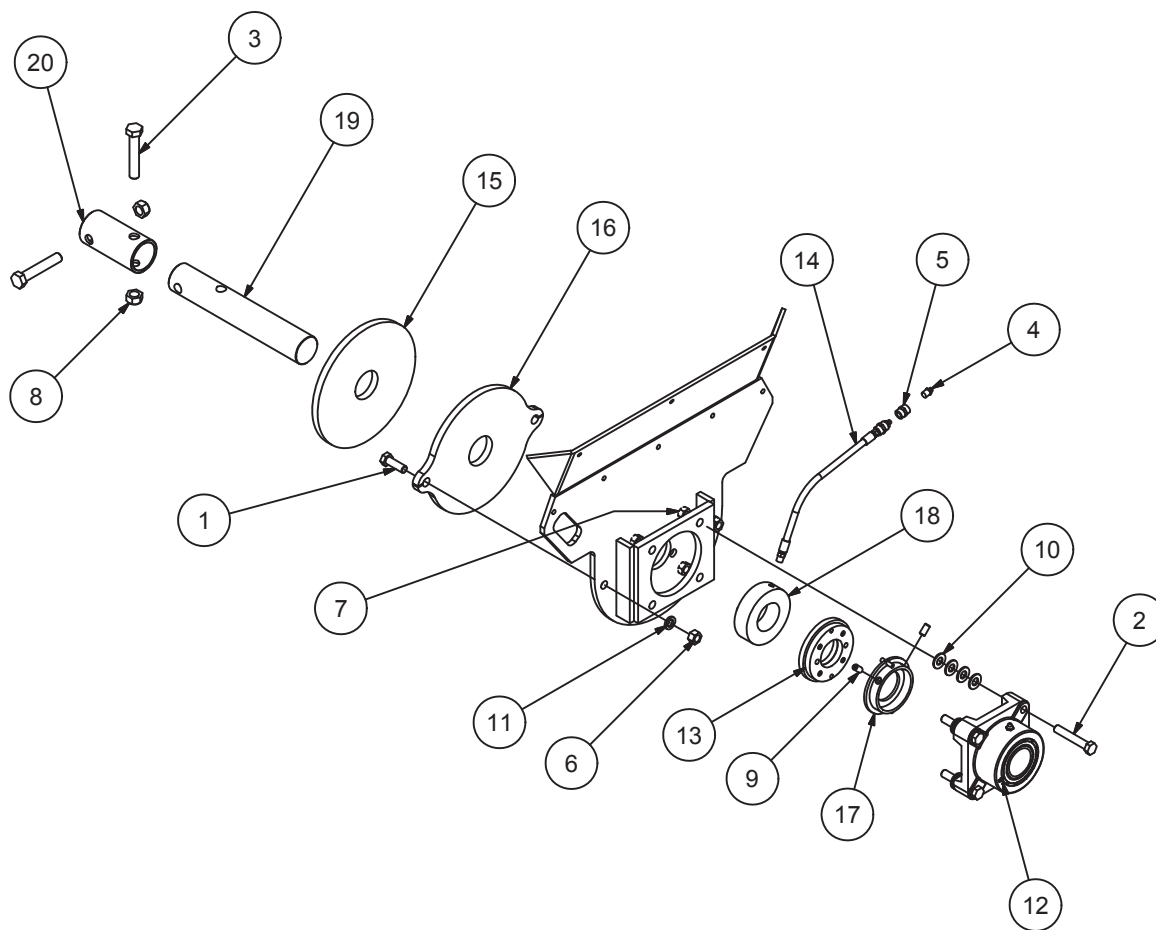


Itm	Part No.	Qty	Description	Itm	Part No.	Qty	Description
1	126115	2	Capscrew, 1/2 x 1 1/2 NC	11	389108	2	Washer, 1/2 Lock
2	126121	4	Capscrew, 1/2 x 3 NC	12	AGBR003 5012-10021	1	Bearing, Link-belt EFRB22432H
3	126171	2	Capscrew, 5/8 x 3 1/2 NC	13	1400-51007	1	Seal
4	189001	1	Grease Nipple, 1/8-NPT Straight	14	AGSL003D	1	Grease Hose, 12"
5	196198	1	Coupling, 02 FNPT-02 FNPT	15	1400-51004	1	AR Weld-on Plate
6	226008	2	Nut, 1/2 Hex NC	16	1400-51005	1	AR Bolt-on Plate
7	233108	4	Nut, 1/2 Stover NC	17	AGSL003B	1	Lower Seal Pressure Plate
8	233111	2	Nut, 5/8 Stover NC	18	AGSL003C	1	Lower Seal Roll Assembly
9	338077	2	Set Screw 3/8 NC x 3/4	19	1400-51006	1	2" Auger Idler Shaft
10	387308	AS REQ'D	Washer, 1/2" SAE	20	AGS001	1	Sleeve, Mix Auger Repair

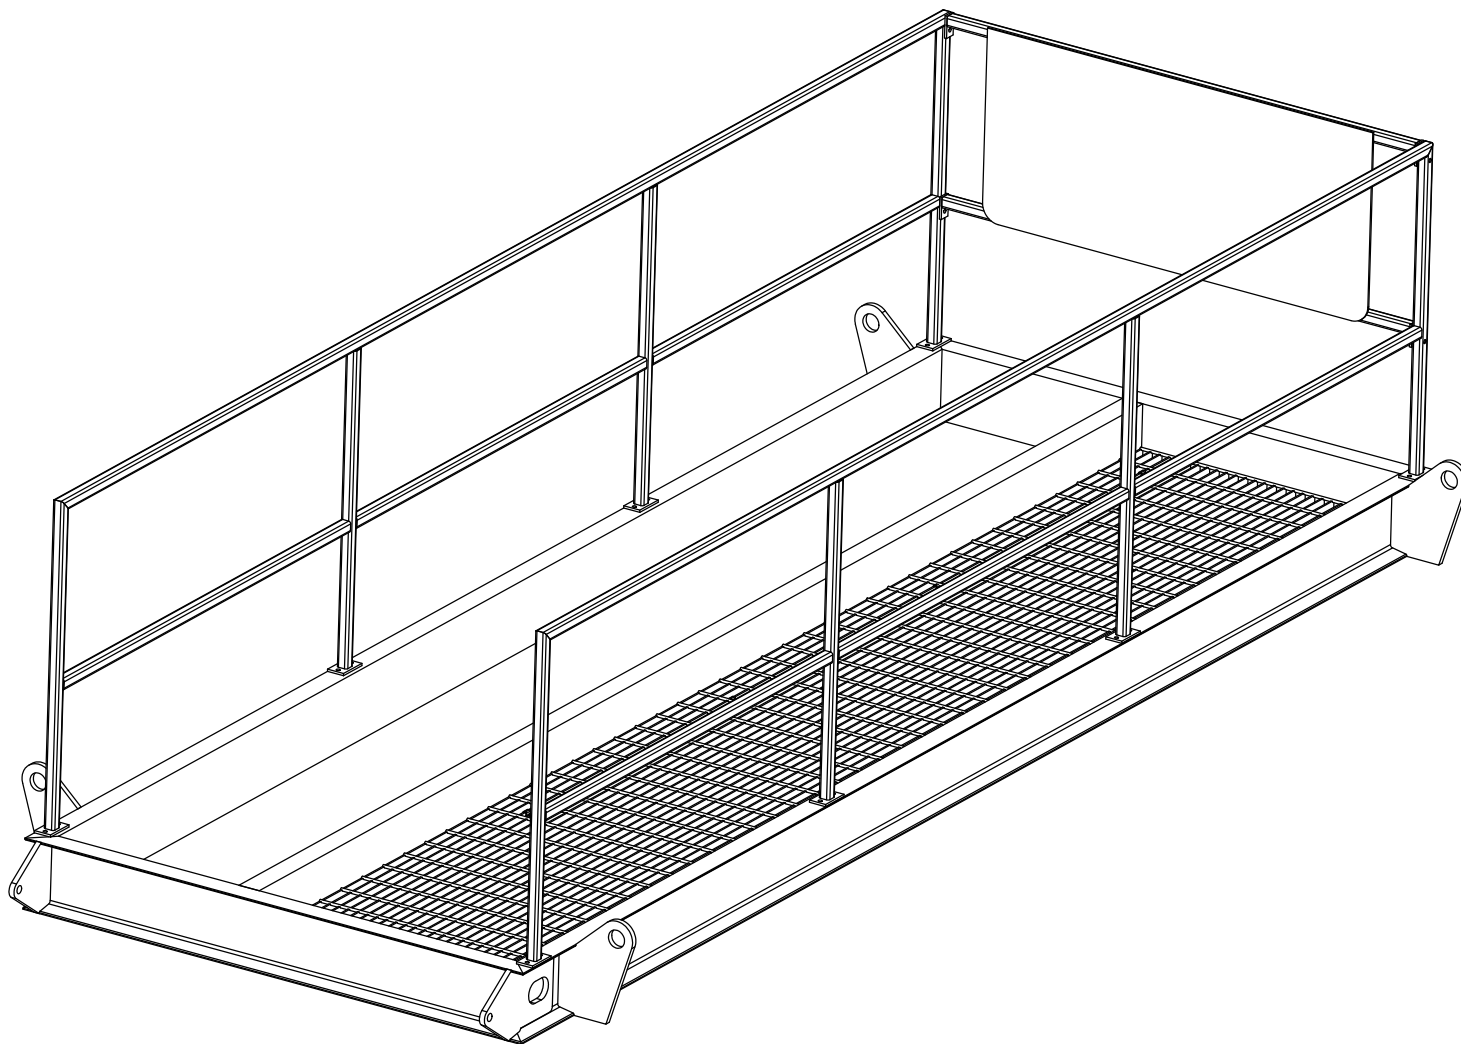

E SUSPENDED PLATFORM

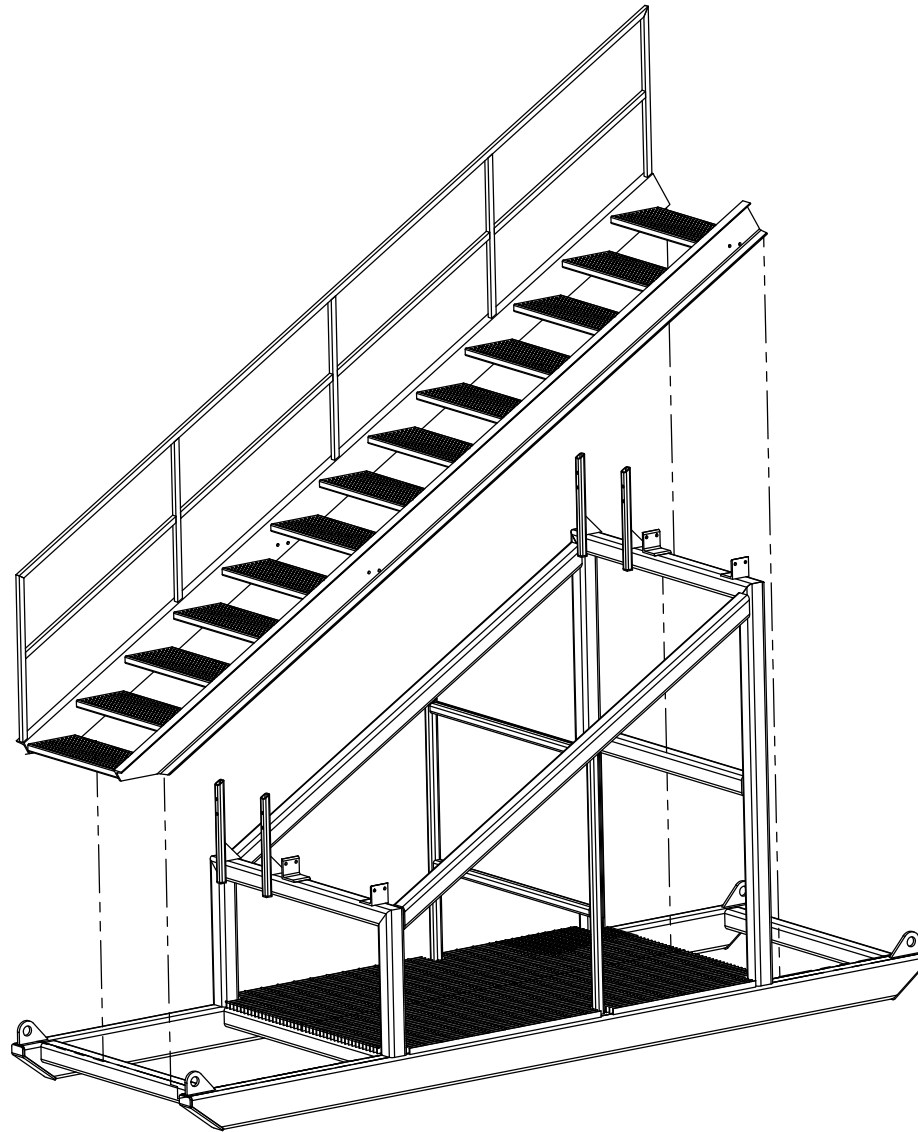


(F) INCLINE SKID

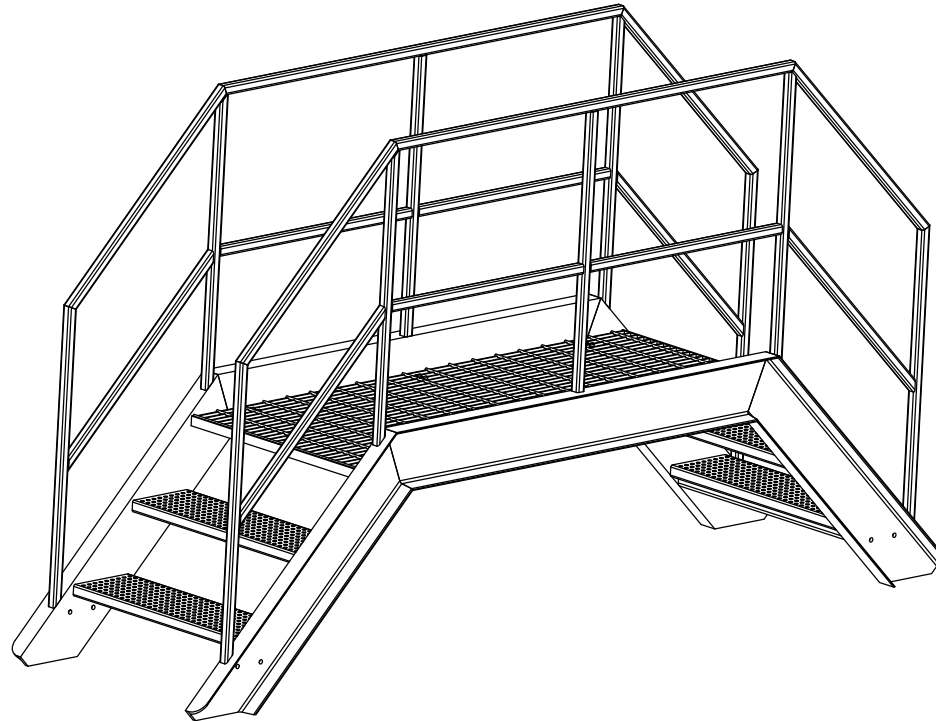


(G) HOPPER STAIRS

Multicrete Systems Water Schematic

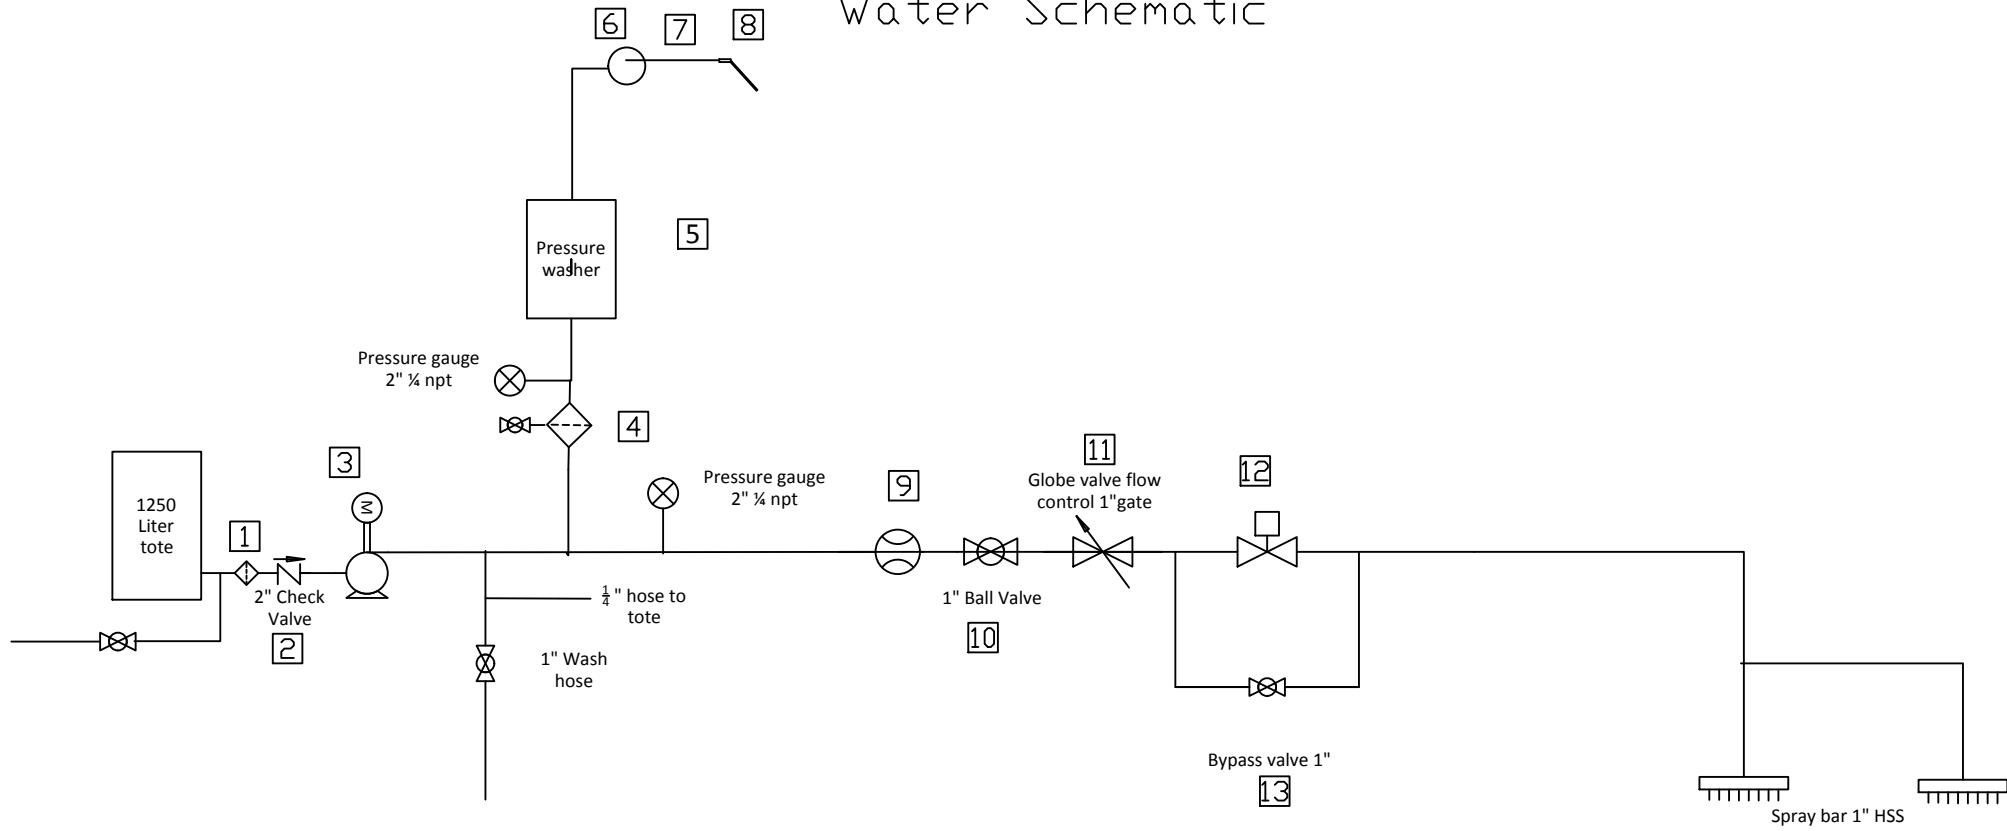

Admix System (Optional)

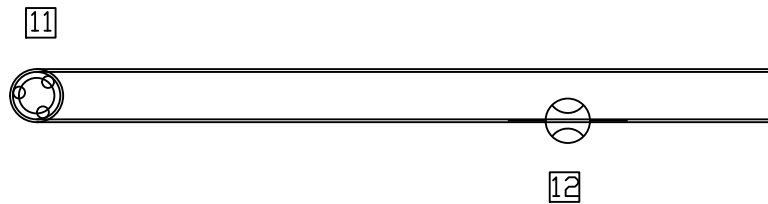

WATER SYSTEM

ITEM CODE: G

EQUIPMENT NAME: **WATER SYSTEM (G)**

EQUIPMENT NUMBER: -

ITEM No.	CATALOGUE NUMBER	QTY	DESCRIPTION	NOTES
1	5013-00006	1	HART BASCKET STRAINER BT1250150032	
1A	5013-00008	1	200 MESH 74 MICRON FILTER ELEMENT	NOT SHOWN
2	5013-10081	1	2" CHECK VALVE	
3 - A	5013-10056	1	90220030 FAC-300-K ENTRIFUGAL PUMP END 2"X2" 3HP	
3 - B	5010-00007	1	3 HP 575V MOTOR USED WITH FAC-300-K	
3 - C	5013-10083	1	3 HP 575V AND FAC-300-K PUMP ASSEMBLY COMPLETE	
4	5013-00007	1	3/4" QUICK CLEAN FILTER HOUSING NO ELEMENT INCLUDED	
4 - A	5013-00008	1	200 MESH 74 MICRON FILTER ELEMENT	NOT SHOWN
5	1309-00016	1	PRESSURE WASHER	SEE HOTSEY MANUAL / 600V
6	5013-10060	1	HOSE REEL	
7	5013-10017	1	50' HOSE ASSEMBLY	
8	5013-10034	1	PRESSURE WASHER WAND ASSEMBLY	
9	5011-00061	1	KROHNE 1" ENVIROMAG 2000 FLOW SENSOR	
10	5013-10082	1	1" BALL VALVE	
11	1400-41215	1	1" GLOBE VALVE	
12	5013-10057	1	1" BALL VALVE WITH 120V ELEC ACTUATOR COMPLETE	
13	5013-10082	1	1" BALL VALVE	

SPARE PARTS

CATALOGUE NUMBER	QTY	DESCRIPTION	LEAD TIME
MEETERING AUGER			
5015-30044	1	STUB SHAFT 13" LONG 2 7/16 DIA HOLES AT 1.5 &4.5" MS S1007	2 - 3 WEEKS
5015-30065	1	PORTABLE MIX STATION MEETERING AUGER WITH BUSHINGS	3 - 4 WEEKS
5012-10003	1	FLANGE BLOCK BEARING 2 7/16	2 - 3 WEEKS
5012-10002	1	2 7/16" WASTE PACK SEAL	2 - 3 WEEKS
5012-10034	1	WASTE PACKING MATERIAL - BY THE POUND	2 - 3 WEEKS
5012-00026	1	NORD SK 5282SCP/VL and 4282 COUPLING HALF 52683390	2 - 3 WEEKS
5010-00001	1	15 HP-35-18T-254TC 575V Elec Motor	2 - 3 WEEKS
1309-04810	PER FOOT	10" DISCHARGE SOCK	2 - 3 WEEKS
INCLINE AUGER			
5015-30044	1	STUB SHAFT 13" LONG 2 7/16 DIA HOLES AT 1.5 &4.5" MS S1007	2 - 3 WEEKS
5015-30066	1	PORTABLE MIX STATION INCLINE AUGER WITH BUSHINGS	3 - 4 WEEKS
5012-10003	1	FLANGE BLOCK BEARING 2 7/16	2 - 3 WEEKS
5012-10002	1	2 7/16" WASTE PACK SEAL	2 - 3 WEEKS
5012-10034	1	WASTE PACKING MATERIAL - BY THE POUND	2 - 3 WEEKS
5012-00034	1	NORD COUPLING SLEEVE FOR 250TC	2 - 3 WEEKS
5010-00001	1	15 HP-35-18T-254TC 575V Elec Motor	2 - 3 WEEKS
5012-00026	1	NORD SK 5282SCP/VL and 4282 COUPLING HALF 52683390	2 - 3 WEEKS
1309-04810	PER FOOT	10" DISCHARGE SOCK	2 - 3 WEEKS
MIX AUGER			
1400-51021	1	AUGER 9" X 116" WITH WEAR PLATES ALSO INCL AGS001 & AGWP005	3 - 4 WEEKS
1309-04810	PER FOOT	DISCHARGE SOCK - MAX 4' LENGTH	2 - 3 WEEKS
5012-00026	1	NORD SK 5282SCP/VL and 4282 COUPLING HALF 52683390	2 - 3 WEEKS
5012-00034	1	NORD COUPLING SLEEVE FOR 250TC	2 - 3 WEEKS
1400-51001	51	WEAR PLATE	2 - 3 WEEKS
1400-51003	6	WEAR PLATE FOR STIR TAB	2 - 3 WEEKS
338077	2	SET SCREW	2 - 3 WEEKS
387308	AS REQ	WASHER	2 - 3 WEEKS
5012-10021	1	BEARING	2 - 3 WEEKS
1400-51007	1	SEAL ASSEMBLY INCL. AGSL003A,B,C	2 - 3 WEEKS
1400-51005	1	AR BOLT ON PLATE	2 - 3 WEEKS
5010-00001	1	15 HP-35-18T-254TC 575V Elec Motor	2 - 3 WEEKS
1309-04810	PER FOOT	10" DISCHARGE SOCK	2 - 3 WEEKS
1309-04812	PER FOOT	12" DISCHARGE SOCK	2 - 3 WEEKS
1400-51006	1	2" AUGER IDLER SHAFT	2 - 3 WEEKS
WATER SYSTEM			
5013-00008	1	BASKET STRAINER - ELEMENT	2 - 3 WEEKS
5013-10040	1	PUMP WET END	2 - 3 WEEKS
5010-00007	1	3 HP 575V MOTOR USED WITH FAC-300-K	2 - 3 WEEKS
5013-00007	1	HIGHT TEMP QUICK CLEAN FILTER	2 - 3 WEEKS
5013-00008	1	200 MESH 74 MICRON FILTER ELEMENT	2 - 3 WEEKS
5013-10034	1	PRESSURE WASHER WAND ASSEMBLY	2 - 3 WEEKS
5011-00061	1	FLOW METER	2 - 3 WEEKS
5013-10011	1	PUMP ELEMENT (FOR OPTIONAL ADD MIX PUMP)	2 - 3 WEEKS

VACON

DRIVEN BY DRIVES



X4 AC DRIVE

USER'S MANUAL

Need Help?

This manual answers most installation and startup questions that may arise. However, if you have any problems, please let your first call be to us.

Vacon, Inc.
Chambersburg, PA 17202

Normal business hours:
(North America)

8:00 AM to 5:00 PM, Eastern time
+1 877-Vacon06
(+1 877-822-6606)


After-hours support is also available

 and Vacon, Inc. are trademarks of Vacon Plc, a member of Vacon Group.

All other product names are trademarks of their respective companies.

Copyright 2009, Vacon, Incorporated. All rights reserved.


Summary of X4 Parameters

 = cannot change in Run
Bold type = Level 1 parameter

No.	Parameter Name	Options	Default	User Setting	See Page
001	Model Number	Model Dependent	Read-only		60
002	Software Rev	0.00-99.99	Read-only		60
003	Rated Current	0.0-200.0 A	Read-only		60
005	Serial No. 1	0-65535	Read-only		60
006	Serial No. 2	0-65535	Read-only		60
010	Last Fault	text string	Read-only		60
025	4th Fault	text string	Read-only		60
040	3rd Fault	text string	Read-only		60
055	2nd Fault	text string	Read-only		60
070	1st Fault	text string	Read-only		60
102	Output Freq	0.0-400.0 Hz	Read-only		61
103	Output Voltage	0-600 V	Read-only		61
104	Output Current	0.0-200.0 A	Read-only		61
105	Drive Load	-200.0-200.0%	Read-only		61
106	Load Torque	-200.0-200.0%	Read-only		61
107	Drive Temp	-20.0-200.0 °C	Read-only		61
108	Total Run Time	0.0-6553.5 h	Read-only		61
109	Power On Hours	0-65535 h	Read-only		61
110	Stator Freq	0.0-400.0 Hz	Read-only		61
111	DC Bus Voltage	0 - 1000 Vdc	Read-only		61
115	Drive Power Out	0.0-200.0%	Read-only		61
201	Input Mode	text string	Local Only		62
202	Rev Enable	text string	Forward		62
203	Stop Key Remote	text string	Coast		62
204	Ref Select	text string	Vin1		63
205	Vin1 Config	text string	0-10V		63
206	Vin1 Offset	0.0% to 100.0 %	0.00%		63
207	Vin1 Span	10.0% to 200.0%	100.00%		64
208	Cin Config	text string	0-20mA 50		64
209	Cin Offset	0.0% to 100.0%	0.0%		64
210	Cin Span	10.0% to 200.0%	100.0%		64
211	Vin2 Config	text string	0-10V		64
212	Vin2 Offset	0.0% to 100.0 %	0.00%		64
213	Vin2 Span	10.0% to 200.0%	100.00%		64
214	Vin1 Filter Time	0 to 1000 ms	20 ms		64
215	Cin Filter Time	0 to 1000 ms	20 ms		64
216	Vin2 Filter Time	0 to 1000 ms	20 ms		65
217	Trim Ref Enable	text string	Disabled		65
218	Trim % Factor	-100.0 - 100.0%	0.0%		65
222	Ref Loss Config	text string	No Fault		65
301	Min Frequency	0.0 - Max Freq.	0.0 Hz		65
302	Max Frequency	0.0 - 400.0 Hz	60.0 Hz		65
303	Preset Freq 1	Min Freq-Max Freq	5.0 Hz		65
304	Preset Freq 2	Min Freq-Max Freq	10.0 Hz		65
305	Preset Freq 3	Min Freq-Max Freq	20.0 Hz		65
306	Preset Freq 4	Min Freq-Max Freq	30.0 Hz		65
307	Preset Freq 5	Min Freq-Max Freq	40.0 Hz		65
308	Preset Freq 6	Min Freq-Max Freq	50.0 Hz		65

(cont'd)


Note that all parameters can be addressed by adding 40000 to the parameter number. For example, parameter 201 (Input Mode) can be addressed by Modbus address 40201.

 = cannot change in Run
Bold type = Level 1 parameter

No.	Parameter Name	Options	Default	User Setting	See Page
309	Cut-Off Freq	0.0-5.0 Hz	0.0 Hz		66
401	Ramp Select	text string	ART-DI		66
402	Accel Time 1	0.1-3200.0 sec	5.0 sec		66
403	Decel Time 1	0.1-3200.0 sec	5.0 sec		66
404	Accel Time 2	0.1-3200.0 sec	3.0 sec		67
405	Decel Time 2	0.1-3200.0 sec	3.0 sec		67
406	DC Inject Config	text string	DC at Stop		67
407	DC Inject Time	0.0-5.0 sec	0.2 sec		67
408	DC Inject Level	0.0% to 100.0%	50.0%		67
409	DC Inj Freq	0.0 to 20.0 Hz	0.0 Hz		68
410	DB Config	text string	Internal		68
414	S Ramp Rounding	1 - 100%	25%		68
490	App Macro	text string	Factory		50
491	Seq Appl	text string	Disabled		50
492	SIO Visible	text string	No		50
501	V/Hz Select	text string	Linear Fixed		69
502	Voltage Boost	0.0-50%	1.0%		69
503	V/Hz Knee Freq	25.0-400.0 Hz	60.0 Hz		69
504	Skip Freq Band	0.2-20.0 Hz	0.2 Hz		70
505	Skip Freq 1	Min Freq-Max Freq	0.0 Hz		70
506	Skip Freq 2	Min Freq-Max Freq	0.0 Hz		70
507	Skip Freq 3	Min Freq-Max Freq	0.0 Hz		70
508	Skip Freq 4	Min Freq-Max Freq	0.0 Hz		70
509	Rated Mtr Volt	100V-690V	Model Dependent		70
510	Rated Mtr FLA	50% - 200% of ND Rating	ND Rating		70
511	Rated Mtr RPM	0-24000 rpm	1750 rpm		70
512	Midpoint Freq	0.0 Hz-V/Hz Knee Freq	60.0 Hz		70
513	Midpoint Volt	0.0-100.0%	100.0%		70
514	Motor RS	0.0-655.35 Ohms	Model Dependent		70
515	Power Factor	0.50-1.00	0.80		70
516	Slip Comp Enable	text string	No		71
517	Single Phase	text string	No		71
519	Find Mtr Data	Not active / Motor RS	Not active		71
520	Filter FStator	1 - 100 ms	8 ms		71
521	Start Field En	Yes / No	No		71
522	Filter Time Slip	10 - 1000 ms	100 ms		71
523	Id Percent	0 - 200%	Read-only		72
524	Iq Percent	0 - 200%	Read-only		72
525	Power Fail Config	text string	CTS No Msg		72
526	UV Ride-Thru En	text string	w/ LVT		72
600	Current Lim Sel	text string	Fixed Lvl's		73
601	Cur Lim Mtr Fwd	5%-150%	120%		73
602	Cur Lim Mtr Rev	5%-150%	120%		73
603	Cur Lim Reg Fwd	5%-150%	80%		73
604	Cur Lim Reg Rev	5%-150%	80%		73
605	Cur Lim Freq	0-400 Hz	3.0 Hz		73
606	Ramp Time CL	0.1-3200.0 sec	1.0 sec		73
607	Cur Limit Minimum	0 - 50%	10%		73
608	Restart Number	text string	0		74
609	Restart Delay	0-60 sec	60 sec		74

(cont'd)


Note that all parameters can be addressed by adding 40000 to the parameter number. For example, parameter 201 (Input Mode) can be addressed by Modbus address 40201.

 = cannot change in Run
Bold type = Level 1 parameter

No.	Parameter Name	Options	Default	User Setting	See Page
610	Timed OL Select	text string	Std Ind 60s		74
613	Max Regen Ramp	100 - 1000%	300%		74
614	Stability Gain	0 - 10	Model Dependent		75
615	Stability Rate	0 - 1000	Model Dependent		75
700	Vmet Config	text string	Freq Out		75
701	Vmet Span	0.0-200.0%	100.0%		75
702	Imet Config	text string	Drive Load		75
703	Imet Span	0.0-200.0%	100.0%		75
704	Imet Offset	0.0-90.0-%	0.0%		75
705	Relay 1 Select	text string	Drv Fault		76
706	Relay 2 Select	text string	Drive Run		76
707	DO1 Select	text string	Drv Ready		76
708	DO2 Select	text string	At Speed		76
720	Active Logic	text string	Active High		76
721	D1 Configure	text string	Preset 1		77
722	D2 Configure	text string	Preset 2		77
723	D3 Configure	text string	Preset 3		77
724	D4 Configure	text string	Alt Ramp		77
725	D5 Configure	text string	Fault Reset		77
726	MOL Polarity	text string	NO Operate		77
727	MOL Configure	text string	MOL		77
801	Program Number	0-9999	0		77
802	Start Options	text string	LS Lockout		78
803	PWM Frequency	0.6-16.0 kHz	3.0 kHz		78
804	Display Mode	text string	Std Disply		78
805	Display Units	alphanumeric	RPM:1		79
809	Display Scale	1-65535	1		79
810	Language	text string	English		79
811	Access Code	0-9999	0		79
812	Freq Ref Output	text string	6FS		79
813	Speed Ratio	0.0-200.0%	100.0%		79
814	Display Status	text string	Drive load		80
816	Fly Catch Mode	Sweep FWD / REV / F/R	Sweep FWD		80
850	PI Configure	text string	No PI		80
851	PI Feedback	text string	Vin1		80
852	PI Prop Gain	0-2000	0		80
853	PI Int Gain	0-10000	0		81
854	PI Feed Gain	0-2000	1000		81
855	PI Error 1	0.00-100.00%	Read-only		81
856	PI Error 2	0.00-100.00%	Read-only		81
857	PI High Corr	0.00-100.00%	100.00%		81
858	PI Low Corr	0.00-100.00%	0.00%		81
900	SIO Protocol	text string	RTU N81		81
901	SIO Baud Rate	text string	9600		81
902	Comm Drop #	1-247	1		81
903	SIO Timer	0.0-60.0 sec	1.0 sec		81
904	SIO Cntl Word	text string	0x0000		82
905	Ext Ref Freq1	Min-Max Freq	0.0 Hz		82
906	Ext Ref Freq2	Min-Max Freq	0.0 Hz		82

(cont'd)

Note that all parameters can be addressed by adding 40000 to the parameter number. For example, parameter 201 (Input Mode) can be addressed by Modbus address 40201.

 = cannot change in Run
Bold type = Level 1 parameter

No.	Parameter Name	Options	Default	User Setting	See Page
908	Status Word	text string	Read-only		82
909	DI Status	text string	Read-only		82
910	Vin1 Status	0.00-100.00%	Read-only		83
911	Cin Status	0.00-100.00%	Read-only		83
912	Vin2 Status	0.00-100.00%	Read-only		83
913	Output Status	text string	Read-only		83
914	Vmet Status	0.00-100.00%	Read-only		83
915	Imet Status	0.00-100.00%	Read-only		83
916	Infrared Baud	n/a	9600		83
931	Seq Cntl 1	n/a	00000000000		83
932	Seq Cntl 2	n/a	00000000000		83
933	Seq Cntl 3	n/a	00000000000		83
934	Seq Cntl 4	n/a	00000000000		83
935	Seq Cntl 5	n/a	00000000000		83
936	Seq Cntl 6	n/a	00000000000		83
937	Seq Cntl 7	n/a	00000000000		83
938	Seq Cntl 8	n/a	00000000000		83
939	Seq Cntl 9	n/a	00000000000		83
951	Seq Count 1	0-65535	0		84
952	Seq Count 2	0-65535	0		84
953	Seq Count 3	0-65535	0		84
954	Seq Count 4	0-65535	0		84
955	Seq Count 5	0-65535	0		84
956	Seq Count 6	0-65535	0		84
957	Seq Count 7	0-65535	0		84
958	Seq Count 8	0-65535	0		84
959	Seq Count 9	0-65535	0		84

Note that all parameters can be addressed by adding 40000 to the parameter number. For example, parameter 201 (Input Mode) can be addressed by Modbus address 40201.

CONTENTS

Summary of X4 Parameters	iii
Chapter 1: Introduction	9
1.1 Product Overview	9
1.2 Overview of This Manual	9
1.3 User's Manual Publication History	10
Chapter 2: Technical Characteristics	11
2.1 Interpreting Model Numbers	11
2.2 Power and Current Ratings	12
2.3 Environmental Specifications	13
2.4 Electrical Specifications	14
2.5 Control Features Specifications	15
2.6 Dimensions and Weights	16
Chapter 3: Receiving and Installation	20
3.1 Preliminary Inspection	20
3.2 Installation Precautions	20
3.3 Dissipation Requirements	21
3.4 Cover Assembly and Torque Specifications	22
3.5 Serial Number Label	23
3.6 Conduit Usage	23
3.7 Condensation	23
Chapter 4: Connections	24
4.1 Introduction	25
4.2 General Wiring Information	25
4.2.1 Wiring Practices	25
4.2.2 Considerations for Power Wiring	25
4.2.3 Considerations for Control Wiring	26
4.3 Input Line Requirements	27
4.3.1 Line Voltage	27
4.3.2 Line Capacity	27
4.3.3 Phase Imbalance	27
4.3.4 Single-phase Operation	28
4.3.5 Ground Fault Circuit Interrupters	28
4.3.6 Motor Lead Length	28
4.3.7 Using Output Contactors	28
4.4 Terminals Found on the X4 Power Board	29
4.4.1 Description of the Terminals	29
4.4.2 Typical Power Connections	30
4.5 Dynamic Braking	32
4.6 Terminals Found on the X4 Control Board	34
4.6.1 Description of the Control Terminals	34
4.6.2 Typical Connection Diagrams for Digital Inputs	37

4.6.3	Typical Connection Diagrams for Analog Inputs	38
4.6.4	Typical Connection Diagrams for Analog Outputs	38
4.6.5	Modbus Connection Diagram	39
4.7	Reducing Current Surges and Voltage Transients	39
Chapter 5:	Keypad Operation and Programming	40
5.1	Introduction	40
5.2	Keypad Operation	41
5.3	LCD Displays	43
5.3.1	Control	43
5.3.2	X4 Keypad Status and Warning Messages	43
5.3.3	Rights	45
5.3.4	Other Data	45
5.4	Keypad Display Window	45
5.5	Programming	46
5.5.1	Accessing Parameters	46
5.5.2	Changing the Display Scroll Rate	46
5.5.3	Programming Procedure	46
5.5.4	Restoring Factory Settings	47
5.5.5	Viewing Parameters That Have Changed	47
5.5.6	Using Macro Mode	47
5.6	Measuring Stator Resistance (RS Measurement)	47
5.6.1	Activating Automatic RS Measurement Using the Keypad	47
5.6.2	Activating Automatic RS Measurement via Serial Link (Modbus)	48
Chapter 6:	Using Macro Mode and Getting a Quick Start	49
6.1	Entering Macro Mode	49
6.2	Description of Parameters Used in Macro Mode	50
6.3	Macro Mode Applications and Included Parameters	52
6.4	Quick Start	58
Chapter 7:	X4 Parameters	59
7.1	Introduction	59
7.2	Level 1 Parameters	59
7.3	Description of Parameters	60
7.4	Using the X4 Program Sequencer	84
7.4.1	Enabling the X4 Program Sequencer	84
7.4.2	Controlling the X4 Program Sequencer	84
7.4.3	Sequencer State Configuration Overview	86
7.4.4	Sequencer Status Indicators	89
7.4.5	Sample Sequencer Program	89
	Blank Worksheet to Remove and Copy	91
Chapter 8:	Troubleshooting and Fault Codes	93
Chapter 9:	X4 AC Drive Options	98
Appendix A:	Parameter 201 Options	99

Chapter 1: Introduction

1.1 Product Overview

Although the X4 AC drive is small in size, it is big on performance. It is an economical yet powerful solution for many industrial applications. It features remote communications capability (using Modbus® protocol), a keypad for easy configuration, and standard NEMA 4X / IP66 and NEMA 12 / IP55 enclosures that eliminate the need for mounting in a separate enclosure.

The X4 product family includes a wide variety of models to suit almost any input voltage requirement. An ‘x’ in the following table indicates what models are currently available. Refer to [“Chapter 2: Technical Characteristics” on page 11](#) for help in interpreting model numbers.

Horsepower	Input Voltage			
	115 Vac 1 Phase	230 Vac 3 Phase	460 Vac 3 Phase	575 Vac 3 Phase
1	x	x	x	x
2		x	x	x
3		x	x	x
5		x	x	x
7.5		x	x	x
10		x	x	x
15		x	x	x
20		x	x	x
25		x	x	x
30		x	x	x
40			x	x
50			x	x
60			x	x
75			x	x
100			x	x
125			x	x
150			x	x
200			x	x

1.2 Overview of This Manual

This manual contains specifications, receiving and installation instructions, configuration, description of operation, and troubleshooting procedures for X4 AC drive devices.

For experienced users, a [Quick Start section](#) begins on page 58. A [summary of parameters](#) begins on page iii of this manual.


1.3 User's Manual Publication History

Date	Form Number	Nature of Change
June 2005	1428	First release
March 2006	1428B	Minor corrections throughout manual. Clarification of technical information and specifications. Added X4 models for Frame Size 2. Reformatted to larger page-size document; separated appendices from manual to be available on the web site (www.vacon.com).
August 2006	1428C	Minor corrections and enhancements throughout manual. Added 40 and 50 HP models.
June 2007	1428D	Added 60-200 HP models, new parameters. Minor corrections and reformatting throughout manual.
March 2008	1428E	Minor changes to format, copyright information, and logo Minor corrections throughout manual
May 2008	1428F	Minor corrections throughout manual; added new EU Declaration of Conformity
June 2008	1428G	Changed corporate information for Vacon Incorporated
November 2008	DPD00088 (1st release under this number)	Changed installation diagrams to reflect changes in product; changed photographs of product; added information to Chapter 2 on current surges and voltage transients; deleted mention of Model X4C20300C; other minor changes and corrections.
April 2009	DPD00088A	Revised EU Declaration of Conformity

Chapter 2: Technical Characteristics

2.1 Interpreting Model Numbers

The model number of the X4 AC drive appears on the shipping carton label and on the technical data label affixed to the model. The information provided by the model number is shown below:

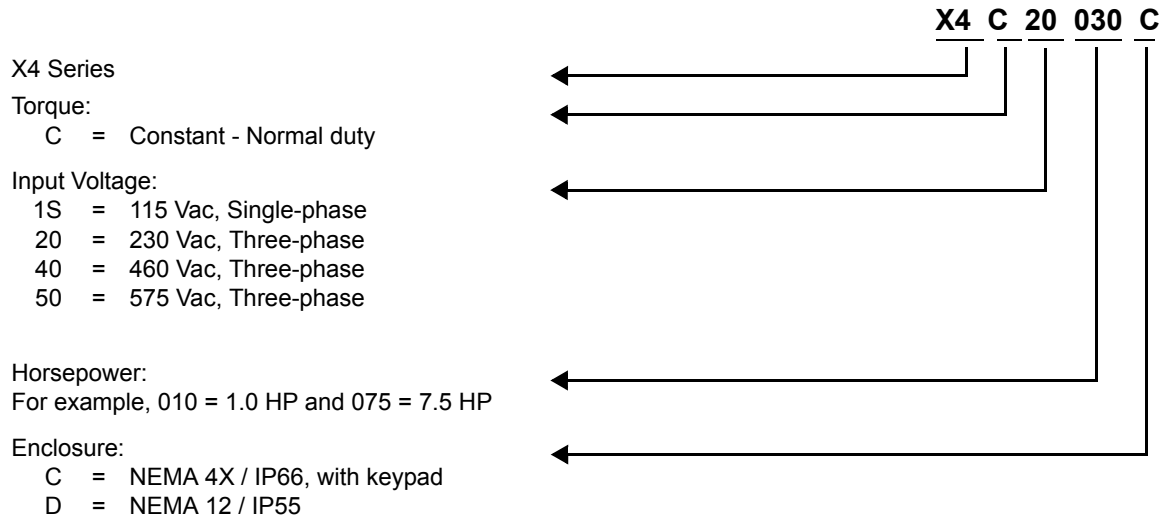

2.2 Power and Current Ratings

115 Vac Ratings

Model number	Normal Duty		Input current (A)		Output current (A)		Heavy Duty		Input current (A)		Output current (A)	
	HP	kW	-	115 Vac	-	230 Vac	HP	kW	-	115 Vac	-	230 Vac
X4C1S010C	1	0.75	-	15	-	4.2	0.5	0.37	-	11	0	2.2

230 Vac Ratings

Model number	Normal Duty		Input current (A)		Output current (A)		Heavy Duty		Input current (A)		Output current (A)	
	HP	kW	200 Vac	230 Vac	200 Vac	230 Vac	HP	kW	200 Vac	230 Vac	200 Vac	230 Vac
X4C20010C	1	0.75	5.6	4.8	4.8	4.2	0.5	0.37	2.9	2.5	2.5	2.2
X4C20020C	2	1.5	9	7.8	7.8	6.8	1	0.75	5.6	4.8	4.8	4.2
X4C20030C	3	2.2	12.7	11	11	9.6	2	1.5	9	7.8	7.8	6.8
X4C20050C	5	4	20.2	17.5	17.5	15.2	3	2.2	12.7	11	11	9.6
X4C20075C	7.5	5.5	29.2	25.3	25.3	22	5	4	20.2	17.5	17.5	15.2
X4C20100C	10	7.5	37.2	32.2	37.2	28	7.5	5.5	29.2	25.3	25.3	22
X4C20150C	15	11	52.1	46.4	48.3	42	10	7.5	37.2	32.2	37.2	28
X4C20200C	20	15	68.3	57.4	62.1	54	15	11	52.1	46.4	48.3	42
X4C20250C	25	18.5	82.3	73.8	78.2	68	20	15	68.3	57.4	62.1	54

NOTE: All 230 Vac models can be operated at single-phase, with 50% derating

460 Vac Ratings

Model number	Normal Duty		Input current (A)		Output current (A)		Heavy Duty		Input current (A)		Output current (A)	
	HP	kW	380 Vac	460 Vac	380 Vac	460 Vac	HP	kW	380 Vac	460 Vac	380 Vac	460 Vac
X4C40010C	1	0.75	3	2.4	2.4	2.1	0.5	0.37	1.6	1.3	1.3	1.1
X4C40020C	2	1.5	5.2	3.9	3.8	3.4	1	0.75	3	2.4	2.4	2.1
X4C40030C	3	2.2	7.2	5.6	5.1	4.8	2	1.5	5.2	3.9	3.8	3.4
X4C40050C	5	4	12	8.8	8.9	7.6	3	2.2	7.2	5.6	5.1	4.8
X4C40075C	7.5	5.5	15	12.8	12	11	5	4	12	8.8	8.9	7.6
X4C40100C	10	7.5	19.7	16.3	15.6	14	7.5	5.5	15	12.8	12	11
X4C40150C	15	11	30.9	25.8	23	21	10	7.5	19.7	16.3	15.6	14
X4C40200C	20	15	40	33.3	31	27	15	11	30.9	25.8	23	21
X4C40250C	25	18	46.3	40	37	34	20	15	40	33.3	31	27
X4C40300C	30	22	57.5	47.8	43	40	25	18	46.3	40	37	34
X4C40400C	40	30	73.2	62.4	61	52	30	22	57.5	47.8	43	40
X4C40500C	50	37	82	78	71	65	40	30	73.2	62.4	61	52
X4C40600C	60	45	94	80	86	77	50	37	82	78	71	65
X4C40750C	75	55	114	99	105	96	60	45	94	80	86	77
X4C41000C	100	75	149	129	140	124	75	55	114	99	105	96
X4C41250D	125	90	168	156	168	156	100	75	140	124	140	124
X4C41500D	150	110	205	180	205	180	125	90	168	156	168	156
X4C42000D	200	132	240	240	240	240	150	110	205	180	205	180

575 Vac Ratings

Model number	Normal Duty		Input current (A)		Output current (A)		Heavy Duty		Input current (A)		Output current (A)	
	HP	kW	-	575 Vac	-	575 Vac	HP	kW	-	575 Vac	-	575 Vac
X4C50010C	1	0.75	-	2.0	-	1.7	0.5	0.37	-	1.2	-	0.9
X4C50020C	2	1.5	-	3.6	-	2.7	1	0.75	-	2.0	-	1.7
X4C50030C	3	2.2	-	5.0	-	3.9	2	1.5	-	3.6	-	2.7
X4C50050C	5	4	-	7.6	-	6.1	3	2.2	-	5.0	-	3.9
X4C50075C	7.5	5.5	-	10.4	-	9.0	5	4	-	7.6	-	6.1
X4C50100C	10	7.5	-	14.1	-	11.0	7.5	5.5	-	10.4	-	9.0
X4C50150C	15	11	-	23	-	17	10	7.5	-	14.1	-	11
X4C50200C	20	15	-	31	-	22	15	11	-	23	-	17
X4C50250C	25	18	-	37	-	27	20	15	-	31	-	22
X4C50300C	30	22	-	39.5	-	32	25	18	-	37	-	27
X4C50400C	40	30	-	49	-	41	30	22	-	39.5	-	32
X4C50500C	50	37	-	58	-	52	40	30	-	49	-	41
X4C50600C	60	45	-	68	-	62	50	37	-	58	-	52
X4C50750C	75	55	-	82	-	77	60	45	-	68	-	62
X4C51000C	100	75	-	107	-	99	75	55	-	82	-	77
X4C51250D	125	90	-	125	-	125	100	75	-	99	-	99
X4C51500D	150	110	-	144	-	144	125	90	-	125	-	125
X4C52000D	200	132	-	192	-	192	150	110	-	144	-	144

2.3 Environmental Specifications

Operating temperature	For 2003, 2005, 5005, 2030, 4030, and 5030 models: -10 °C to +35 °C (14 °F to 95 °F) For all other models: -10 °C to +40 °C (14 °F to 104 °F)
Storage temperature	-20 °C to +65 °C (-4 °F to 149 °F)
Humidity	0% to 95% non-condensing
Altitude	1000 m (3300 ft) without derating
Maximum vibration	per EN50178 (1g @ 57-150 Hz)
Acoustic noise	80 dba sound power at 1 m (3 ft), maximum
Cooling	1 to 5 HP models: Natural convection 7.5 to 200.0 HP models: Forced air Note: 575Vac 5 HP model has a fan.

2.4 Electrical Specifications

Input voltage	X4C1Sx models: 115 Vac 1 phase, +/- 10% X4C2x models: 200-230 Vac, 3 phase, +/- 15% X4C4x models: 380-460 Vac, 3 phase, +/- 15% X4C5x models: 575Vac, 3 phase, +/-15%			
Line frequency	50 / 60 Hz \pm 2 Hz			
Source kVA (maximum)	10 times the unit rated kVA (see note below)			
DC bus voltage for:	115 Vac models	230 Vac models	460 Vac models	575 Vac models
Overvoltage trip	406 Vdc	406 Vdc	814 Vdc	1017 Vdc
Dynamic brake activation	388 Vdc	388 Vdc	776 Vdc	970 Vdc
Nominal undervoltage (UV) trip	199 Vdc	199 Vdc	397 Vdc	497 Vdc
Control system	V/Hz or SVC Carrier frequency = 1 - 16 kHz, programmable; 8 kHz max. for 125-200 HP models			
Output voltage	3-phase: 0 to 100% of incoming line (0-230 Vac for 115 Vac models)			
Overload capacity	120% of rated normal duty rms current for 60 seconds 150% of rated heavy duty rms current for 60 seconds			
Frequency range	0.1 to 400 Hz			
Frequency stability	0.1 Hz (digital), 0.1% (analog) over 24 hours +/- 10 °C			
Frequency setting	By keypad or by external signal (Speed Pot 0 to 5 Vdc; 0 to 10 Vdc; 0 to 20 mA, or 4 to 20 mA) OR by pulse train up to 100 kHz			

Note: Unit Rated kVA = rated Voltage x rated Current x 1.732

2.5 Control Features Specifications

Vin1 reference input	0-5/10 Vdc, 0/4-20 mAdc (250 Ω load) 6FS pulse train input, 0-1/10/100 kHz pulse input, inverted function, 0-5-10 bipolar input, broken wire detection. Span and offset adjustment.
Vin2 reference input	0-5/10 Vdc, 0-5-10 bipolar input, inverted function, broken wire detection, span and offset adjustment. Programmable for frequency reference or current limit input.
Cin reference input	0/4-20 mAdc (50 Ω load), inverted function, span and offset adjustment. Programmable for frequency reference or current limit input.
Reference voltage	10 Vdc (10 mAdc maximum)
Digital inputs - 10	Off=0 to 3 Vdc; On=10 to 32 Vdc (pullup logic), selectable between pullup and pulldown logic
Digital supply voltage	24 Vdc (150 mAdc maximum)
Preset frequencies	3 inputs for seven preset frequencies (selectable)
Digital outputs	2 SPDT relay output - 130 Vac, 1 A/250 Vac, 0.5 A 2 open collector outputs 50 mA per device
Digital pulse train output	Open collector output pulse train proportional to output frequency
Vmet analog output	0 to 10 Vdc (5 mAdc maximum)
Imet analog output	0-20 mAdc output into a 500 Ω load (maximum)
DC holding / injection braking	At start, stop, by frequency with adjustable current level and time or continuous DC injection by digital input.
Current limit	Four quadrant adjustable from 5 to 150%
Speed ramps	Primary and alternate adjustable from 0.1 to 3200.0 seconds
Voltage boost	Fixed boost adjustable from 0 to 50%, or auto boost in Vector mode
Voltage characteristic (V/Hz)	Linear, pump, fan or 2-piece linear
Timed overload	Adjustable inverse time trip (shear pin, 30 sec, 60 sec, 5 min), standard or inverter-duty motors
Protective features	Overcurrent, overvoltage fault, ground fault, short circuit, dynamic brake overload, drive temperature, power wiring fault, drive timed overload, input voltage quality, overvoltage ridethrough
Program Sequence Logic Controller (PSLC)	9-step PLC type functionality that can control speed, direction, and ramps based on time, analog input, digital input, or pulse input.
Serial communications	Modbus Standard: RTU or ASCII

2.6 Dimensions and Weights

Table 2-1 lists dimensions and weights for the X4 frame size 0, 1, 2, and 3 models. Dimensions and weights for the X4 frame size 4 and 5 models are shown in Table 2-2 on page 18.

See Figures 2-1, 2-2, 2-3, 2-4, 2-5, and 2-6 on pages 16 - 19 for locations of dimensions. Dimensions A through Q are in inches / millimeters (in/mm). Weight is in pounds / kilograms (lb/kg).

Table 2-1: Dimensions and Weights for Frame Sizes 0 - 2

Frame		0			1			2		
Voltage		115 Vac	230 Vac	460 Vac	230 Vac	460 Vac	575 Vac	230 Vac	460 Vac	575 Vac
Horsepower		1	1-3		5-7.5	5-10	1-10	10-15	15-30	15-30
Dimensions inches (mm) (See the corresponding X4 diagrams on following pages)	A	9.47 (241)			12.01 (306)			17.38 (442)		
	B	6.50 (165)			8.72 (221)			10.75 (273)		
	C	6.08 (155)			6.51 (166)			7.91 (201)		
	D	8.45 (215)			11.03 (280)			16.50 (419)		
	E	5.69 (145)			7.88 (200)			9.76 (248)		
	F	0.28 (7.11)			0.28 (7.11)			0.41 (10)		
	G	3.84 (98)			4.05 (103)			4.72 (120)		
	H	2.77 (70)			N/A			N/A		
	J	1.93 (49)			2.31 (59)			2.88 (73)		
	K	2.85 (72)			3.94 (100)			4.84 (123)		
	L	3.75 (95)			5.56 (1.41)			6.88 (175)		
	M	0.88 (22)			0.88 (22)			1.38 (35)		
	N	N/A			N/A			1.13 (29)		
	P	N/A			N/A			N/A		
Q	N/A			N/A			N/A			
Weight lb (kg)		8.5 (3.85)			14.0 (6.35)			29.5 (13.38)		

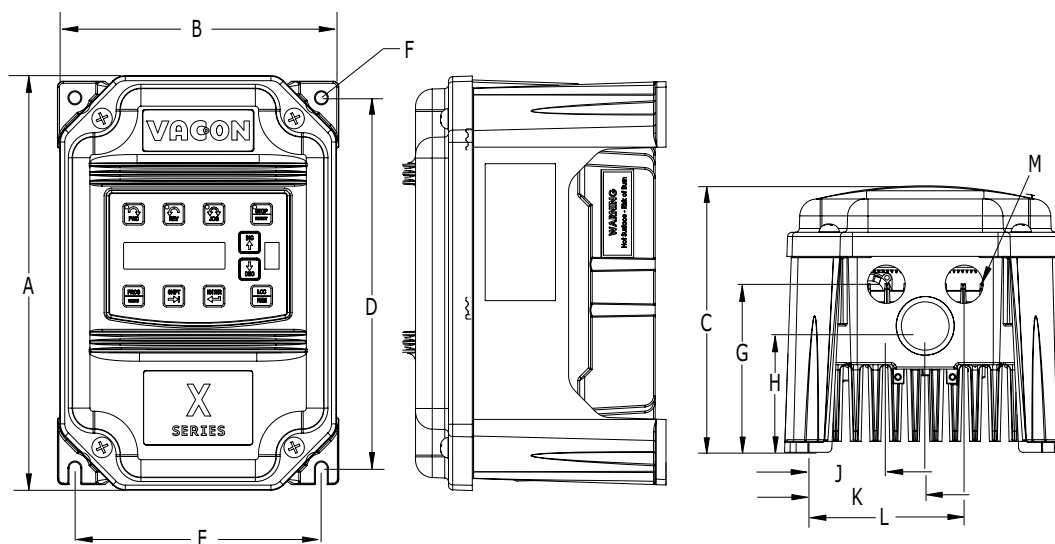


Figure 2-1: X4 Frame Size 0 Models

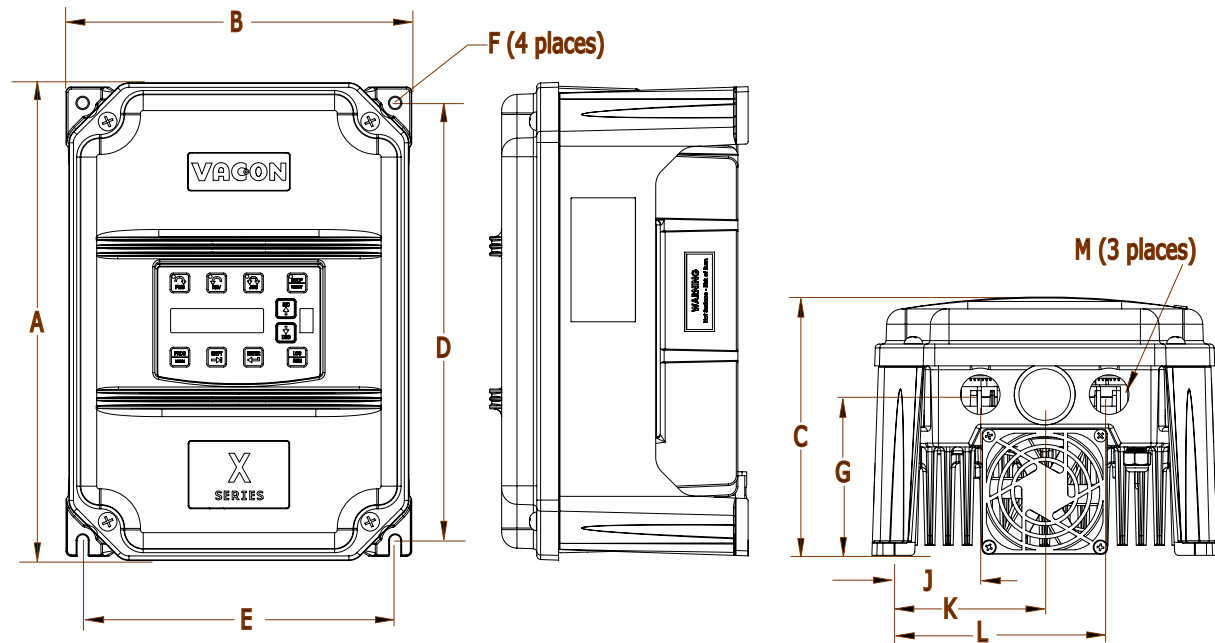


Figure 2-2: X4 Frame Size 1 Models

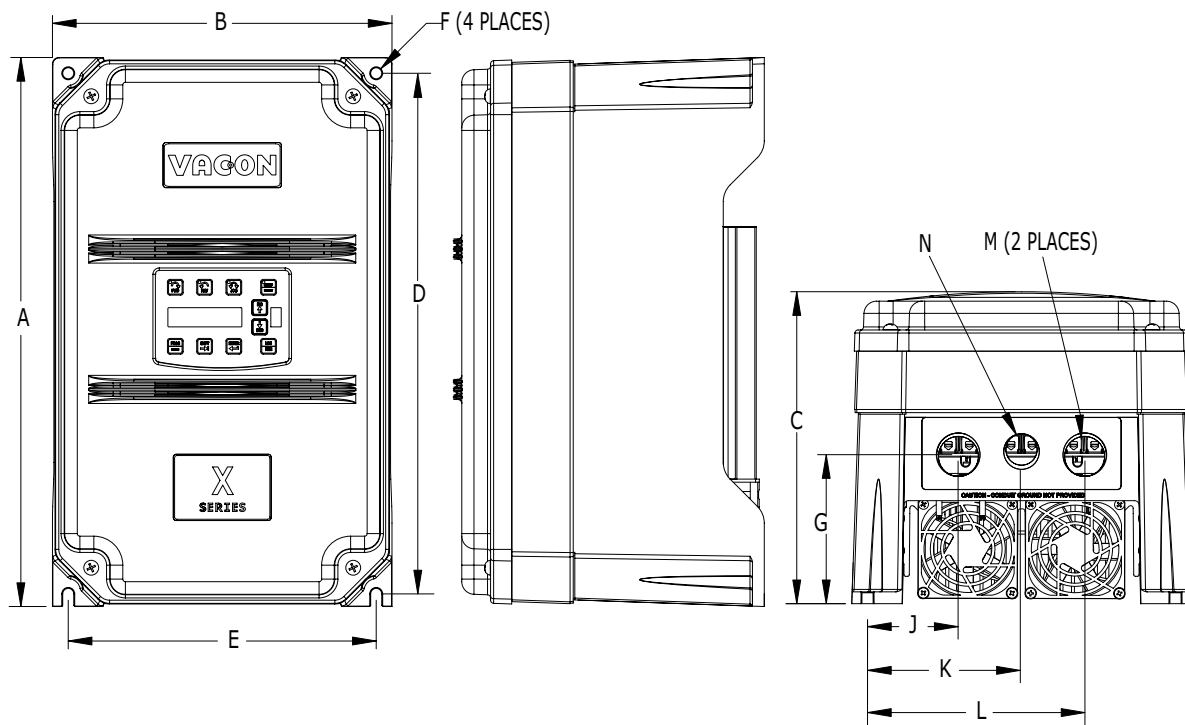


Figure 2-3: X4 Frame Size 2 Models

Table 2-2: Dimensions and Weights for Frame Sizes 3-5

Frame		3			4		5	
Voltage		230 Vac	460 Vac	575 Vac	460 Vac	575 Vac	460 Vac	575 Vac
Horsepower		20-30	40-50	40-50	60-100	60-100	125-200	125-200
Dimensions inches (mm) (See the corresponding X4 diagrams on following pages)	A	20.19 (513)			29.35 (745)		50.77 (1290)	51.02 (1296)
	B	11.25 (286)			12.84 (326)		16.31 (414)	
	C	11.73 (314)			13.80 (351)		16.88 (429)	
	D	19.25 (489)			28.00 (711)		45.77 (1163)	
	E	7.88 (200)			7.88 (200)		7.65 (194)	
	F	0.28 (7.11)			0.42 (11)		0.42 (11)	
	G	7.78 (198)			8.63 (219)		12.57 (319)	
	H	N/A			8.26 (210)		11.10 (282)	
	J	0.65 (13)			0.53 (14)		0.20 (5)	
	K	2.29 (58)			2.69 (68)		2.32 (59)	
	L	3.95 (100)			3.94 (100)		3.82 (97)	
	M	1.69 (44)			2.44 (62)		2.94 (75)	
	N	0.88 (22)			0.88 (22)		0.88 (22)	
	P	5.60 (142)			5.19 (132)		5.32 (135)	
	Q	7.24 (184)			7.35 (187)		7.45 (189)	
	R	N/A			10.23 (260)		N/A	
	S	N/A			1.94 (49)		1.86 (47)	
Weight lb (kg)		50.0 (22.68)			95.0 (43.10))		305.0 (138.35)	

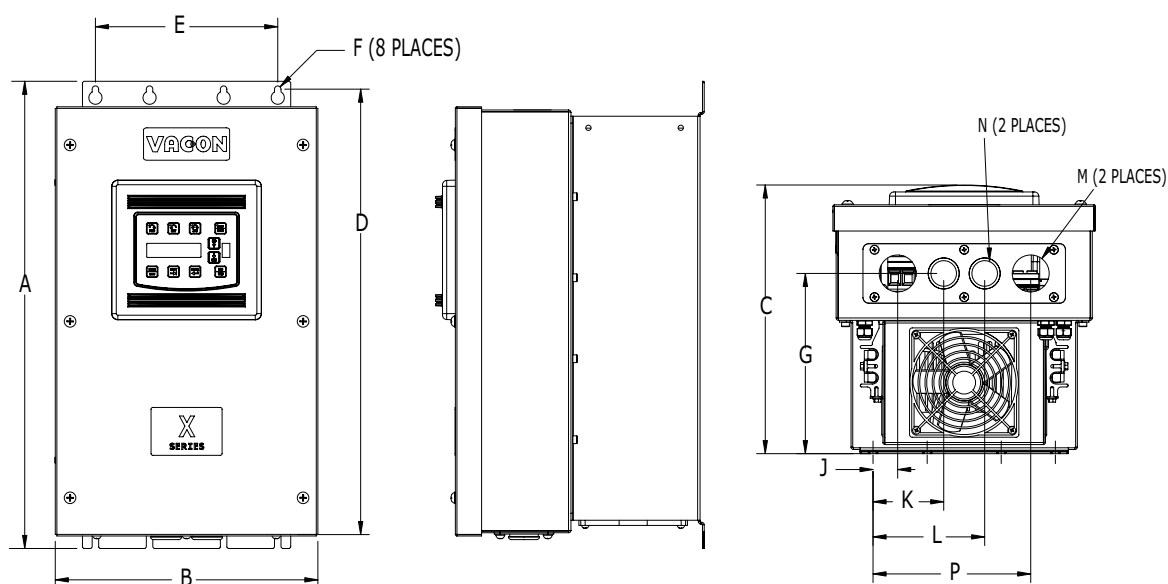


Figure 2-4: X4 Frame Size 3 Models

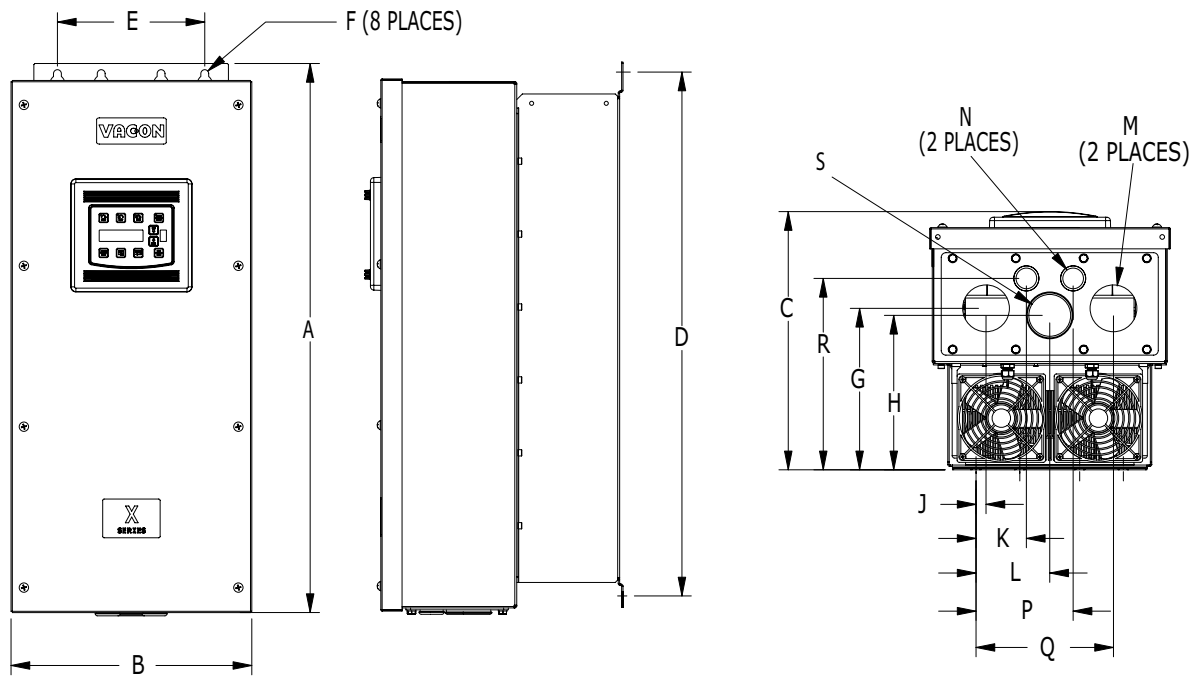


Figure 2-5: X4 Frame Size 4 Models

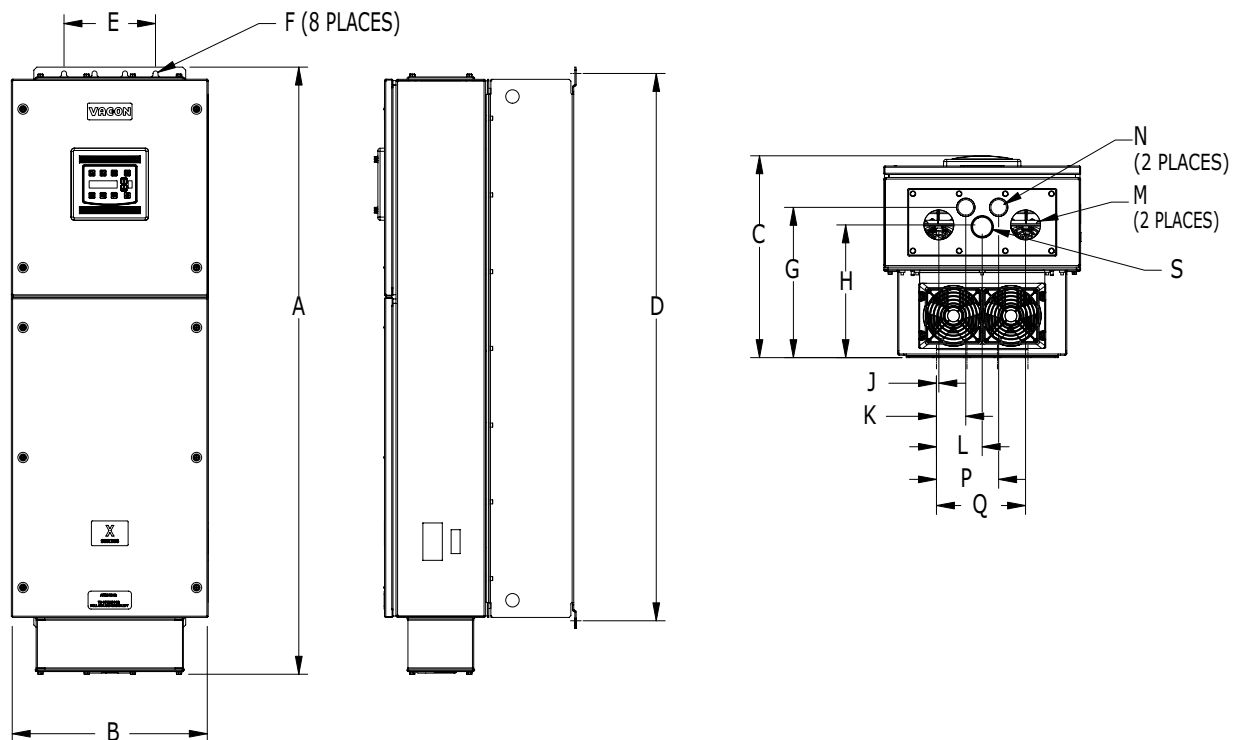


Figure 2-6: X4 Frame Size 5 Models

Chapter 3: Receiving and Installation

3.1 Preliminary Inspection

Before storing or installing the X4 AC drive, thoroughly inspect the device for possible shipping damage. Upon receipt:

1. Remove the drive from its package and inspect exterior for shipping damage. If damage is apparent, notify the shipping agent and your sales representative.
2. Remove the cover and inspect the drive for any apparent damage or foreign objects. (See [Figure 3-1 on page 22](#) for locations of cover screws.) Ensure that all mounting hardware and terminal connection hardware is properly seated, securely fastened, and undamaged.
3. Read the technical data label affixed to the drive and ensure that the correct horsepower and input voltage for the application has been purchased.
4. If you will be storing the drive after receipt, place it in its original packaging and store it in a clean, dry place free from direct sunlight or corrosive fumes, where the ambient temperature is not less than -20 °C (-4 °F) or greater than +65 °C (+149 °F).

CAUTION

EQUIPMENT DAMAGE HAZARD

Do not operate or install any drive that appears damaged.

Failure to follow this instruction can result in injury or equipment damage.

ATTENTION

RISQUE DE DOMMAGES MATÉRIELS

Ne faites pas fonctionner et n'installez pas tout variateur de vitesse qui semble être endommagé.

Si cette directive n'est pas respectée, cela peut entraîner des blessures corporelles ou des dommages matériels.

3.2 Installation Precautions

Improper installation of the X4 AC drive will greatly reduce its life. Be sure to observe the following precautions when selecting a mounting location. **Failure to observe these precautions may void the warranty!** See the inside front cover of this manual for more information about the warranty.

- Do not install the drive in a place subjected to high temperature, high humidity, excessive vibration, corrosive gases or liquids, or airborne dust or metallic particles. See [Chapter 2](#) for temperature, humidity, and maximum vibration limits.
- Do not mount the drive near heat-radiating elements or in direct sunlight.
- Mount the drive vertically and do not restrict the air flow to the heat sink fins.
- The drive generates heat. Allow sufficient space around the unit for heat dissipation. See [“Dissipation Requirements” on page 21](#).

3.3 Dissipation Requirements

Table 3-1: Dissipation Requirement for X4 Models (Page 1 of 2)

Model	Required Dissipation for Models Entirely Inside an Enclosure at Rated Current, 3KHz Carrier Frequency (Watts)	Required Dissipation When Fins are External to the Enclosure (Watts)
X4C1S010C	47	13
X4C20010C	48	14
X4C20020C	71	17
X4C20030C	92	16
X4C20050C	132	20
X4C20075C	177	23
X4C20100C	263	67
X4C20150C	362	68
X4C20200C	550	97
X4C20250C	653	96
X4C40010C	34	13
X4C40020C	46	16
X4C40030C	71	20
X4C40050C	91	21
X4C40075C	114	28
X4C40100C	155	30
X4C40150C	304	77
X4C40200C	393	76
X4C40250C	459	78
X4C40300C	458	77
X4C40400C	695	95
X4C40500C	834	100
X4C40600C	776	130
X4C40750C	988	135
X4C41000C	1638	155
X4C41250D	1656	353
X4C41500D	1891	372
X4C42000D	2302	382

Table 3-1: Dissipation Requirement for X4 Models (Page 2 of 2)

Model	Required Dissipation for Models Entirely Inside an Enclosure at Rated Current, 3KHz Carrier Frequency (Watts)	Required Dissipation When Fins are External to the Enclosure (Watts)
X4C50010C	32	15
X4C50020C	50	22
X4C50030C	66	21
X4C50050C	112	33
X4C50075C	159	37
X4C50100C	187	54
X4C50150C	334	124
X4C50200C	431	143
X4C50250C	528	154
X4C50300C	597	155
X4C50400C	742	160
X4C50500C	877	170
X4C50600C	766	200
X4C50750C	913	200
X4C51000C	1542	275
X4C51250D	1988	337
X4C51500D	2282	349
X4C52000D	3043	355

3.4 Cover Assembly and Torque Specifications

Figure 3-1 shows the locations of the X4 cover screws. The torque range for the X4 covers is 18-26 in/lbs.

**Figure 3-1: X4 Cover Assembly and Screw Locations**

Torque specifications for control terminals and power terminals are listed in [“General Wiring Information”](#) on [pages 25 and 26](#).

3.5 Serial Number Label

All X4 AC drives are warranted for three years from date of manufacture, or two years from the date of installation, whichever comes first. For a more detailed description of the warranty policy, visit our web site at <http://www.vacon.com>. To determine if your drive is within the warranty time frame, find the bar code label or look in the lower left of the technical nameplate. The serial number can be broken down as follows:

yywwxxxx = **yy**...year of manufacture

ww...week of manufacture

xxxx...sequential number drive during that week

3.6 Conduit Usage

The X4 drive in the NEMA 4X / IP66 enclosure is rated for 1000 psi washdown from 6 inches. To keep this rating, the use of a sealed conduit is required. The use of a Romex-type conduit will not prevent water entry into the enclosure. If the approved conduit is not used, all warranty claims against water damage will be void.

3.7 Condensation

The washdown process of an X4 drive may create a temperature and humidity change in and around the drive. If the unit is mounted in a cool environment and washed down with higher-temperature water, as the drive cools to room temperature, condensation can form inside the drive, especially around the display. To prevent this from happening, avoid using sealed connectors around rubber-coated cables to seal the drive. These do not allow any air transfer and hence create a level of condensation and humidity that exceeds the drive's rating.

Chapter 4: Connections

DANGER

HAZARDOUS VOLTAGE

- Read and understand this manual in its entirety before installing or operating the X4 AC drive. Installation, adjustment, repair, and maintenance of these drives must be performed by qualified personnel.
- Disconnect all power before servicing the drive. **WAIT 5 MINUTES** until the DC bus capacitors discharge.
- **DO NOT** short across DC bus capacitors or touch unshielded components or terminal strip screw connections with voltage present.
- Install all covers before applying power or starting and stopping the drive.
- The user is responsible for conforming to all applicable code requirements with respect to grounding all equipment.
- Many parts in this drive, including printed circuit boards, operate at line voltage. **DO NOT TOUCH.** Use only electrically-insulated tools.

Before servicing the drive:

- Disconnect all power.
- Place a "DO NOT TURN ON" label on the drive disconnect.
- Lock the disconnect in the open position.

Failure to observe these precautions will cause shock or burn, resulting in severe personal injury or death.

DANGER

TENSION DANGEREUSE

- Lisez et comprenez ces directives dans leurs intégralité avant d'installer ou de faire fonctionner le variateur de vitesse X4. L'installation, le réglage, les réparations et l'entretien des ces variateurs de vitesse doivent être effectuées par du personnel qualifié.
- Coupez toutes les alimentations avant de travailler sur le variateur de vitesse. **ATTENDEZ CINQ MINUTES** pour que la décharge des condensateurs du bus cc s'effectue.
- NE court-cuitez PAS les condensateurs du bus cc ou ne touchez pas aux composantes non blindées ou aux connexions des vis du bornier si l'appareil est sous tension.
- Installez tous les couvercles avant de mettre le variateur de vitesse sous tension, de le mettre en marche ou de l'arrêter.
- L'utilisateur est responsable de la conformité avec tous les codes électriques en vigueur concernant la mise à la terre de tous les appareils.
- De nombreuses pièces de ce variateur de vitesse, y compris les cartes de circuits imprimés, fonctionnent à la tension du secteur. **N'Y TOUCHEZ PAS.** N'utilisez que des outils dotés d'une isolation électrique.

Avant tout entretien ou réparation sur le variateur de vitesse:

- Coupez toutes les alimentations.
- Placez une étiquette «NE PAS METTRE SOUS TENSION» sur le sectionneur du variateur de vitesse.
- Verrouillez le sectionneur en position ouverte.

Si ces précautions ne sont pas respectées, cela causera une électrocution ou des brûlures, ce qui entraînera des blessures graves ou la mort.

4.1 Introduction

This chapter provides information on connecting power and control wiring to the X4 AC drive.

4.2 General Wiring Information

4.2.1 Wiring Practices

When making power and control connections, observe these precautions:

- Never connect input AC power to the motor output terminals T1/U, T2/V, or T3/W. Damage to the drive will result.
- Power wiring to the motor must have the maximum possible separation from all other power wiring. Do not run in the same conduit; this separation reduces the possibility of coupling electrical noise between circuits.
- Cross conduits at right angles whenever power and control wiring cross.
- Good wiring practice also requires separation of control circuit wiring from all power wiring. Since power delivered from the drive contains high frequencies which may cause interference with other equipment, do not run control wires in the same conduit or raceway with power or motor wiring.

4.2.2 Considerations for Power Wiring

Power wiring refers to the line and load connections made to terminals L1/R, L2/S, L3/T, and T1/U, T2/V, T3/W respectively. Select power wiring using these guidelines:

- Use only UL-recognized wire.
- Wire voltage rating must be a minimum of 300 V for 230 Vac systems and 600 V (Class 1 wire) for 460 or 575 Vac systems.
- Wire gauge must be selected based on 125% of the continuous input current rating of the drive. Wire gauge must be selected from wire tables for 75 °C insulation rating, and must be of copper construction. The 230 V 7.5 and 15 HP models, and the 460 V 30 HP models require 90 °C wire to meet UL requirements. See [Chapter 2](#) for the continuous output ratings for the drive.
- Grounding must be in accordance with NEC and CEC. If multiple X4 drives are installed near each other, each must be connected to ground. Take care not to form a ground loop.

See [Table 4-1 on page 26](#) and [Table 4-2 on page 26](#) for information on power terminal wiring specifications.

Table 4-1: X4 Power Terminal Wiring Specifications

Frame Size	Specifications			
	Torque Nom.	Torque Max.	Max. Wire Size	Strip Length
Size 0	12 in-lbs	13 in-lbs	12-24 AWG	5/16" (0.3125")
Size 1	16 in-lbs	18 in-lbs	8-18 AWG	5/16" (0.3125")
Size 2	30 in-lbs		6-8 AWG	3/8" (0.38")
Size 3	35 in-lbs		3 AWG	
Size 4	65 in-lbs		3/0 AWG	
Size 5	132 in-lbs		400 MCM	

Note: Wire type not specified by the manufacturer. Some types of wire may not fit within the constraints of the conduit entry and bend radius inside the drive..

Table 4-2: User-Supplied Terminal Cross-Reference

Wire Size	Manufacturer	Manufacturer's P/N	Manufacturer	Manufacturer's P/N
3 AWG	T&B	54107		
2 AWG	T&B	54107		
1 AWG	T&B	54108		
1/0 AWG	T&B	54152-TB	Burndy	YA25-L6BOX
2/0 AWG	T&B	54157	Burndy	YA26-L5BOX
3/0 AWG	T&B	54162-TB	Burndy	YA27-LBOX
4/0 AWG			Burndy	YA28-LBOX
250 MCM			Burndy	YA29-LBOX
300 MCM			Burndy	YA30-L
350 MCM			Burndy	YA31-L
400 MCM			Burndy	YA32-L1

4.2.3 Considerations for Control Wiring

Control wiring refers to the wires connected to the control terminal strip. Select control wiring as follows:

- Shielded wire is recommended to prevent electrical noise interference from causing improper operation or nuisance tripping.
- Use only UL recognized wire.
- Wire voltage rating must be at least 300 V for 230 Vac systems. It must be at least 600 V for 460 or 575 Vac systems.

See [Table 4-3](#) below for a summary of control terminal wiring specifications.

Table 4-3: X4 Control Wiring Specifications

X4 Size / Models	Specifications
All Sizes / Models	4.4 in-lbs maximum torque 12-24 awg wire 9/32" strip length

4.3 Input Line Requirements

4.3.1 Line Voltage

See “Power and Current Ratings” on page 12 for the allowable fluctuation of AC line voltage for your particular X4 model. A supply voltage above or below the limits given in the table will cause the drive to trip with either an overvoltage or undervoltage fault.

Exercise caution when applying the X4 AC drive on low-line conditions.

For example, an X4 2000 series unit will operate properly on a 208 Vac line, but the maximum output voltage will be limited to 208 Vac. If a motor rated for 230 Vac line voltage is controlled by this drive, higher motor currents and increased heating will result.

Therefore, ensure that the voltage rating of the motor matches the applied line voltage.

4.3.2 Line Capacity

If the source of AC power to the X4 AC drive is greater than 10 times the kVA rating shown in Table 4-4 below, an isolation transformer or line reactor is recommended. Consult the factory for assistance in sizing the reactor.

Table 4-4: X4 Line Capacity (kVA)

Drive HP	1	2	3	5	7.5	10	15	20	25	30	40	50	60	75	100	125	150	200
Transformer kVA	2	4	5	9	13	18	23	28	36	42	57	70	90	112	150	180	220	250

Note: X4 AC drive devices are suitable for use on a circuit capable of delivering not more than 65,000 rms symmetrical amperes at 10% above the maximum rated voltage.

4.3.3 Phase Imbalance

Phase voltage imbalance of the input AC source can cause unbalanced currents and excessive heat in the drive's input rectifier diodes and DC bus capacitors. Phase imbalance can also damage motors running directly across the line. The phase imbalance should not exceed 2% of the voltage rating.

⚠ CAUTION

EQUIPMENT DAMAGE HAZARD

Never use power-factor correction capacitors on motor terminals T1/U, T2/V, or T3/W of the X4 AC drive. Doing so will damage the semiconductors.

Failure to follow this instruction can result in injury or equipment damage.

⚠ ATTENTION

RISQUE DE DOMMAGES MATÉRIELS

Ne raccordez jamais de condensateurs de correction du facteur de puissance aux bornes T1/U, T2/V, ou T3/W du moteur du variateur de vitesse X4. Car cela endommagera les semiconducteurs.

Si cette directive n'est pas respectée, cela peut entraîner des blessures corporelles ou des dommages matériels.

4.3.4 Single-phase Operation

X4 AC drive 230 Vac models ranging from 1 to 5 HP are designed for both three-phase and single-phase input power. If one of these models is operated with single-phase power, use any two line input terminals. The output of the device will always be three-phase.

The safe derating of the X4 series of drives is 50% of the nominal current (HP) rating. Consult the factory with the particular application details for exact derating by model.

4.3.5 Ground Fault Circuit Interrupters

X4 drives rated for 115 Vac are **not** designed to operate with ground fault circuit interrupters (GFCI). The GFCI breakers are designed for residential use to protect personnel from stray currents to ground. Most GFCI breakers will shut off at 5 mA of leakage. It is not uncommon for an AC drive to have 30 to 60 mA of leakage.

4.3.6 Motor Lead Length

Vacon, Inc. recommends that the total lead length should not exceed the motor manufacturer's guidelines. Line disturbance and noise can be present in motor wiring of any distance. As a rule of thumb, any non-inverter duty motor should have a reactor or filter added when the motor lead length exceeds 150 feet. The carrier frequency for the drive should also be reduced using [parameter 803 \(PWM Frequency\)](#).

Nuisance trips can occur due to capacitive current flow to ground. These currents can cause shock to personnel and can create problems within the motor. Care should be taken when working in these areas.

Some applications can have a restricted lead length because of type of wire, motor type, or wiring placement. Consult the factory and the motor manufacturer for additional information.

4.3.7 Using Output Contactors

Contactors in the output wiring of an AC drive may be needed as part of the approved safety circuit. Problems can arise if these contactors are opened for the safety circuit and the drive is left in run mode of operation. When the contactor is open, the drive is in a no-load, no-resistance state, but is still trying to supply current to the motor. However, when the contactor closes, the drive sees the motor resistance and instantly demands current. This inrush of current when the contactor closes can fault or cause failure to the drive.

To prevent problems, interlock an auxiliary contact to the drive's Run or Enable circuit to stop the drive when the contactor opens. In this way, the drive will be disabled and no inrush will occur when the contactor is closed again.

4.4 Terminals Found on the X4 Power Board

4.4.1 Description of the Terminals

Table 4-5 describes the X4 power terminals.

Table 4-5: Description of X4 Power Terminals

Terminal	Description
L1/R L2/S L3/T	These terminals are the line connections for input power. (Single-phase 115 and 230 Vac, 1 to 5 HP models connect to any two of these terminals.)
T1/U T2/V T3/W	These terminals are for motor connections.

Note that earth ground is on the terminal strip (see [Figure 4-1](#) below). Dynamic brake (DB) connections are not on the terminal strip, but on “fast on” (spade) connectors for models up to 30 HP, and on the terminal strip for models 40 HP and larger. See [page 32](#) for specific information about dynamic braking.

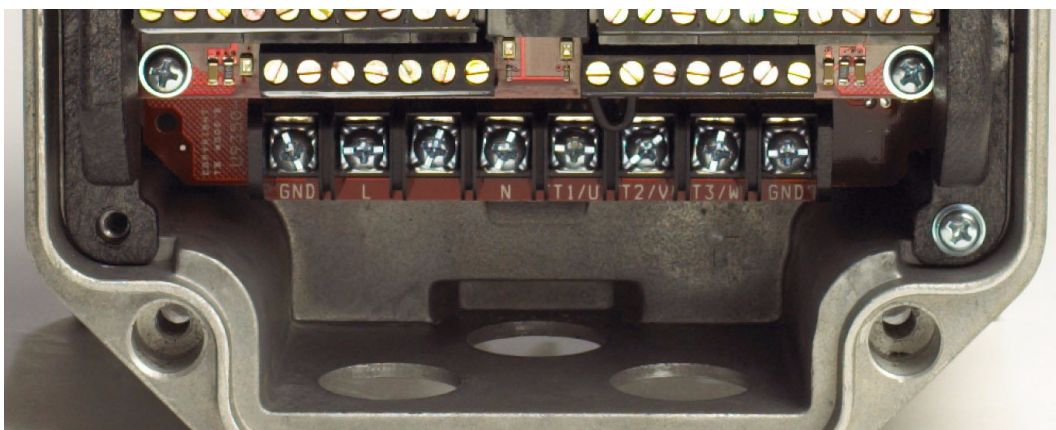
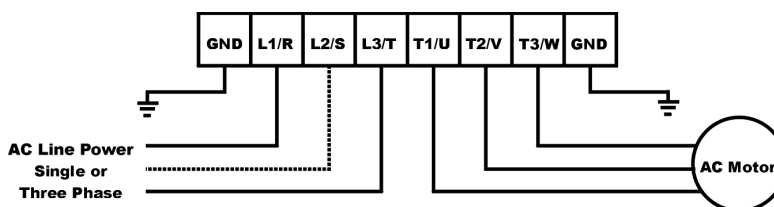


Figure 4-1: X4 Power Terminals

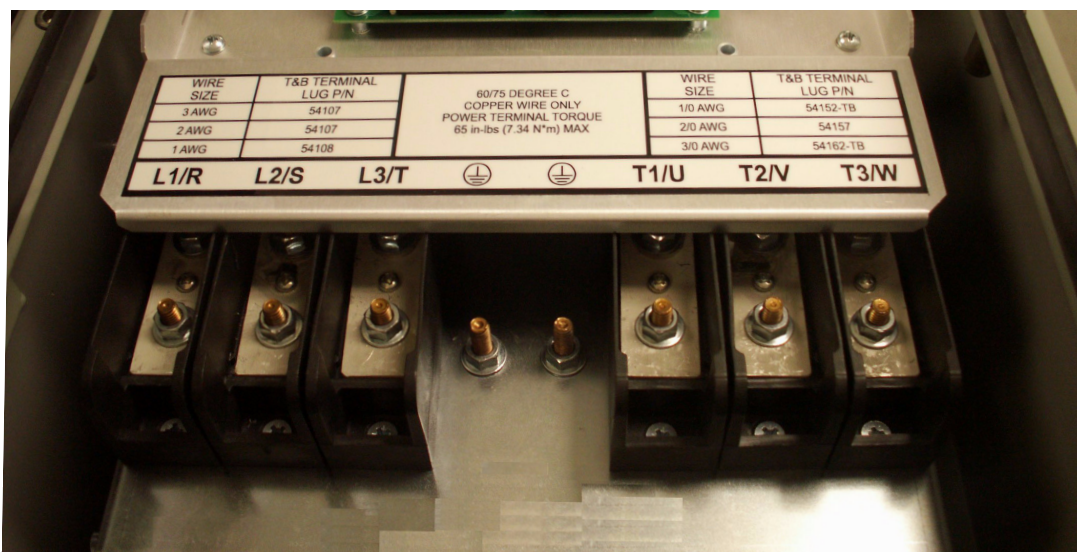


Figure 4-2: Power Terminals on Higher-HP Models

4.4.2 Typical Power Connections

See Section 4.3 starting on [page 27](#) for input line requirements.

Note that when testing for a ground fault, do not short any motor lead (T1/U, T2/V, or T3/W) back to an input phase (L1/R, L2/S, or L3/T).

It is necessary to provide fuses and a disconnect switch for the input AC line in accordance with all applicable electrical codes. The X4 AC drive is able to withstand a 150% overload for 60 seconds for heavy duty rating, and 120% overload for normal duty rating.

The fusing and input protection of the drive must always meet UL, NEC (National Electric Code), and CEC (Canadian Electric Code) requirements. All fuse ratings included in [Table 4-6](#) below are for reference only and do not supersede code requirements. The recommended supplier is Bussman.

Table 4-6: Fuse Ratings (Page 1 of 2)

Model Number	Fuse Size 115 Vac JJS/JJN	Fuse Size 208 Vac JJS/JJN	Fuse Size 230 Vac JJS/JJN	Fuse Size 380 Vac JJS	Fuse Size 460 Vac JJS	Fuse Size 575 Vac JJS
X4C1S010C	20	—	—	—	—	—
X4C20010C	—	10	6	—	—	—
X4C20020C	—	15	10	—	—	—
X4C20030C	—	20	15	—	—	—
X4C20050C	—	30	25	—	—	—
X4C20075C	—	40	35	—	—	—
X4C20100C	—	50	40	—	—	—
X4C20150C	—	70	60	—	—	—
X4C20200C	—	90	80	—	—	—
X4C20250C	—	100	90	—	—	—

Table 4-6: Fuse Ratings (Page 2 of 2)

Model Number	Fuse Size 115 Vac JJS/JJN	Fuse Size 208 Vac JJS/JJN	Fuse Size 230 Vac JJS/JJN	Fuse Size 380 Vac JJS	Fuse Size 460 Vac JJS	Fuse Size 575 Vac JJS
X4C40010C	—	—	—	6	6	—
X4C40020C	—	—	—	10	6	—
X4C40030C	—	—	—	10	10	—
X4C40050C	—	—	—	15	15	—
X4C40075C	—	—	—	20	20	—
X4C40100C	—	—	—	25	20	—
X4C40150C	—	—	—	40	35	—
X4C40200C	—	—	—	50	40	—
X4C40250C	—	—	—	60	50	—
X4C40300C	—	—	—	80	60	—
X4C40400C	—	—	—	100	80	—
X4C40500C	—	—	—	110	100	—
X4C40600C	—	—	—	125	100	—
X4C40750C	—	—	—	150	125	—
X4C41000C	—	—	—	200	175	—
X4C41250D	—	—	—	225	200	—
X4C41500D	—	—	—	250	225	—
X4C42000D	—	—	—	300	300	—
X4C50010C	—	—	—	—	—	6
X4C50020C	—	—	—	—	—	6
X4C50030C	—	—	—	—	—	10
X4C50050C	—	—	—	—	—	10
X4C50075C	—	—	—	—	—	15
X4C50100C	—	—	—	—	—	20
X4C50150C	—	—	—	—	—	30
X4C50200C	—	—	—	—	—	40
X4C50250C	—	—	—	—	—	50
X4C50300C	—	—	—	—	—	50
X4C50400C	—	—	—	—	—	70
X4C50500C	—	—	—	—	—	80
X4C50600C	—	—	—	—	—	90
X4C50750C	—	—	—	—	—	110
X4C51000C	—	—	—	—	—	150
X4C51250D	—	—	—	—	—	175
X4C51500D	—	—	—	—	—	200
X4C52000D	—	—	—	—	—	250

4.5 Dynamic Braking

The X4 AC drive is supplied with an integrated dynamic braking (DB) resistor, and is designed to have adequate dynamic braking for most applications. In cases where short stopping times or high inertia loads require additional braking capacity, install an external resistor.

Note: External braking cannot be added to **Size 0** models. For **Size 4** (60-100 HP) and **Size 5** (125-200 HP) models, additional external dynamic braking requires a kit that provides the connections to the braking transistors. The **XDBKITS4** and **XDBKITS5** kits can be purchased through local distributors. Frame **Sizes 3 - 5** have both the DC positive and negative bus terminals available, making the drive compatible with either an external resistor or a combination resistor / chopper type of dynamic braking kit.

If an external resistor is used for dynamic braking (not applicable for Size 0 models), **the internal resistor must be disconnected**. Internal DB resistors are connected with fast-on terminals. To install an external resistor, first disconnect the internal DB resistor (or resistors in 460 and 575 Vac models) and properly terminate the wires leading to it. Then connect the external resistor fast-on terminals where the internal resistor had been connected.

Changes to [parameter 410 \(DB Config\)](#) must be made when using external DB resistors.

Verify with the manufacturer of the selected resistor that the resistor is appropriate for your application. Contact [Vacon's Electronic Application Engineering \(see inside front cover of this manual\)](#) for further assistance with other possible sizing limitations.

Refer to [Table 4-7 on page 32](#) for information about dynamic braking capacity for each X4 model.

Table 4-7: X4 Dynamic Braking Capacity (Page 1 of 2) (* Note that the asterisked X4 model numbers cannot have external braking added)

Model	KW	Standard Resistance (ohms)	Standard DB % of Drive Power	Min. Allowed Res. (ohms)	Max. Peak Watts	Max. Ext. DB % of Drive Power
1S010*	.75	125	164%	--	--	--
20010*	.75	125	164%	--	--	--
20020*	1.5	125	82%	--	--	--
20030*	2.2	125	55%	--	--	--
20050	3.7	60	68%	43	3,555	95%
20075	5.5	60	45%	30	5,096	91%
20100	7.5	60	34%	27	5,662	76%
20150	11	60	23%	20	7,644	68%
20200	15	30	34%	10	15,288	102%
20250	18	30	27%	10	15,288	82%
40010*	.75	500	163%	--	--	--
40020*	1.5	500	82%	--	--	--
40030*	2.2	500	54%	--	--	--
40050	3.7	120	136%	100	6,084	163%

Table 4-7: X4 Dynamic Braking Capacity (Page 2 of 2) (* Note that the asterisked X4 model numbers cannot have external braking added)

Model	KW	Standard Resistance (ohms)	Standard DB % of Drive Power	Min. Allowed Res. (ohms)	Max. Peak Watts	Max. Ext. DB % of Drive Power
40075	5.5	120	91%	75	8,112	145%
40100	7.5	120	68%	75	8,112	109%
40150	11	120	45%	47	12,944	116%
40200	15	120	34%	47	12,944	87%
40250	18	120	27%	47	12,944	69%
40300	22	120	23%	39	15,600	70%
40400	29.8	60	34%	20	30,420	102%
40500	37.3	60	27%	20	30,420	82%
40600	45	60	23%	15	40,560	91%
40750	55	60	18%	10	60,840	109%
41000	75	60	14%	10	60,840	82%
41250	90	60	11%	10	60,840	65%
41500	110	60	9%	10	60,840	54%
42000	132	60	7%	10	60,840	41%
50010	.75	120	1058%	110	8,607	1154%
50020	1.5	120	529%	110	8,607	577%
50030	2.2	120	353%	110	8,607	385%
50050	3.7	120	212%	110	8,607	231%
50075	5.5	120	141%	91	10,404	186%
50100	7.5	120	106%	91	10,404	139%
50150	11	120	71%	62	15,269	136%
50200	15	120	53%	62	15,269	102%
50250	18	120	42%	62	15,269	82%
50300	22	120	35%	62	15,269	68%
50400	29.8	60	53%	24	39,447	132%
50500	37.3	60	42%	24	39,447	106%
50600	45	60	35%	15	63,115	141%
50750	55	60	28%	15	63,115	113%
51000	75	60	21%	20	63,115	85%
51250	90	60	17%	10	94,672	102%
51500	110	60	14%	10	94,672	85%
52000	132	60	11%	10	94,672	63%

4.6 Terminals Found on the X4 Control Board

4.6.1 Description of the Control Terminals

Figure 4-3 shows the control terminals found on the I/O board of the X4 AC drive. See [page 14](#) for specifications. [Table 4-8 on page 35](#) describes the control terminals.

The drive's control terminals are referenced to earth ground through a resistor / capacitor network. Use caution when connecting analog signals not referenced to earth ground, especially if the communications port (J3) is being used. The J3 port includes a common reference that can be connected to earth ground through the host PLC or computer.

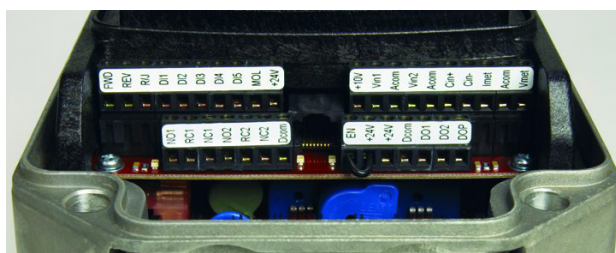


Figure 4-3: X4 Control Terminals


Table 4-8: Description of X4 Control Terminals (Page 1 of 2)

Terminal	Description
Vmet	Analog output 1, which is a dedicated voltage output. The default signal range is from 0 to 10 Vdc (5 mA maximum). It is proportional to the variable configured by parameter 700 (Vmet Config) (see page 75). It may be calibrated while the drive is running via parameter 701 (Vmet Span) (see page 75).
Imet	Analog output 2, which is a dedicated current output. The default signal ranges from 0 to 20 mAdc (50 to 500 Ω). It is proportional to the variable configured by parameter 702 (Imet Config) (see page 75). It may be calibrated while the drive is running via parameters 704 (Imet Offset) and 703 (Imet Span) (see page 75).
Vin1	Analog Input 1, which is used to provide speed references. The default input signal is 0 to 10 Vdc (the type of input signal is selected with parameter 205 (Vin1 Config) ; see page 63). Parameters 206 (Vin1 Offset) and 207 (Vin1 Span) may be used to offset the starting value of the range and the size of the range, respectively; see page 63 for more information. If a 0 to 20 mAdc input signal is configured, the burden is 250 Ω . If a 0 to 10 Vdc input signal is configured, the input impedance is 475 k Ω . A potentiometer with a range of 1 to 10 k Ω is suggested for this input.
+10	This terminal is a +10 Vdc source for customer-supplied potentiometers. The maximum load on this supply cannot exceed 10 mAdc.
Cin+ / Cin-	Current Input. The default input signal is 4-20 mA, although this range may be adjusted by using parameters 209 (Cin Offset) (which configures an offset for the range) and 210 (Cin Span) (to reduce or enlarge the range — for example, setting this parameter to 50% results in a range of 4-12 mA). See page 64 for more information on these parameters. The burden for this terminal is 50 Ω .
Vin2	Voltage Input 2, which is used to provide speed references. The default input signal is 0 to 10 Vdc (the type of input signal is selected with parameter 211 (Vin2 Config) ; see page 64). Parameters 212 (Vin2 Offset) and 213 (Vin2 Span) may be used to offset the starting value of the range and the size of the range, respectively; see page 64 for more information. A potentiometer with a range of 1 to 10 k Ω is suggested for this input.
Acom	Common for the Analog Inputs and Outputs. Note that while there are three Acom (common) terminals, they connect to the same electrical point.
+24	A source for positive nominal 24 Vdc voltage, and has a source capacity of 150 mA.
FWD	Forward Direction Selection terminal. This may be connected for two-wire maintained or three-wire momentary operation.
REV	Reverse Direction Selection Terminal. This may be connected for two-wire maintained or three-wire momentary operation.
R/J	Run/Jog Selector. When this terminal is connected to +24 or common (depending upon Active Logic setting), momentarily connecting either FWD or REV to +24 results in a latched run mode (3-wire operation).
MOL	Motor Overload input terminal. This requires a N/O or N/C contact for operation, referenced to +24 or COM, depending on Active Logic setting.


Table 4-8: Description of X4 Control Terminals (Page 2 of 2)

Terminal	Description
EN	<p>Enable terminal. A jumper is placed between this terminal and the +24 terminal at the factory. You may replace this with a contact, if desired. The circuit from EN to +24 must be closed for the drive to operate.</p> <p>Note that unlike all other terminals, this terminal cannot be configured for "pull-down logic." That is, a high input to this terminal is always regarded as true, and must be present for the drive to operate.</p>
Dcom	Digital Common for use with digital inputs and +24 internal power.
DI1-DI5	<p>Digital inputs.</p> <p>The function of a digital input is configured by the parameter with the same name as the digital input (for example, DI2 is configured by parameter 722 (DI2 Configure); see page 77).</p>
NC1 NO1 RC1	<p>The first auxiliary relay.</p> <p>The function of the relay is set by parameter 705 (Relay 1 Select) (see page 76); the default setting is for the relay to activate when a fault occurs (Drv Fault).</p> <p>Terminal NO1 is the normally-open contact, which closes when the relay is activated. Terminal NC1 is the normally-closed contact, which opens when the relay is activated. Terminal RC1 is the common terminal.</p>
NC2 NO2 RC2	<p>The second auxiliary relay.</p> <p>The function of the relay is set by parameter 706 (Relay 2 Select) (see page 76); the default setting is for the relay to activate when the drive is running (Drv Run).</p> <p>Terminal NO2 is the normally-open contact; it will close when the relay is activated. RC2 is the common terminal.</p>
DO1 DO2	<p>Digital Outputs 1 and 2.</p> <p>The function of the outputs is set by parameters 707 (DO1 Select) and 708 (DO2 Select). The default setting for DO1 is Drive Ready; for DO2 it is At Speed. See page 76.</p>
DOP	<p>Open collector transistor output that supplies a pulse train proportional to speed. The frequency of the output is set by parameter 812 (Freq Ref Output) to either 6x or 48x the running frequency. The output has a maximum rating of 28 Vdc and requires a pull-up resistor (4.7 kOhms) if using the drive's internal supply.</p> <p>Note that if you are using a high-impedance meter to this terminal, the pull-up resistor value may need to change. Please consult the factory for more information.</p>

4.6.2 Typical Connection Diagrams for Digital Inputs

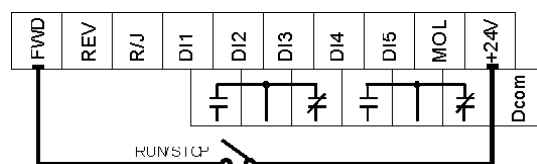

Typical connection for 2-wire control

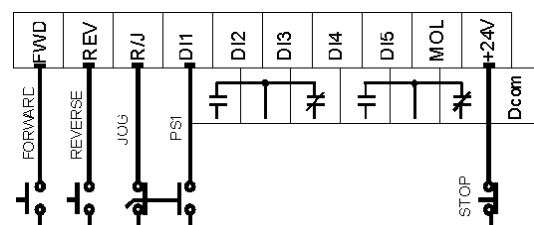

Typical connection for 3-wire control

Figure 4-4: Connections for 2-wire and 3-wire Control

Table 4-9: Selection of Preset Speeds

PS3 (Bit 3)	PS2 (Bit 2)	PS1 (Bit 1)	Speed Selected
0	0	0	Normal reference speed as defined by parameters 201 (Input Mode) and 204 (Ref Select)
0	0	1	Preset frequency F1 (303-F1).
0	1	0	Preset frequency F2 (304-F2).
0	1	1	Preset frequency F3 (305-F3).
1	0	0	Preset frequency F4 (306-F4).
1	0	1	Preset frequency F5 (307-F5).
1	1	0	Preset frequency F6 (308-F6).
1	1	1	Maximum frequency (302, Max Frequency).

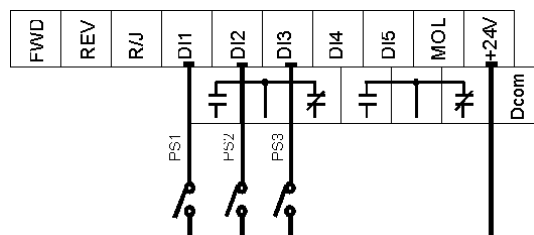


Figure 4-5: Connections for Preset Speeds

4.6.3 Typical Connection Diagrams for Analog Inputs

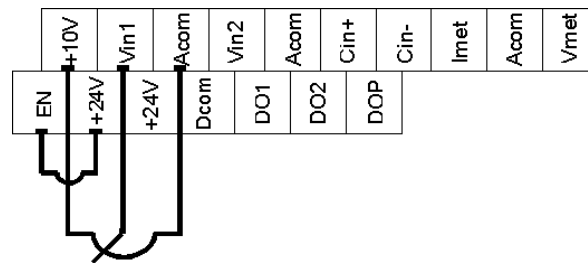


Figure 4-6: Connections for Speed Potentiometer

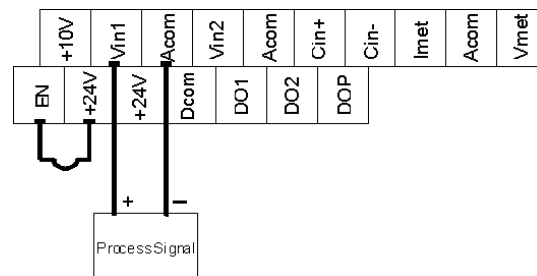


Figure 4-7: Connections for Process Signal

4.6.4 Typical Connection Diagrams for Analog Outputs

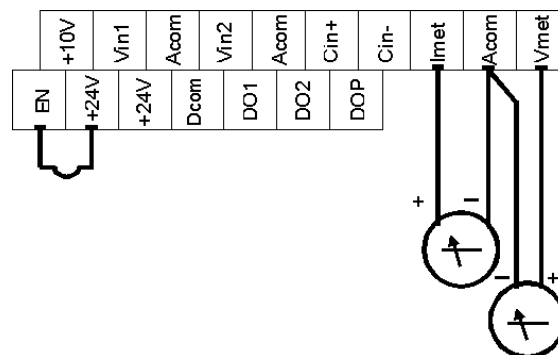


Figure 4-8: Connections for Process Meters

4.6.5 Modbus Connection Diagram

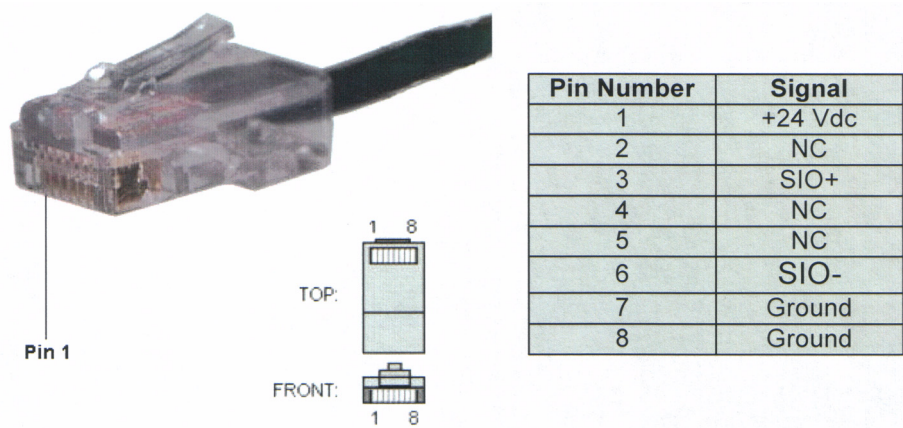


Figure 4-9: RS-485 Connector (Modbus) Pinout

4.7 Reducing Current Surges and Voltage Transients

Inrush currents to coils of magnetic contactors, relays, and solenoids associated with or near the drive can induce high current spikes in the power and control wiring, causing faulty operation. If this occurs, a snubber network consisting of a series resistor and capacitor for AC loads, or a free-wheeling or flyback diode for DC loads, can be placed across the relay coil to prevent this condition. The following component values should be used for 115 VAC or 230 VAC relays or solenoids.

For Main Circuit Contactors and Solenoids
C = 0.2 MFD, 500 VDC R = 500 5 Watts

For Auxiliary Control Circuit Relays
C = 0.1 MFD, 500 VDC R = 200 2 Watts

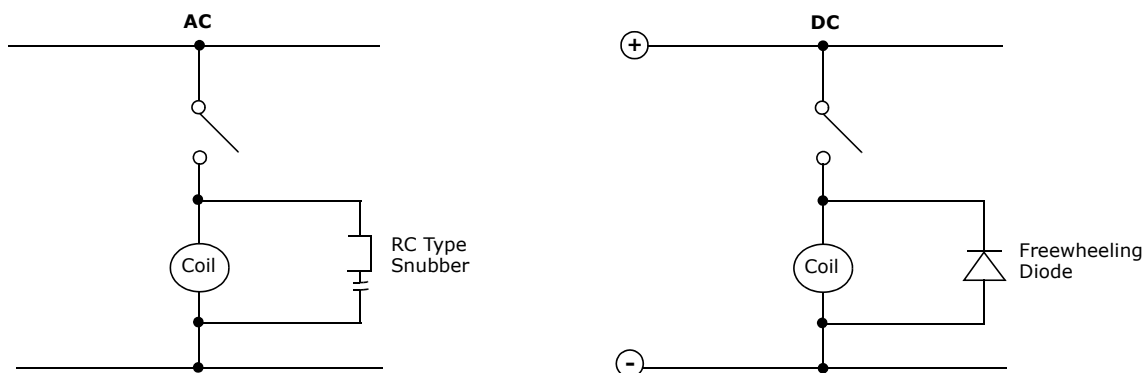


Figure 4-10: Connection Diagram for AC and DC Relay Coils and Solenoids

For magnetic contactors, relays, and solenoids energized from a DC source, use a free-wheeling diode of the high-speed, fast-recovery type. Connect the diode across the coil as shown above in [Figure 4-10](#). The diode current and voltage should be selected using the following formulae:

$$\text{Diode Current Rating (A)} = \frac{\text{Coil Capacity (VA)}}{\text{Rated Voltage of Coil (V)}}$$

$$\text{Diode Voltage Rating} = \text{Rated Voltage of Coil (V)} \times 2$$

Chapter 5: Keypad Operation and Programming

5.1 Introduction

The X4 AC drive is pre-programmed to run a standard, 4-pole AC induction motor. For many applications, the drive is ready for use right out of the box with no additional programming needed. The digital keypad controls all operations of the unit. The ten input keys allow “press and run” operation of the motor (Operation mode) and straightforward programming of the parameters (Program mode)..



Figure 5-1: The X4 Keypad

To simplify programming, the parameters are grouped into three levels:

1. Enter **Level 1** by pressing the Program (PROG) key at any time. Level 1 allows you to access the most commonly used parameters.
2. Enter **Level 2** by holding down the SHIFT key while pressing the PROG key. Level 2 allows access to all X4 parameters, including those in Level 1, for applications which require more advanced features.
3. Enter **Macro mode** by holding the Program (PROG) key down for more than 3 seconds. The display then shows “Hold PROG for Macro Mode.” See [Chapter 6, “Using Macro Mode,” starting on page 49](#), for more information.

The summary of parameters found before the Table of Contents notes whether a parameter is in Level 1. [“Chapter 7: X4 Parameters” on page 59](#) gives full information about what level a parameter is in.

Note that all parameters can be addressed by adding 40000 to the parameter number. For example, parameter **201** (Input Mode) can be addressed by Modbus address 40201.

Want to get started quickly? See the “Quick Start” section on page 58.

5.2 Keypad Operation

Parameter **201, Input Mode** (see page 62), determines whether the X4 AC drive accepts its Run/ Stop and speed commands from the digital keypad or from the input terminals. Table 5-1 describes the function of the keys in Operation mode.

Table 5-1: Function of Keys in Operation Mode (X4 Running or Stopped)

	Initiates forward run when pressed momentarily. If the drive is running in reverse when FWD is pressed, it will decelerate to zero speed, change direction, and accelerate to the set speed. The green FWD designation in the key illuminates whenever a FWD command has been given. When both the FWD and REV lights are on, the DC braking function is active.
	Initiates reverse run when pressed momentarily. If the drive is running in forward when REV is pressed, it will decelerate to zero speed, change direction, and accelerate to the set speed. The green REV in the key illuminates whenever a REV command has been issued. When both the FWD and REV lights are on, the DC braking function is active.
	Causes a Ramp-to-Stop when pressed. Programmable to Coast-to-Stop by parameter 401, Ramp Select (page 66). The red STOP indicator in the key illuminates whenever a STOP command has been given. If the drive has stopped because of a fault, this indicator flashes to call attention to the display. The STOP key also functions as a fault RESET key.
	Press the JOG key to enter Jog mode. The green JOG indicator in the key illuminates when the drive is in the JOG mode of operation. To jog the motor in either direction, press either the FWD or REV (if REV is enabled in parameter 202). The motor will operate at the speed programmed in parameter 303 . To exit Jog mode, press the JOG key again.
	When the drive is stopped, pressing this key increases the desired running speed. When the drive is running, pressing this key increases the actual running speed in 0.1 Hz increments . Holding the SHIFT key while pressing the INC (UP arrow) key moves the decimal place to the left with each press (0.1 Hz, 1.0 Hz, 10.0 Hz increments).
	When the drive is stopped, pressing this key decreases the desired running speed. When the drive is running, pressing the DEC (down arrow) key decreases the actual running speed in 0.1 Hz increments . Holding the SHIFT key while pressing the DEC key moves the decimal place to the right with each press (10.0 Hz, 1.0 Hz, 0.1 Hz increments). <i>NOTE: The operating speed for the drive is stored on Power Down.</i>
	Pressing this key while a parameter is displayed allows that parameter to have its value changed by use of the INC and DEC (up and down arrow) keys. The P indicator flashes to show that the parameter can be programmed. See also the descriptions for the INC and DEC keys to see how they work with the SHIFT key.
	The ENTER key has no function when the drive is running or stopped. ENTER can be used to store the speed command so that it is saved through a power-down. To enable this function, see the description for parameter 802 (Start Options) on page 78.
	Whether the drive is running or stopped, pressing this key places the drive in Program mode. See Table 5-2 on page 42 for more information on how this key functions.
	Pressing this key toggles drive control between the LOCal and REMote control modes, as selected by parameter 201 (Input Mode) . It can be configured to shift: <ul style="list-style-type: none"> the Run/Stop command (either FWD or REV) the speed reference signal both of the above It can also be set to “disabled,” which is the factory setting. It will operate either in Stop mode or while the drive is running. If power is removed and reapplied, the memory will retain the last selected function.

You can access **Program mode** by stopping the X4 drive and pressing the **Program (PROG)** key for Level 1 access; or holding down **SHIFT** while pressing **PROG** for Level 2 access. Pressing and holding the **Enter** key and then pressing the **Program** key will show only those parameters that have been changed from the factory defaults. Table 5-2 describes the function of the keys in Program mode.

Table 5-2: Function of Keys in Program Mode









	<p>Press this key to have the drive enter Program mode and have Level 1 parameters available. (To access Level 2 parameters, hold down SHIFT while pressing this key; to access Macro mode, hold down the PROG key for more than 3 seconds.) Once Program mode is active, pressing this key at any time returns the drive to the Operation mode. If an Access Code has been programmed, it must be entered to proceed with programming. See Parameter 811 (Access Code) (page 79).</p>
<p><i>NOTE: To see what parameters have changed from the factory default, press ENTER + PROG. If the display flashes "Factory Defaults," no parameters have changed.</i></p>	
	<p>In the Program mode, pressing this key scrolls forward through the parameters. If the P indicator is flashing, it increases the value of the parameter. To change the scroll rate, hold the SHIFT key at the same time to increase the scroll rate; release the SHIFT key to return to the normal scroll rate. Press the ENTER key to store the new value.</p>
	<p>In the Program mode, pressing this key scrolls backward through the parameters. If the P indicator is flashing, it decreases the value of the parameter. To change the scroll rate, hold the SHIFT key at the same time to increase the scroll rate; release the SHIFT key to return to the normal scroll rate. Press the ENTER key to store the new value.</p>
<p><i>NOTE: If the P indicator on the keypad display is flashing, momentarily pressing and releasing both the INC and DEC keys at the same time restores the parameter to the factory default value. Press ENTER to store the new value.</i></p>	
	<p>Pressing this key while a parameter is displayed allows that parameter to have its value changed by use of the INC and DEC (up and down arrow) keys. The P indicator flashes to show that the parameter can be programmed. See also the descriptions for the INC and DEC keys to see how they work with the SHIFT key.</p>
	<p>This key must be pressed after the value of a parameter has been changed to store the new value. The display will show "stored" for one second indicating that the new value has been entered into memory.</p>
<p><i>NOTE: The X4 unit allows you to view only those parameters that have changed. If you press keypad keys ENTER and PROG simultaneously, only those parameters that have been changed from the factory defaults will be shown.</i></p>	

Table 5-3: Function of Keys in Fault Mode

	<p>In Fault mode, pressing the INC (up arrow) and DEC (down arrow) keys allows the operator to view the drive's status immediately before the fault occurred. Use the INC or DEC keys to scroll through the status parameters. Press the STOP (Reset) key to return to normal operation.</p>
	<p>See "Chapter 8: Troubleshooting" on page 93 for information about viewing Advanced Fault Codes and understanding error codes.</p>
	<p>The red STOP key functions as a reset button when in Fault mode. If the drive has stopped because of a fault, this light flashes to call attention to the display.</p>

5.3 LCD Displays

The X4 drive's digital keypad display provides information such as source of drive control, status, mode, and access rights.

5.3.1 Control

The first 3 characters of the display show the source of control for the drive:

Display Values	Meaning
LOC	Local control via the keypad
REM	Remote control from the terminal strip
SIO	Remote control via the RS485 Serial SIO Link
SQx	Control via the Program Sequencer
MEA	The Stator Resistance Measurement is armed

5.3.2 X4 Keypad Status and Warning Messages

Table 5-4 shows X4 keypad status messages that may appear during operation:

Table 5-4: Keypad Status States (Page 1 of 2)

Message	Meaning
Stopped	The drive is not spinning the motor or injecting DC voltage. The drive is ready to run when given the proper signal.
FWD Accel	The drive is spinning the motor in the forward direction and the speed of the motor is increasing.
REV Accel	The drive is spinning the motor in the reverse direction and the speed of the motor is increasing.
FWD Decel	The drive is spinning the motor in the forward direction and the speed of the motor is decreasing.
REV Decel	The drive is spinning the motor in the reverse direction and the speed of the motor is decreasing.
Jog FWD	The drive is jogging in the forward direction.
Jog REV	The drive is jogging in the reverse direction.
FWD At Spd	The drive is spinning the motor in the forward direction and the speed of the motor is at the reference frequency.
REV At Spd	The drive is spinning the motor in the reverse direction and the speed of the motor is at the reference frequency.
Zero Speed	The drive has an active run signal but the motor is not spinning because the reference speed to the drive must be 0.0 Hz.
DC Inject	The drive is injecting DC voltage into the motor.
Faulted	The drive is faulted.
Reset-Flt	The drive is faulted, but has the possibility of being automatically reset.
LS Lockout	Line-Start Lockout functionality has become active. This means there was an active run signal during power-up or when a fault was reset. This run signal must be removed before the Line-Start Lockout functionality will be removed.
Catch Fly	The Catch on the Fly functionality is actively searching for the motor frequency.

Table 5-4: Keypad Status States (Page 2 of 2)

Message	Meaning
Forward	The drive is running forward without accelerating, decelerating or residing at the reference frequency. This means that something is keeping the drive from the reference frequency (for example, Current Limit).
Reverse	The drive is running in reverse without accelerating, decelerating or residing at the reference frequency. This means that something is keeping the drive from the reference frequency (for example, Current Limit).
Not Enabled	The drive is not allowed to run either because the digital input enable is not active or because ARCTIC mode has shut down the run operation.
Volt Range	The drive has not met the input voltage requirements that it needs to be able to run. In other words, the Bus Voltage of the drive is either too low or too high.
Low Voltage	The drive has reached an undervoltage state.
Kpd Stop	A stop command was given from the keypad when the keypad was not the active control source. To remove this condition, the run signal to the drive must be removed.

Table 5-5 shows X4 keypad warning messages that may appear during operation:

Table 5-5: Keypad Warnings

Message	Meaning
DB Active	The DB Resistor is being actively pulsed.
Curr Limit	The drive is operating in current limit.
HS Fan Err	Either the heatsink fan should be on and is off, or vice-versa.
Addr XXX	This is the node address of the drive when it receives a valid message through the IR port address to another node. The XXX will be replaced with the node address.
High Temp	The temperature of either the heatsink or the control board is nearing a high temperature limit that will fault the drive.
Low Temp	The temperature of either the heatsink or the control board is nearing a low temperature limit that will fault the drive.
Vac Imblnce	Either the drive has lost an input phase or the input voltage is unbalanced more than 2%.
Power Supp	A power supply short occurred.
Seq Dwell	The sequencer is active, but the transition to the next step is halted.
Int Fan Err	Either the internal fan is on and should be off, or vice-versa.
DB OverTemp	The temperature of the DB Resistor is nearing a high temperature and will fault the drive.
ARCTIC Mode	The ARCTIC DB Resistor mode is actively pulsing the DB Resistor.
CPU Warning	A system error occurred in the software of the X4.
Mtr Measure	An RS Measurement is armed or active.
IR Active	Valid IR communications are occurring.
Seq Running	The program sequencer functionality is active.

5.3.3 Rights

After Program mode is entered, the operator's access rights are displayed:

Display Values		
ACCESS RIGHTS	P	This indicates that while in Programming mode, parameter data can be changed.
	V	If the drive is in Run mode (FWD or REV) when the PROG key was pressed, parameters can be viewed, but not changed.
	The first character of the second line indicates if the particular parameter can be changed (P) or only examined (V). If an attempt is made to change data while in the View (V) mode, the message **NO ACCESS** will appear for one second.	

5.3.4 Other Data

The top line gives 16-character description of the parameter being accessed. The parameter number will flash when data is being changed. Up to 10 characters are used to display the information stored in the parameter. Some parameters have a unit designator such as:

s	Seconds
h	Hours
C	Degrees centigrade
Hz	Hertz
%	Percent
A	Amperes

When the drive stops because of a fault trip, a unique error message will be displayed, along with the flashing STOP indicator. "Pages," or screens of information are available concerning the actual fault and drive status.

["Chapter 8: Troubleshooting" on page 93](#) gives information about fault codes and troubleshooting.

5.4 Keypad Display Window

The keypad display provides information on drive operation and programming. Special symbols provide further information about drive operation (see the following section). Figure 5-2 shows an example of the X4 keypad display.

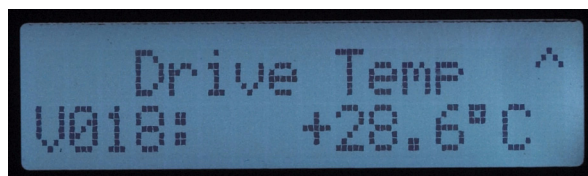


Figure 5-2: X4 Keypad Display

5.5 Programming

5.5.1 Accessing Parameters

When **PROG** (or **SHIFT+PROG**) is pressed after application of power or a fault reset, parameter **201, Input Mode**, is always the first parameter displayed. Figure 5-3 shows a typical programming display.

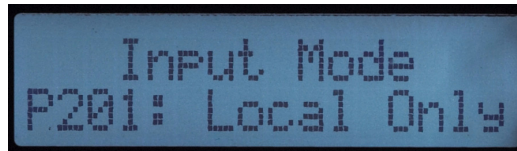


Figure 5-3: Typical Programming Display

If a different parameter is accessed and Program mode is exited, that parameter is the first one displayed the next time Program mode is entered. The drive remembers a different “last parameter accessed” for Levels 1 and 2.

5.5.2 Changing the Display Scroll Rate

Pressing the **INC** or **DEC** keys (up or down arrows) causes the display to scroll at a slow rate. To increase the scroll rate, hold the **SHIFT** key at the same time that you press the **INC** key. Release the **SHIFT** key to return to the slow scroll rate. This procedure works in all programming and operation modes.

5.5.3 Programming Procedure

To program the value of a parameter, follow these steps:

1. Press the Program (**PROG**) key to enter Level 1 Program mode. To enter Level 2, press **SHIFT+PROG**. The P indicator will appear on the display. You must enter one level of programming or the other; you cannot switch between levels without exiting Program mode.
Note that some parameters cannot be changed in Run mode. For example, if you wish to program parameter 201, Input Mode, you must stop the drive before beginning programming. Refer to the Parameter Summary Table at the front of this manual to see which parameters cannot be changed in Run mode (they appear as shaded entries in the table).
2. Press the **INC** or **DEC** keys to access the desired parameter.
3. Press the **SHIFT** key to allow the value to be changed. The P indicator starts to blink.
4. Press the **INC** or **DEC** keys to select the new value.
5. Press the **ENTER** key to store the new value. The display shows “Stored” for one second.
6. Press the **PROG** key to exit the Program mode, or the **INC** or **DEC** keys to select a new parameter.

To program a text parameter, follow these steps:

1. Like other parameters, text parameters use the **INC/DEC** (up/down arrow) and **SHIFT** keys for editing. A line appears under the character that you are changing.
2. Press **SHIFT** to advance to the next character that you want to change.
3. Use the **INC** or **DEC** keys to change the character value.
4. Press **ENTER** to store the edited text.

5.5.4 Restoring Factory Settings

Whenever a parameter's value is being changed (noted by the P indicator flashing), the original factory setting for that parameter may be restored by pressing and releasing both the **INC** and **DEC** keys simultaneously and then pressing the **ENTER** key.

To restore ALL parameters to factory settings, or to recall a previously stored parameter set, see [parameter 801, Program Number](#) (page 77).

5.5.5 Viewing Parameters That Have Changed

The X4 unit allows you to view only those parameters that have changed. If you press the **ENTER** and **PROG** keys simultaneously, only those parameters that have been changed from the factory defaults will be shown. Note that all parameters, regardless of Level 1 or 2 default location, will be shown. If other parameters need to be changed, press the **PROG** key to exit this mode in either Level 1 or 2, as needed.

5.5.6 Using Macro Mode

A special Macro programming mode is available with the X4 series of AC drives. The Macro programming mode allows you to customize the most common parameters for your application in the Level 1 group. Macro mode provides special parameters for activating modes of operation by macros, program sequencer, or serial communications.

Parameters that are important to the drive's operation are also included in the Macro mode. Although these parameters are also available with standard programming, the Macro mode allows you to quickly and easily configure the drive with essential parameters.

See [“Chapter 6: Using Macro Mode and Getting a Quick Start” on page 49](#), for detailed information about using macros to program the X4 drive.

5.6 Measuring Stator Resistance (RS Measurement)

5.6.1 Activating Automatic RS Measurement Using the Keypad

1. Make sure there is no load applied to the motor and that the motor shaft is free to spin without damage or injury.
2. Enter the Macro programming mode of the X4 keypad by pressing and holding the **PROG** key until the parameter “Appl Macro” appears on the keypad. This takes about two seconds.
3. Scroll through the parameters of the X4 Macro programming mode and configure the following parameters to the data provided on the nameplate of the motor:
 - [Rated Volt \(509\)](#)
 - [Rated Mtr FLA \(510\)](#)
 - [Rated Mtr RPM \(511\)](#)
 - [Power Factor \(515\)](#)
4. Change parameter “Find Mtr Data” ([parameter 519](#)) to a value of “Motor RS.” At this point, the RS Measurement will be armed.
5. Exit the Macro programming mode by pressing the **PROG** key.
6. The Operate screen shows in two ways that an RS Measurement is ready to be made. First, the Control path status field displays “MEA.” Second, a “Mtr Measure” warning flashes, both of these signifying that a measurement is about to be taken.

7. Start the RS Measurement by pressing the **FWD** key. The measurement can only be made with the **FWD** key. The FWD / REV terminals and the **REV** key will not work.
8. The measurement will begin as the drive injects voltage to the motor at zero frequency. The test lasts about two seconds.
9. If the test was successful, the drive will stop and return to the configured control path. The "Motor RS" parameter will contain a new value that is the calculated resistance of the motor.
10. If the test was not successful, the drive will fault with a "RS Meas. Fail" message (Fault 34). If the test fails, you may want to try the test again with a different "Rated Mtr FLA" or different Current Limit percentage.
11. If the measurement process fails for any reason, it is possible to physically measure motor resistance by using an ohmmeter and dividing the result by 2. Then enter this value manually into [parameter 514 \(Motor RS\)](#).

5.6.2 Activating Automatic RS Measurement via Serial Link (Modbus)

1. Make sure there is no load applied to the motor and that the motor shaft is free to spin without damage or injury.
2. Configure the following parameters to the data provided on the nameplate of the motor:
 - [Rated Volt \(509\)](#)
 - [Rated Mtr FLA \(510\)](#)
 - [Rated Mtr RPM \(511\)](#)
 - [Power Factor \(515\)](#)
3. Change parameter "[Find Mtr Data](#)" ([519](#)) to a value of "Motor RS." At this point, the RS Measurement will be armed.
4. Start the RS Measurement by writing a value of 0x0007 to parameter "[SIO Cntl Word](#)" ([904](#)).
5. The measurement begins as the drive injects voltage to the motor at zero frequency. The test lasts about two seconds.
6. If the test was successful, the drive will stop and return to the configured control path. The "Motor RS" parameter will contain a new value that is the calculated resistance of the motor.
7. If the test was not successful, the drive will fault with a "RS Meas. Fail" message (Fault 34). If the test fails, you may want to try the test again with a different "Rated Mtr FLA" or different Current Limit percentage.
8. If the measurement process fails for any reason, it is possible to physically measure motor resistance by using an ohmmeter and dividing the result by 2. Then enter this value manually into [parameter 514 \(Motor RS\)](#).

Chapter 6: Using Macro Mode and Getting a Quick Start

A special Macro programming mode is available with the X4 series of AC drives. The Macro programming mode allows you to customize quickly the most common parameters for your application in the Level 1 group. Macro mode provides special parameters for activating modes of operation by macros, program sequencer, or serial communications.

Parameters important to the drive's operation are also included in Macro mode. Although these parameters are also available with standard programming, the Macro mode allows you to easily configure the drive with essential parameters.

Macros configure what advanced functions will be active in the drive. A macro can also change the default or visibility of a parameter within the programming levels. **Parameter 490 (Appl Macro)** configures what macro will be active in the drive. **Parameter 491 (Seq Appl)** configures the visibility of sequencer parameters and the time base of the sequencer. **Parameter 492 (SIO Visible)** configures whether or not SIO parameters are visible. (See page 50.)

Note that all parameters can be addressed by adding 40000 to the parameter number. For example, parameter **201** (Input Mode) can be addressed by Modbus address 40201.

6.1 Entering Macro Mode

To enter the Macro mode, press and hold the PROGram key for more than three seconds. The drive then enters Macro mode and displays “Hold PROG for Macro Mode.” Following is a list of the different macros available and their features. A description of parameters used in Macro mode begins on [page 50](#).

Factory	The Factory macro provides a simple way to restore the factory default parameter listings.
Fan	The Fan macro provides a basic set-up for Fan applications. Parameters such as the V/Hz curve and terminal strip operation are available in Level 1 programming.
Fan w/ PI	The Fan w/ PI macro allows for a simple set-up for Fan applications requiring process control. Parameters such as the V/Hz curve, terminal strip operation, and PI configuration parameters are available in Level 1 programming.
Pump	The Pump macro provides a basic set-up for Pump applications. Parameters such as the V/Hz curve and terminal strip operation are available in Level 1 programming.
Pump w/ PI	The Pump w/ PI macro allows for a simple set-up for Pump applications requiring process control. Parameters such as the V/Hz curve, terminal strip operation, and PI configuration parameters are available in Level 1 programming.
Vector	The Vector macro activates the sensorless vector control algorithm. When an operation requires low speed and high torque, this macro should be activated.

6.2 Description of Parameters Used in Macro Mode

Parameters **490, 491, and 492** are used only in the Macro mode. Parameters **509, 510, 511, 801, and 810** are used in both Macro and Level 2 programming. X4 parameters are described in “Chapter 7: X4 Parameters” on page 59 of this manual.

490 Appl Macro	Default: Factory	Range: text string Macro														
<p>This parameter configures what macro will be active in the drive. A macro will change a default or visibility of a parameter.</p> <p>The following data values may be assigned to this parameter:</p> <table><tr><th>Macro</th><th>Description</th></tr><tr><td>Factory</td><td>Provides a simple way to restore factory default parameter listings.</td></tr><tr><td>Fan</td><td>Provides a basic set-up for Fan applications, including V/Hz curve and terminal strip operation in Level 1 programming.</td></tr><tr><td>Fan w/PI</td><td>Provides a simple set-up for Fan applications that require process control. Parameters such as V/Hz curve, terminal strip operation, and PI configuration are available in Level 1 programming.</td></tr><tr><td>Pump</td><td>Provides a basic set-up for Pump applications, including V/Hz curve and terminal strip operation in Level 1 programming.</td></tr><tr><td>Pump w/PI</td><td>Provides a simple set-up for Pump applications requiring process control. Parameters such as V/Hz curve, terminal strip operation, and PI configuration are available in Level 1 programming.</td></tr><tr><td>Vector</td><td>Activates the sensorless vector control algorithm. When an operation requires low speed and high torque, this macro should be activated. Note that in Vector control, the drive automatically runs the Motor Rs measurements when leaving PROGram mode.</td></tr></table>			Macro	Description	Factory	Provides a simple way to restore factory default parameter listings.	Fan	Provides a basic set-up for Fan applications, including V/Hz curve and terminal strip operation in Level 1 programming.	Fan w/PI	Provides a simple set-up for Fan applications that require process control. Parameters such as V/Hz curve, terminal strip operation, and PI configuration are available in Level 1 programming.	Pump	Provides a basic set-up for Pump applications, including V/Hz curve and terminal strip operation in Level 1 programming.	Pump w/PI	Provides a simple set-up for Pump applications requiring process control. Parameters such as V/Hz curve, terminal strip operation, and PI configuration are available in Level 1 programming.	Vector	Activates the sensorless vector control algorithm. When an operation requires low speed and high torque, this macro should be activated. Note that in Vector control, the drive automatically runs the Motor Rs measurements when leaving PROGram mode.
Macro	Description															
Factory	Provides a simple way to restore factory default parameter listings.															
Fan	Provides a basic set-up for Fan applications, including V/Hz curve and terminal strip operation in Level 1 programming.															
Fan w/PI	Provides a simple set-up for Fan applications that require process control. Parameters such as V/Hz curve, terminal strip operation, and PI configuration are available in Level 1 programming.															
Pump	Provides a basic set-up for Pump applications, including V/Hz curve and terminal strip operation in Level 1 programming.															
Pump w/PI	Provides a simple set-up for Pump applications requiring process control. Parameters such as V/Hz curve, terminal strip operation, and PI configuration are available in Level 1 programming.															
Vector	Activates the sensorless vector control algorithm. When an operation requires low speed and high torque, this macro should be activated. Note that in Vector control, the drive automatically runs the Motor Rs measurements when leaving PROGram mode.															
491 Seq Appl	Default: Disabled	Range: text string Macro														
<p>This parameter configures sequencer parameters are visible and the time base of the sequencer. The time base may change depending on the timing loops used.</p> <p>The following data values may be assigned to this parameter:</p> <table><tr><th>Macro Value</th><th>Description</th></tr><tr><td>Disabled</td><td>Sequencer disabled and parameters hidden.</td></tr><tr><td>1sec Base</td><td>Sequencer enabled and 1 second time base.</td></tr><tr><td>.1sec Base</td><td>Sequencer enabled and 0.1 second time base.</td></tr><tr><td>.01sec Base</td><td>Sequencer enabled and 0.01 second time base.</td></tr></table>			Macro Value	Description	Disabled	Sequencer disabled and parameters hidden.	1sec Base	Sequencer enabled and 1 second time base.	.1sec Base	Sequencer enabled and 0.1 second time base.	.01sec Base	Sequencer enabled and 0.01 second time base.				
Macro Value	Description															
Disabled	Sequencer disabled and parameters hidden.															
1sec Base	Sequencer enabled and 1 second time base.															
.1sec Base	Sequencer enabled and 0.1 second time base.															
.01sec Base	Sequencer enabled and 0.01 second time base.															
492 SIO Visible	Default: No	Range: text string Macro														
<p>This parameter configures whether SIO parameters are visible.</p> <p>The following data values may be assigned to this parameter:</p> <table><tr><th>Macro Value</th><th>Description</th></tr><tr><td>No</td><td>SIO parameters hidden.</td></tr><tr><td>Yes</td><td>SIO parameters visible.</td></tr></table>			Macro Value	Description	No	SIO parameters hidden.	Yes	SIO parameters visible.								
Macro Value	Description															
No	SIO parameters hidden.															
Yes	SIO parameters visible.															
509 Rated Mtr Volt	Default: Model dependent	Range: 100 V - 690 V Level 2, Macro														
<p>The Rated Motor Voltage parameter configures the rated motor voltage, and allows a user to enter the rated voltage from the motor nameplate to provide optimal control and protection. This is usually the amount of voltage delivered to the motor terminals at the setting of parameter 503 (V/Hz Knee Freq).</p>																
510 Rated Mtr FLA	Default: ND Rating	Range: 50% of ND rating - 200% of ND rating Level 2, Macro														
<p>The Rated Motor FLA parameter allows a user to enter the rated FLA from the motor nameplate to provide optimal control and protection. This parameter should be configured to the value on the nameplate of the motor, as that value is used in calculating the percentage of current at which the drive is operating.</p> <p>For information on motor timed overload operation, and how parameter 510 works with it, see page 74.</p>																

511 Rated Mtr RPM	Default: 1750 rpm	Range: 0-24000 rpm Level 2, Macro												
This parameter replaces the slip compensation parameter setting of the drive so the user does not need to calculate it.														
514 Motor RS	Default: Model-dependent	Range: 0.00-655.35 Ohms Level 2												
This parameter allows direct entry of the Stator Resistance (Rs) of the motor for better vector performance. The motor manufacturer can provide this information, or you can physically measure this value with an ohmmeter. From the line-to-line measurement of motor resistance, enter half the measured value. See "Measuring Stator Resistance (RS Measurement)" on page 47 .														
515 Power Factor	Default: 0.80	Range: 0.50 - 1.00 Level 2												
This parameter allows direct entry of the motor's power factor for better vector performance. The motor manufacturer can provide this information.														
519 Find Mtr Data	Default: Not Active	Range: text string Macro												
This parameter activates the drive's ability to measure the stator resistance of the attached motor. The automatic stator resistance measurement can be performed either through the keypad or through the serial link. See "Measuring Stator Resistance (RS Measurement)" on page 47 for more information about this parameter. The following data values may be assigned:														
<table><tr><td><u>Parameter Value</u></td><td><u>Description</u></td></tr><tr><td>Not Active</td><td>No stator RS measurement.</td></tr><tr><td>Motor RS</td><td>Automatic RS measurement using macro procedure.</td></tr></table>			<u>Parameter Value</u>	<u>Description</u>	Not Active	No stator RS measurement.	Motor RS	Automatic RS measurement using macro procedure.						
<u>Parameter Value</u>	<u>Description</u>													
Not Active	No stator RS measurement.													
Motor RS	Automatic RS measurement using macro procedure.													
801 Program Number	Default: 0	Range: 0 to 9999 Level 2, Macro												
This parameter (Special Program Number) provides a method of enabling hidden functions in the drive and storing parameters to the customer set.														
<table><tr><td><u>Data Value</u></td><td><u>Special Function Configured</u></td></tr><tr><td>0</td><td>Standard program</td></tr><tr><td>1</td><td>Reset all parameters to factory default values (display = SETP).</td></tr><tr><td>2</td><td>Store customer parameter values (display = STOC).</td></tr><tr><td>3</td><td>Load customer parameter values (display = SETC).</td></tr><tr><td>4</td><td>Swap active parameters with customer stored settings.</td></tr></table>			<u>Data Value</u>	<u>Special Function Configured</u>	0	Standard program	1	Reset all parameters to factory default values (display = SETP).	2	Store customer parameter values (display = STOC).	3	Load customer parameter values (display = SETC).	4	Swap active parameters with customer stored settings.
<u>Data Value</u>	<u>Special Function Configured</u>													
0	Standard program													
1	Reset all parameters to factory default values (display = SETP).													
2	Store customer parameter values (display = STOC).													
3	Load customer parameter values (display = SETC).													
4	Swap active parameters with customer stored settings.													
810 Language	Default: English	Range: text string Level 2, Macro												
This parameter configures the language in which text strings will be displayed.														
The following data values may be assigned to this parameter:														
<table><tr><td><u>Parameter Value</u></td></tr><tr><td>English</td></tr><tr><td>Spanish</td></tr><tr><td>German</td></tr><tr><td>Italian</td></tr><tr><td>French</td></tr></table>			<u>Parameter Value</u>	English	Spanish	German	Italian	French						
<u>Parameter Value</u>														
English														
Spanish														
German														
Italian														
French														

6.3 Macro Mode Applications and Included Parameters

The tables below list the different applications and the Level 1 parameters included in the macro for that application. The Factory Application macro is the core package (listed in [Table 6-1](#)); the other macros include the Factory Application macro parameters as well as the ones listed in their respective tables ([Tables 6-2, 6-3, 6-4, 6-5, and 6-6](#)). The macro mode applications are as follows:

Factory Application ([Table 6-1](#))

Fan Application ([Table 6-2](#))

Fan with PI Application ([Table 6-3](#))

Pump Application ([Table 6-4](#))

Pump with PI Application ([Table 6-5](#))

Vector Application ([Table 6-6](#))

Table 6-1: Factory Application Macro

Para. #	Parameter Name	Default	See Page
001	Model Number	Read-only	60
010	Last Fault	Read-only	60
102	Output Freq	Read-only	61
103	Output Voltage	Read-only	61
104	Output Current	Read-only	61
105	Drive Load	Read-only	61
106	Load Torque	Read-only	61
107	Drive Temp	Read-only	61
111	DC Bus Voltage	Read-only	61
201	Input Mode	Local Only	62
202	Rev Enable	Forward	62
301	Min Frequency	0.0 Hz	65
302	Max Frequency	60.0 Hz	65
303	Preset Freq 1	5.0 Hz	65
402	Accel Time 1	5.0 sec	66
403	Decel Time 1	5.0 sec	66
502	Voltage Boost	0.0%	69
610	Timed OL Select	Std Ind 60s	74
700	Vmet Config	Freq Out	75
705	Relay 1 Select	Drv Fault	76
706	Relay 2 Select	Drive Run	76

Table 6-2: Fan Application Macro (Core Factory Application from Table 6-1, **plus** the following parameters)

Para. #	Parameter Name	Default	See Page
203	Stop Key Remote	Coast	62
204	Ref Select	Vin1	63
205	Vin1 Config	0-10 V	63
206	Vin1 Offset	0.00%	63
207	Vin1 Span	100.00%	64
406	DC Inject Config	DC at Start	67
501	V/Hz Select	Fan Fixed	69
504	Skip Freq Band	0.2 Hz	70
505	Skip Freq 1	0.0 Hz	70
608	Restart Number	0	74
609	Restart Delay	60 sec	74
702	Imet Config	Current Out	75
703	Imet Span	100.0%	75
704	Imet Offset	0.0%	75
721	DI1 Configure	Preset 1	77
722	DI2 Configure	Preset 2	77
723	DI3 Configure	Preset 3	77
724	DI4 Configure	Ref Switch	77
725	DI5 Configure	Fault Reset	77
803	PWM Frequency	16.0 kHz	78
804	Display Mode	Output Freq	78

Table 6-3: Fan with PI Application Macro (Core Factory Application from Table 6-1, **plus** the following parameters)

Para. #	Parameter Name	Default	See Page
203	Stop Key Remote	Coast	62
204	Ref Select	Vin1	63
205	Vin1 Config	0-10 V	63
206	Vin1 Offset	0.00%	63
207	Vin1 Span	100.00%	64
208	Cin Config	0-20 mA 50	64
209	Cin Offset	0.0%	64
210	Cin Span	100.0%	64
211	Vin2 Config	0-10 V	64
212	Vin2 Offset	0.00%	64
213	Vin2 Span	100.00%	64
401	Ramp Select	ART-DI	66
406	DC Inject Config	DC at Start	67
501	V/Hz Select	Fan Fixed	69
504	Skip Freq Band	0.2 Hz	70
505	Skip Freq 1	0.0 Hz	70
608	Restart Number	0	74
609	Restart Delay	60 sec	74
702	Imet Config	Current Out	75
703	Imet Span	100.0%	75
704	Imet Offset	0.0%	75
721	DI1 Configure	Preset 1	77
722	DI2 Configure	Preset 2	77
723	DI3 Configure	Preset 3	77
724	DI4 Configure	Ref Switch	77
725	DI5 Configure	PI Enable	77
803	PWM Frequency	16.0 kHz	78
804	Display Mode	Output Freq	78
850	PI Configure	No PI	80
851	PI Feedback	Vin1	80
852	PI Prop Gain	0	80
853	PI Int Gain	0	81
854	PI Feed Gain	1000	81
857	PI High Corr	100.00	81
858	PI Low Corr	0.00%	81

Table 6-4: Pump Application Macro (Core Factory Application from Table 6-1, **plus** the following parameters)

Para. #	Parameter Name	Default	See Page
203	Stop Key Remote	Coast	62
204	Ref Select	Vin1	63
205	Vin1 Config	0-10 V	63
206	Vin1 Offset	0.00%	63
207	Vin1 Span	100.00%	64
401	Ramp Select	ART-DI	66
501	V/Hz Select	Pump Fxd	69
608	Restart Number	0	74
609	Restart Delay	60 sec	74
702	Imet Config	Current Out	75
703	Imet Span	100.0%	75
704	Imet Offset	0.0%	75
721	DI1 Configure	Preset 1	77
722	DI2 Configure	Preset 2	77
723	DI3 Configure	Preset 3	77
724	DI4 Configure	Ref Switch	77
725	DI5 Configure	Fault Reset	77
803	PWM Frequency	16.0 kHz	78
804	Display Mode	Output Freq	78

Table 6-5: Pump with PI Application Macro (Core Factory Application from Table 6-1, **plus** the following parameters)

Para. #	Parameter Name	Default	See Page
203	Stop Key Remote	Coast	62
204	Ref Select	Vin1	63
205	Vin1 Config	0-10 V	63
206	Vin1 Offset	0.00%	63
207	Vin1 Span	100.00%	64
208	Cin Config	0-20 mA 50	64
209	Cin Offset	0.0%	64
210	Cin Span	100.0%	64
211	Vin2 Config	0-10 V	64
212	Vin2 Offset	0.00%	64
213	Vin2 Span	100.00%	64
401	Ramp Select	ART-DI	66
406	DC Inject Config	DC at Stop	67
501	V/Hz Select	Pump Fxd	69
504	Skip Freq Band	0.2 Hz	70
505	Skip Freq 1	0.0 Hz	70
608	Restart Number	0	74
609	Restart Delay	60 sec	74
702	Imet Config	Current Out	75
703	Imet Span	100.0%	75
704	Imet Offset	0.0%	75
721	DI1 Configure	Preset 1	77
722	DI2 Configure	Preset 2	77
723	DI3 Configure	Preset 3	77
724	DI4 Configure	Ref Switch	77
725	DI5 Configure	PI Enable	77
803	PWM Frequency	16.0 kHz	78
804	Display Mode	Output Freq	78
850	PI Configure	No PI	80
851	PI Feedback	Vin1	80
852	PI Prop Gain	0	80
853	PI Int Gain	0	81
854	PI Feed Gain	1000	81
857	PI High Corr	100.00	81
858	PI Low Corr	0.00%	81

Table 6-6: Vector Application Macro (Core Factory Application from Table 6-1, **plus** the following parameters)

Para. #	Parameter Name	Default	See Page
501	V/Hz Select	Vector	69
509	Rated Mtr Volt	Model dependent	70
510	Rated Mtr FLA	ND rating	70
511	Rated Mtr RPM	1750 rpm	70
514	Motor RS	Model dependent	70
515	Power Factor	0.8	70
516	Slip Comp Enable	No	71
519	Find Mtr Data	Not Active	71
520	Filter FStator	8 mS	71
521	Start Field En	No	71
522	Filter Time Slip	100 mS	71
523	Id Percent	Read-only	72
524	Iq Percent	Read-only	72
803	PWM Frequency	3.0 kHz	78
804	Display Mode	Std Display	78

6.4 Quick Start

The following procedure is for operators using simple applications, who would like to get started quickly. *Be sure to read and understand all the sections in this chapter before proceeding with these instructions.* If you are using remote operators, substitute the speed potentiometer for the **INC** and **DEC** keys (up and down arrows), and the remote Run/Stop switch for the **FWD** key in the following instructions.

CAUTION

IMPROPER EQUIPMENT COORDINATION

Verify that proper voltage is connected to the drive before applying power.

Failure to observe this instruction can result in injury or equipment damage.

ATTENTION

MAUVAISE COORDINATION DES APPAREILS

Vérifiez que l'onduleur est raccordée à la bonne tension avant de le mettre sous tension.

Si cette directive n'est pas respectée, cela peut entraîner des blessures corporelles ou des dommages matériels.

1. Follow all precautions and procedures in “[Chapter 3: Receiving and Installation](#)” on page 20.
2. Find the motor nameplate, and using [parameters 509 \(Rated Mtr Volt\)](#), [510 \(Rated Mtr FLA\)](#), [511 \(Rated Mtr RPM\)](#), and [515 \(Power Factor\)](#), set up the motor parameters appropriately. [Parameter 514 \(Motor RS\)](#) should also be set up accurately so the drive can run its routine to measure motor stator resistance. (See “[Measuring Stator Resistance \(RS Measurement\)](#)” on page 47.)
3. Apply AC power to the input terminals. For about 2 seconds the display will show all segments active. The display then changes to zeros.
4. The factory settings are for keypad-only operation in the forward direction—that is, the **REV** key is disabled. Press the **FWD** key, which causes the FWD indicator to illuminate.
5. Press the **INC** key to increase the desired running frequency. When the display gets to 0.1 Hz, the drive starts to produce an output.
6. When the motor starts to turn, check the rotation. If the motor is turning in the wrong direction, *press **STOP**, remove AC power, and wait for all indicators to go out.* After the STATUS indicator has gone out, reverse any two of the motor leads at T1/U, T2/V, or T3/W.
7. The X4 drive is preset to run a typical NEMA B 4-pole induction motor to a maximum speed of 60.0 Hz with both acceleration and deceleration times set to 5.0 seconds.
8. Use the **INC** and **DEC** keys to set the proper running speed of the motor and the **FWD** and **STOP** keys to control its operation.

Note that the X4 external cooling fans operate continuously for the first five minutes of power-up time; after this point, they operate only as needed to control the operating temperature of the drive.

Chapter 7: X4 Parameters

7.1 Introduction

The X4 AC drive incorporates a comprehensive set of parameters that allow you to configure the device to meet the requirements of your particular application.

Note that pressing the **PROG** key enters Level 1 programming. Press **SHIFT+PROG** to enter Level 2 programming. Press **ENTER+PROG** to show only those parameters that have changed from the factory default values.

This chapter describes the available parameters and the values that may be assigned to them. The parameter summary table at the front of this manual provides a summary of all parameters including their ranges and default values.

Note that all parameters can be addressed by adding 40000 to the parameter number. For example, [parameter 201 \(Input Mode\)](#) can be addressed by Modbus address **40201**.

7.2 Level 1 Parameters

The most commonly configured X4 parameters are stored in a group named Level 1. This group is easily accessed by pressing the **PROG** key as described in “[Chapter 5: Keypad Operation and Programming](#)” on page 40. The following table lists the parameters in this group; for further information on the parameter, please turn to the indicated page.

Table 7-1: Parameters Available in Level 1 Programming (Factory Macro)

Para. #	Parameter Name	See Page	Para. #	Parameter Name	See Page
001	Model Number	60	303	Preset Freq 1	65
010	Last Fault	60	402	Accel Time 1	66
102	Output Freq	61	403	Decel Time 1	66
103	Output Voltage	61	502	Voltage Boost	69
104	Output Current	61	610	Timed OL Select	74
105	Drive Load	61	700	Vmet Config	75
106	Load Torque	61	705	Relay 1 Select	76
107	Drive Temp	61	706	Relay 2 Select	76
111	DC Bus Voltage	61			
201	Input Mode	62			
202	Rev Enable	62			
301	Min Frequency	65			
302	Max Frequency	65			

7.3 Description of Parameters

Table 7-2 lists the X4 parameters in the order in which they appear in the keypad display. For each parameter, the table lists the default value and range and also describes the use of the parameter.

Table 7-2: Description of X4 Parameters (Page 1 of 25)

001 Model Number	Read-Only	Range: text string Level: 1,2
Parameter 001 , the Model Number parameter, contains the portion of the X4 model number related to voltage and horsepower. The number format is <i>vvhhf</i> , where <i>vv</i> is the code for the input voltage (19=115 Vac single-phase; 20=230 Vac, three-phase; 40=460 Vac, three-phase; 50=575 Vac, three-phase); <i>hh</i> is horsepower; and <i>f</i> is the fractional part of the horsepower. Example: 20020 = 230 Vac, three-phase, 2.0 HP model.		
002 Software Rev	Read-Only	Range: 0.00-99.99 Level: 2
Parameter 002 , the Software Revision parameter, displays the software revision that is installed in the drive. Options: 0.00-99.99		
003 Rated Current	Read-Only	Range: 0.0-200.0 A Level: 2
Parameter 003 , the Rated Current parameter, displays the normal duty current rating of the model of drive.		
005 Serial No 1	Read-Only	Range: 0-65535 Level: 2
Parameter 005 , Serial No 1 , contains a number that corresponds to the year and week in which the drive was manufactured.		
006 Serial No 2	Read-Only	Range: 0-65535 Level: 2
Parameter 006 , Serial No 2 , contains a number that determines the number of the drive that was manufactured during the week of Serial No 1. Options: 0.00-99.99		
010 Last Fault	Read-Only	Range: text string Level: 1,2
Parameter 010 , Last Fault , lists the fault that occurred most recently. For more information, refer to Chapter 8, Troubleshooting, beginning on page 93 .		
025 4th Fault	Read-Only	Range: text string Level: 2
Parameter 025 , 4th Fault , lists the fault that occurred 1 before the last fault. For more information, refer to Chapter 8, Troubleshooting, beginning on page 93 .		
040 3rd Fault	Read-Only	Range: text string Level: 2
Parameter 040 , 3rd Fault , lists the fault that occurred 2 before the last. For more information, refer to Chapter 8, Troubleshooting, beginning on page 93 .		
055 2nd Fault	Read-Only	Range: text string Level: 2
Parameter 055 , 2nd Fault , lists the fault that occurred 3 before the last. For more information, refer to Chapter 8, Troubleshooting, beginning on page 93 .		
070 1st Fault	Read-Only	Range: text string Level: 2
Parameter 070 , 1st Fault , lists the fault that occurred 4 before the last. For more information, refer to Chapter 8, Troubleshooting, beginning on page 93 .		

Table 7-2: Description of X4 Parameters (Page 2 of 25)

102 Output Freq	Read-Only	Range: 0.0 to 400.0 Hz Levels 1,2
Parameter 102 , the Output Frequency parameter, shows the frequency being applied to the motor connected to the drive (ramp).		
103 Output Voltage	Read-Only	Range: 0 to 600 V Levels 1,2
Parameter 103 , the Output Voltage parameter, displays the output voltage of the drive.		
104 Output Current	Read-Only	Range: 0.0 to 200.0 A Levels 1,2
Parameter 104 , the Output Current parameter, displays the output current of the drive.		
105 Drive Load	Read-Only	Range: -200.0% to 200.0% Levels 1,2
Parameter 105 , the Drive Load parameter, shows the percentage torque of the drive when operating below the knee frequency. It displays Load Torque if the frequency is below FKNEE, and displays Power if above FKNEE. The output current is measured with the motor power factor applied to an accuracy of $\pm 20\%$. The parameter value is positive when the motor is pulling a load ("motoring mode") and negative when being pulled by a load ("regenerative mode").		
106 Load Torque	Read-Only	Range: -200.0%-200.0% Levels 1,2
Parameter 106 , the Load Torque parameter, displays the load torque of the drive.		
107 Drive Temp	Read-Only	Range: -20.0 to 200.0 °C Levels 1,2
Parameter 107 , the Drive Temp parameter, shows the actual temperature of the drive's heatsink. The drive will fault when the internal temperature reaches 85°C.		
108 Total Run Time	Read-Only	Range: 0.0 - 6553.5 h Level: 2
Parameter 108 , Total Run Time , is a resettable timer for drive operation. To reset the timer, enter 10 in parameter 801 , Program Number .		
109 Power On Hours	Read-Only	Range: 0 - 65535 h Level: 2
Parameter 109 , Power On Hours , displays how long the drive has been powered up.		
110 Stator Freq	Read-Only	Range: 0.0-400.0 Hz Level: 2
Parameter 110 , Stator Frequency , displays the frequency the drive is applying to the motor stator.		
111 DC Bus Voltage	Read-Only	Range: 0-1000 Vdc Level: 1,2
Parameter 111 , DC Bus Voltage , displays the voltage on the DC bus.		
115 Drive Power Out	Read-Only	Range: 0.0%-200.0% Level: 2
This parameter displays the power being output by the drive in terms of drive rating. The measurement is calculated by scaling the Load Torque value by the ratio of Volt-Amps to Rated Volt-Amps, and adjusted by Output Frequency.		

Table 7-2: Description of X4 Parameters (Page 3 of 25)

201 Input Mode	Default = Local only	Range: text string Levels 1,2																				
<p>Parameter 201, the Input Mode parameter, configures local and remote control of the Start/Stop source and the reference source. Refer to “Appendix A: Parameter 201 Options” on page 99, for more information.</p> <p>The following data values may be assigned to this parameter:</p> <table><tr><th>Parameter Value</th><th>Run/Stop Control</th></tr><tr><td>Local only</td><td>Local keypad operation only</td></tr><tr><td>Remote only</td><td>Terminal strip operation only</td></tr><tr><td>L/R Rem Ref</td><td>LOCAl Keypad Start/Stop and Speed REMote Keypad Start/Stop, Terminal Strip Speed Reference</td></tr><tr><td>L/R Rem Ctl</td><td>LOCAl Keypad Start/Stop and Speed REMote Keypad Speed Reference, Terminal Strip Start/Stop</td></tr><tr><td>L/R Rem Bth</td><td>LOCAl Keypad Start/Stop and Speed REMote Terminal Strip Start/Stop and Speed Reference</td></tr><tr><td>EMOP^{1} {2} {4}</td><td>Terminal strip operation using Increase/Decrease buttons</td></tr><tr><td>EMOP2^{1} {3} {4}</td><td>Terminal strip operation using Increase/Decrease buttons</td></tr><tr><td>LOC/EMOP^{1} {2} {4}</td><td>LOCAl Keypad Start/Stop and Speed REMote Terminal strip operation using Increase/Decrease</td></tr><tr><td>LOC/EMOP2^{1} {3} {4}</td><td>LOCAl Keypad Start/Stop and Speed REMote Terminal strip operation using Increase/Decrease</td></tr></table>			Parameter Value	Run/Stop Control	Local only	Local keypad operation only	Remote only	Terminal strip operation only	L/R Rem Ref	LOCAl Keypad Start/Stop and Speed REMote Keypad Start/Stop, Terminal Strip Speed Reference	L/R Rem Ctl	LOCAl Keypad Start/Stop and Speed REMote Keypad Speed Reference, Terminal Strip Start/Stop	L/R Rem Bth	LOCAl Keypad Start/Stop and Speed REMote Terminal Strip Start/Stop and Speed Reference	EMOP ^{1} {2} {4}	Terminal strip operation using Increase/Decrease buttons	EMOP2 ^{1} {3} {4}	Terminal strip operation using Increase/Decrease buttons	LOC/EMOP ^{1} {2} {4}	LOCAl Keypad Start/Stop and Speed REMote Terminal strip operation using Increase/Decrease	LOC/EMOP2 ^{1} {3} {4}	LOCAl Keypad Start/Stop and Speed REMote Terminal strip operation using Increase/Decrease
Parameter Value	Run/Stop Control																					
Local only	Local keypad operation only																					
Remote only	Terminal strip operation only																					
L/R Rem Ref	LOCAl Keypad Start/Stop and Speed REMote Keypad Start/Stop, Terminal Strip Speed Reference																					
L/R Rem Ctl	LOCAl Keypad Start/Stop and Speed REMote Keypad Speed Reference, Terminal Strip Start/Stop																					
L/R Rem Bth	LOCAl Keypad Start/Stop and Speed REMote Terminal Strip Start/Stop and Speed Reference																					
EMOP ^{1} {2} {4}	Terminal strip operation using Increase/Decrease buttons																					
EMOP2 ^{1} {3} {4}	Terminal strip operation using Increase/Decrease buttons																					
LOC/EMOP ^{1} {2} {4}	LOCAl Keypad Start/Stop and Speed REMote Terminal strip operation using Increase/Decrease																					
LOC/EMOP2 ^{1} {3} {4}	LOCAl Keypad Start/Stop and Speed REMote Terminal strip operation using Increase/Decrease																					
<p>Notes:</p> <ol style="list-style-type: none">1. Electronic Motor Operated Potentiometer (EMOP): simulates the INC / DEC keys on keypad using external remote N/O pushbuttons2. Commanded output frequency returns to the value of parameter 301 (Min Frequency) when the drive is stopped.3. Commanded output frequency remains at the previous setpoint when the drive is stopped.4. The parameters that set the functions of the designated digital inputs for EMOP must be configured as “EMOP+” and “EMOP–” to complete the implementation.																						
202 Rev Enable	Default = Forward	Range: text string Levels 1,2																				
<p>Parameter 202, the Rev Enable parameter, configures whether the REV key on the keypad is functional. If this parameter is configured to “Forward,” then pressing the REV key on the keypad will have no effect. Note that this parameter does not affect terminal strip operation.</p> <p>The following data values may be assigned to this parameter:</p> <table><tr><th>Parameter Value</th><th>Description</th></tr><tr><td>Forward</td><td>Forward Only, REV key disabled</td></tr><tr><td>FWD/REV</td><td>FWD and REV keys enabled</td></tr></table>			Parameter Value	Description	Forward	Forward Only, REV key disabled	FWD/REV	FWD and REV keys enabled														
Parameter Value	Description																					
Forward	Forward Only, REV key disabled																					
FWD/REV	FWD and REV keys enabled																					
203 Stop Key Remote	Default = Coast	Range: text string Level: 2																				
<p>Parameter 203, the Stop Key Remote parameter, configures how the Stop key on the keypad will operate when the keypad is not the drive’s control source (terminals, SIO, or SEQ).</p> <p>The following data values may be assigned to this parameter:</p> <table><tr><th>Parameter Value</th><th>Description</th></tr><tr><td>Coast</td><td>Drive will coast to a stop</td></tr><tr><td>Ramp</td><td>Drive will ramp to a stop using Decel #1</td></tr><tr><td>Disabled</td><td>Stop key will have no function</td></tr></table>			Parameter Value	Description	Coast	Drive will coast to a stop	Ramp	Drive will ramp to a stop using Decel #1	Disabled	Stop key will have no function												
Parameter Value	Description																					
Coast	Drive will coast to a stop																					
Ramp	Drive will ramp to a stop using Decel #1																					
Disabled	Stop key will have no function																					

Table 7-2: Description of X4 Parameters (Page 4 of 25)

204-Ref Select	Default = Vin1	Range: text string Level: 2
Parameter 204 , the Ref Select parameter, configures how the reference is determined when the reference source is configured to terminals.		
The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
Vin1	Vin1 terminal (configured by parameter 205)	
Cin	Cin terminal (configured by parameter 208)	
Vin2	Vin2 terminal (configured by parameter 211)	
Vin1 6FS ^{3}	Vin1 terminal with 6x pulse train from an X4, WFC, WF2 drive	
Vin1 48FS ^{3}	Vin1 terminal with 48x pulse train from an X4, WFC, WF2 drive	
Vin1+Cin	Sum of signal at Vin1 and the signal at Cin	
Vin1+Vin2	Sum of signal at Vin1 and the signal at Vin2	
Vin1-Cin	Difference between the signal at Vin and the signal at Cin	
Vin1-Vin2	Difference between the signal at Vin and the signal at Vin2	
Max Input ^{2}	Greatest signal between Vin, Vin2 and Cin	
Vin1/Cin DI ^{1}	Switch between Vin and Cin using a Digital Input	
Vin1/2 DI ^{1}	Switch between Vin and Vin2 using a Digital Input	
Vin1/KYP DI ^{1}	Switch between Vin and Keypad reference using Digital Input	
Cin/KYP DI ^{1}	Switch between Cin and Keypad reference using Digital Input	
Notes:		
1. The parameter that sets the function of the designated digital input must be configured as "Ref Switch" to complete the implementation.		
2. The "Max Input" option will compare the inputs of all three analog inputs (Vin1, Vin2, Cin) and take the analog input with the highest percentage input after span, offset, and inversion is applied.		
3. When using a 6FS signal, parameter 205 should be set to 0-10V.		
205 Vin1 Config	Default = 0-10V	Range: text string Level: 2
Parameter 205, Vin1 Config , selects the type of signal for analog input Vin1. Vin1 can be voltage, current, or pulse train input. This parameter also determines input range, impedance, and characteristics. Use parameters 206 (Vin1 Offset) and 207 (Vin1 Span) to customize the selected range. The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
0-10V	0-10Vdc signal (use with Vin1 6FS and Vin1 48FS options)	
0-10V Brk W	0-10Vdc signal with broken wire detection for speed pot operation	
0-10V I	0-10Vdc signal Inverted	
0-10V Bipol	0-10Vdc signal (5Vdc is stop with 0Vdc Full Rev and 10Vdc Full FWD)	
0-5V	0-5Vdc signal	
0-5V I	0-5Vdc signal Inverted	
0-20mA 250	0 to 20 mA current signal with 250 Ohm load	
0-20mA 250I	0 to 20 mA current signal with 250 Ohm load Inverted	
4-20mA 250	4 to 20 mA current signal with 250 Ohm load load	
4-20mA 250I	4 to 20 mA current signal with 250 Ohm load Inverted	
PT 0-1kHz	0 to 1 kHz pulse train	
PT 0-10kHz	0 to 10 kHz pulse train	
PT 0-100kHz	0 to 100 kHz pulse train	
Inverted signal response means that minimum input signal produces maximum inverter output frequency and maximum input signal produces minimum output frequency.		
206 Vin1 Offset	Default = 0.00%	Range: 0.0 to 100.0% Level: 2
Parameter 206, Vin1 Offset , configures the input range (offset) for analog input Vin1 that will affect speed or torque limit functions. It is expressed as a percentage of the maximum value of the input signal.		
Note that if the input signal drops below the offset value or if the input signal is lost (if no offset is configured), fault 22 will be generated. See parameter 222 for options related to the drive's response to loss of input signal.		

Table 7-2: Description of X4 Parameters (Page 5 of 25)

207 Vin1 Span	Default = 100%	Range: 10.0 to 200.0% Level: 2
Parameter 207 , the Vin1 Span parameter, is used to alter the input range (span) of the input signal for analog input Vin1 that will affect speed or torque limit functions. For example, if parameter 205, Vin1 Config , selects the 0 to 10 Vdc input signal, setting this parameter to 50% reduces it to 0 to 5 Vdc.		
208-Cin Config	Default = 0-20mA 50	Range: text string Level: 2
Parameter 208 , Cin Config , selects the type of signal for analog input Cin. Parameters 209 (Cin Offset) and 210 (Cin Span) may be used to customize the selected range. The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
4-20mA 50	4 to 20 mA current signal with 50 Ohm load	
4-20mA 50I	4 to 20 mA current signal with 50 Ohm load Inverted	
0-20mA 50	0 to 20 mA current signal with 50 Ohm load	
0-20mA 50I	0 to 20 mA current signal with 50 Ohm load Inverted	
Inverted signal response means that minimum input signal produces maximum inverter output frequency and maximum input signal produces minimum output frequency.		
209 Cin Offset	Default = 0.0%	Range: 0.0% to 100.0% Level: 2
Parameter 209 , Cin Offset , configures the offset for analog input Cin expressed as a percentage of the maximum value of the input signal. See parameter 222 for options related to the drive's response to loss of input signal.		
210 Cin Span	Default = 100.0%	Range: 10.0% to 200.0%
Parameter 210 , Cin Span , is used to alter the range of the input signal for analog input Cin. For example, if parameter 208 (Cin Config) selects the 0 to 20 mA input signal, setting this parameter to 50% reduces it to 0 to 10 mA.		
211 Vin2 Config	Default = 0-10 V	Range: text string Level: 2
Parameter 211 , Vin2 Config , selects the type of signal for analog input Vin2. Parameters 212 (Vin2 Offset) and 213 (Vin2 Span) may be used to customize the selected range. The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
0-10V	0-10Vdc signal	
0-10V Brk W	0-10Vdc signal with broken wire detection for speed pot operation	
0-10V I	0-10Vdc signal inverted	
0-10V Bipol	0-10Vdc signal (5Vdc is stop with 0Vdc Full REV and 10Vdc Full FWD)	
0-5V	0-5Vdc signal	
0-5V I	0-5Vdc signal inverted	
212 Vin2 Offset	Default = 0.0%	Range: 0.0% to 100.0% Level: 2
Parameter 212 , Vin2 Offset , configures the offset for analog input Vin2 expressed as a percentage of the maximum value of the input signal. See parameter 222 for options related to the drive's response to loss of input signal.		
213 Vin2 Span	Default = 100%	Range: 10.0 to 200.0%
Parameter 213 , Vin2 Span , is used to alter the range of the input signal for analog input Vin2. For example, if parameter 211 (Vin2 Config) selects the 0 to 10Vdc input signal, setting this parameter to 50% reduces it to 0 to 5Vdc.		
214 Vin1 Filter Time	Default = 20 ms	Range: 0 to 1000 ms Level: 2
This parameter configures the time constant of a filter for the Vin1 analog input. When the parameter value is set to 0 ms, there is no software filtering of the analog input. A value above 0 ms causes the drive to filter the analog signal. Note that long filter times will create a delay in the drive response to signal changes.		
215 Cin Filter Time	Default = 20 ms	Range: 0 to 1000 ms Level: 2
This parameter configures the time constant of a filter of the Cin analog input. When the parameter value is set to 0 ms, there is no software filtering of the analog input. A value above 0 ms causes the drive to filter the analog signal. Note that long filter times will create a delay in the drive response to signal changes.		

Table 7-2: Description of X4 Parameters (Page 6 of 25)

216 Vin2 Filter Time	Default = 20 ms	Range: 0 to 1000 ms Level: 2												
<p>This parameter configures the time constant of a filter for the Vin2 analog input. When the parameter value is set to 0 ms, there is no software filtering of the analog input. A value above 0 ms causes the drive to filter the analog signal.</p> <p>Note that long filter times will create a delay in the drive response to signal changes.</p>														
217 Trim Ref Enable	Default = Disabled	Range: text string Level: 2												
<p>This parameter enables or disables trimming of the drive reference by an analog input and selects which analog input will perform the trimming function.</p> <p>Speed Reference = Main reference + (Trim % Factor) * value of Parameter 217 * Max Frequency / 100%</p> <table><tr><td><u>Parameter Value</u></td><td><u>Description</u></td></tr><tr><td>Disabled</td><td>No trimming of drive reference</td></tr><tr><td>Vin1</td><td>Value of Vin1 will be used in the calculation above</td></tr><tr><td>Vin2</td><td>Value of Vin2 will be used in the calculation above</td></tr><tr><td>Cin</td><td>Value of Cin will be used in the calculation above</td></tr><tr><td>Fxd Trim %</td><td>Value of Fxd Trim % will be used</td></tr></table> <p>Drive Reference = Drive Reference + (Trim % Factor) * Max Frequency / 100%</p> <p>Note that setting a parameter for a Bipolar input value allows trimming both positive and negative around the reference value.</p>			<u>Parameter Value</u>	<u>Description</u>	Disabled	No trimming of drive reference	Vin1	Value of Vin1 will be used in the calculation above	Vin2	Value of Vin2 will be used in the calculation above	Cin	Value of Cin will be used in the calculation above	Fxd Trim %	Value of Fxd Trim % will be used
<u>Parameter Value</u>	<u>Description</u>													
Disabled	No trimming of drive reference													
Vin1	Value of Vin1 will be used in the calculation above													
Vin2	Value of Vin2 will be used in the calculation above													
Cin	Value of Cin will be used in the calculation above													
Fxd Trim %	Value of Fxd Trim % will be used													
218 Trim % Factor	Default = 0.0%	Range: -100.0% to +100.0% Level 2												
<p>This parameter determines the percentage of the analog input signal selected in Parameter 217, Trim Ref Enable, that will affect the reference signal.</p>														
222 Ref Loss Config	Default = No Fault	Range: text string Level 2												
<p>This parameter allows for the control of the drive's response to a 4-20mA input on either the Vin1 or Cin input terminals when the input drops below approximately 3mA. The default value is No Fault. The options for this parameter are:</p> <table><tr><td>Retain Spd</td><td>Hold the last operating speed</td></tr><tr><td>Preset Spd2</td><td>Go to the speed programmed at address 304</td></tr><tr><td>Fault</td><td>Drive faults with an F22 Reference Loss indication</td></tr><tr><td>No Fault</td><td>Drive does NOT fault; operating frequency drops to the limit set at Parameter 301, Min Frequency</td></tr></table>			Retain Spd	Hold the last operating speed	Preset Spd2	Go to the speed programmed at address 304	Fault	Drive faults with an F22 Reference Loss indication	No Fault	Drive does NOT fault; operating frequency drops to the limit set at Parameter 301, Min Frequency				
Retain Spd	Hold the last operating speed													
Preset Spd2	Go to the speed programmed at address 304													
Fault	Drive faults with an F22 Reference Loss indication													
No Fault	Drive does NOT fault; operating frequency drops to the limit set at Parameter 301, Min Frequency													
301 Min Frequency	Default = 0.0%	Range: 0.0-Max Freq												
<p>Parameter 301, Minimum Frequency, configures the minimum frequency output of the drive. This parameter governs the minimum frequency when operating from the keypad or from an analog input. The preset speeds can be set lower than the minimum frequency in parameter 301.</p>														
302 Max Frequency	Default: 60 Hz	Range: 0.0 to 400.0 Hz												
<p>Parameter 302, the Maximum Frequency parameter, configures the maximum frequency output of the drive.</p>														
303 Preset Freq 1 (Jog Ref)	Default: 5 Hz	Range: Min-Max Freq Levels 1,2 for 303 Level 2 for 304-308												
304 Preset Freq 2	Default: 10 Hz													
305 Preset Freq 3	Default: 20 Hz													
306 Preset Freq 4	Default: 30 Hz													
307 Preset Freq 5	Default: 40 Hz													
308 Preset Freq 6	Default: 50 Hz													
<p>These parameters configure six preset speeds in addition to the normal reference speed of the drive (as defined by parameters 201 (Input Mode) and 204 (Ref Select)) and the maximum frequency of the drive (as set with parameter 302, Max Frequency). Thus, in effect, you may choose to operate the drive at up to eight different speeds.</p> <p>The eight speeds are selected by a combination of three digital inputs (PS1, PS2, PS3). A wiring scheme for utilizing preset speeds is provided on page 37 along with a truth table showing what combination of inputs results in the selection of which speeds.</p> <p>Note that parameter Parameter 303 (Preset Freq1) also serves as the reference frequency for jogging.</p>														

Table 7-2: Description of X4 Parameters (Page 7 of 25)

309 Cut-Off Freq	Default: 0.0 Hz	Range: 0.0 to 5.0 Hz Level 2
<p>This parameter sets the point where the drive no longer attempts to spin the motor. The range of this parameter is 0.0-5.0 Hz. When the parameter is configured to a value of 0.0 Hz, the drive will operate with no Cut-off Frequency. If the function is enabled, the drive will be able to ramp up through the cut-off frequency range, as in normal operation. If the speed command falls below the cut-off frequency, the drive stops "gating" the outputs and coasts down to zero speed. The keypad display will indicate Zero Speed, and the Forward or Reverse LED will be lit depending on the command. When the reference returns to a value greater than the cut-off frequency, the drive will ramp from 0.0 Hz to the reference frequency.</p>		
401 Ramp Select	Default: ART-DI	Range: text string Level: 2
<p>The Ramp Select parameter configures when the alternate ramps of the drive will be active and whether the drive ramps to stop, or coasts to stop. The following data values may be assigned to this parameter:</p>		
<u>Parameter Value</u>	<u>Type of Ramp</u>	<u>Ramp Configured by:</u>
ART-DI	Ramp-to-Stop	402 (Accel Time 1) and 403 (Decel Time 1) control the operation until terminal strip intervention through a properly-programmed digital input. With an active digital input, ramps 404 (Accel Time 2) and 405 (Decel Time 2) are active.
ART-F/R	Ramp-to-Stop	Running forward: 402 (Accel Time 1) and 403 (Decel Time 1) Running reverse: 404 (Accel Time 2) and 405 (Decel Time 2)
ART-Frq	Ramp-to-Stop	If the output frequency is less than preset frequency parameter 308 (Preset Freq 6) , the active ramp is set by 402 Accel Time 1 and 403 Decel Time 1 . If the output frequency is equal to or greater than 308 (Preset Freq 6) , the active ramp is set by 404 (Accel Time 2) and 405 (Decel Time 2) .
ART-Strt/RS	Ramp-to-Stop	This setting uses the Alternate Ramp for Acceleration (parameter 404) to the set speed, then uses the Main ramps (parameters 402 and 403) when the speeds are adjusted. The drive will revert to the Alternate Decel ramp (parameter 405) when a Stop command is given.
S-Curve	Ramp-to-Stop	The drive uses 402 (Accel Time 1) and 403 (Decel Time 1) for total time and 414 as the S Ramp Rounding value. The amount of rounding is the same for that start and stop of the ramp time.
ART-DI CTS	Coast-to-Stop	Same as ART-DI but with Coast-to-Stop
ART-F/R CTS	Coast-to-Stop	Same as ART-F/R but with Coast-to-Stop
ART-Frq CTS	Coast-to-Stop	Same as ART-Frq but with Coast-to-Stop
ART-Strt/CS	Coast-to-Stop	Same as ART-Strt but with Coast-to-Stop
S-Curve CTS	Coast-to-Stop	Same as S-Curve but with Coast-to-Stop
402 Accel Time 1	Default: 5.0 s	Range: 0.1 to 3200.0 s Levels 1,2
<p>This parameter configures the default length of time to accelerate from 0 Hz to the value of parameter 302 (Max Frequency). This acceleration ramp is selected by parameter 401 (Ramp Select). Note that extremely short acceleration times may result in nuisance fault trips.</p>		
403 Decel Time 1	Default: 5.0 s	Range: 0.1 to 3200.0 s Levels 1,2
<p>This parameter configures the default length of time to decelerate from the value of parameter 302 (Max Frequency) to 0 Hz. The deceleration ramp is selected by parameter 401 (Ramp Select). Note that extremely short deceleration times may result in nuisance fault trips or may require an external dynamic brake or regen current limit.</p>		

Table 7-2: Description of X4 Parameters (Page 8 of 25)

404 Accel Time 2	Default: 3.0 s	Range: 0.1 to 3200.0 s Level 2
<p>This parameter provides an alternate ramping time for the drive when accelerating, configuring the length of time to accelerate from 0 Hz to the value of parameter 302 (Max Frequency). This acceleration ramp is selected by parameter 401 (Ramp Select) or Sequencer configuration.</p> <p>Note that extremely short acceleration times may result in nuisance fault trips.</p>		
405 Decel Time 2	Default: 3.0 s	Range: 0.1 to 3200.0 s Level 2
<p>This parameter provides an alternate ramping time for the drive when decelerating, configuring the length of time to decelerate from the value of parameter 302 (Max Frequency) to 0 Hz. This deceleration ramp is selected by parameter 401 (Ramp Select) or Sequencer configuration.</p> <p>Note that extremely short deceleration times may result in nuisance fault trips or may require an external dynamic brake or regen current limit.</p>		
406 DC Inject Config	Default: DC at Stop	Range: text string Level 2
<p>DC injection braking may be used to stop the motor more quickly than is possible by either a ramp-to-stop or a coast-to-stop. The X4 drive allows DC braking to be initiated either when a digital input assigned to DC braking becomes true, when a specified frequency is reached, or when either of these events occurs.</p> <p>When using a digital input for DC braking, you must use one of the DI parameters to configure the selected digital input for DC braking. The amount of braking force is set by parameter 408 (DC Inject Level). The length of time that the braking force is applied is determined by the time that the selected digital input is active. The second type of DC injection braking supported by the X4 drive is where DC braking occurs at a specified frequency. The duration of the braking is adjusted by parameter 407 (DC Inject Time).</p> <p>With this type of braking, as the drive slows down after a Stop command, DC braking begins when the frequency reaches the value set in parameter 409 (DC Inj Freq). If the frequency at the time of a Stop command is less than that of DC Inj Freq, DC braking begins immediately. The braking continues for the time period specified by parameter DC Inj Freq. Once the time period elapses, the drive may be restarted.</p> <p><u>Parameter Value</u> <u>Description</u></p> <p>DC at Stop DC inject only on Stop</p> <p>DC at Start DC inject only on Start</p> <p>DC at Both DC inject only on both Start and Stop</p> <p>DC on Freq DC inject only on Stop below the set frequency</p>		
407 DC Inject Time	Default: 0.2 sec	Range: 0.0 to 5.0 sec Level 2
<p>If parameter 406 is set to DC at Stop (see page 67), direct current is applied to the motor. This parameter, DC Inject Time, determines how long the direct current will be applied, and how long DC is applied at Start if programmed accordingly.</p> <p>This parameter works in tandem with parameter 410 (DC Inject Config) and the other parameters associated with DC Inject Config. That is, the time period configured by this parameter, DC Inject Time, determines how long DC injection braking will be active. When DC injection braking is controlled by a digital input, the braking continues for as long as the digital input is true, plus the time set by parameter 407 (DC Inject Time). When it is controlled by frequency, however, it continues for the length of time once the drive reaches the frequency set by parameter 409 (DC Inj Freq).</p>		
408 DC Inject Level	Default: 50.0%	Range: 0.0% to 100.0% Level 2
<p>Configures the amount of DC injection that will occur when direct current is injected into the motor windings, which acts as a braking force. The amount of current is expressed as a percentage of nominal motor current. The braking force may be applied when starting or stopping. If this parameter is set to 0.0%, the DC injection is disabled.</p>		

Table 7-2: Description of X4 Parameters (Page 9 of 25)

409 DC Inj Freq	Default: 0 Hz	Range: 0.0 to 20.0 Hz Level 2										
Configures the frequency under which direct current will be applied to the drive when DC Inject Config is set to “DC on Freq.” If this parameter is set to 0.0, the parameter operates in the same way as “DC at Stop.”												
410 DB Config	Default: DB Internal	Range: 0-2 Level 2										
<p>Determines whether an external or internal dynamic brake is utilized or disabled. The drive provides an internal dynamic brake (DB) to assist in stopping. If desired, an external resistor can be connected to DB and B+ for additional capacity. (Note: Size 0 models cannot have an external brake added.)</p> <p>The following data values may be assigned to this parameter:</p> <table><tr><th>Parameter Value</th><th>Description</th></tr><tr><td>DB Internal</td><td>Internal dynamic braking active</td></tr><tr><td>DB External</td><td>External dynamic braking active</td></tr><tr><td>No Dyn Brk</td><td>Dynamic braking circuit disabled</td></tr><tr><td>Int-ARCTIC</td><td>When DB Config is configured to “Int-ARCTIC,” dynamic braking becomes active if the drive temperature drops below -7 degrees C. When the DB becomes active, an “ARCTIC Mode” warning flashes on the keypad. If the drive drops below -10 degrees C, the drive will be disabled and not allowed to run. The keypad will indicate a “Not enabled” state at this point. If the drive heats up after being below -10 degrees C, the drive must meet the following criteria before operating again: a) Drive temperature must be above -9 degrees C, and b) Drive temperature must stay above -9 degrees C until a time period has elapsed. The time period is dependent on how far below -10 degrees C the drive was. Each degree below -10 degrees C adds another 4 minutes before restart.</td></tr></table>			Parameter Value	Description	DB Internal	Internal dynamic braking active	DB External	External dynamic braking active	No Dyn Brk	Dynamic braking circuit disabled	Int-ARCTIC	When DB Config is configured to “Int-ARCTIC,” dynamic braking becomes active if the drive temperature drops below -7 degrees C. When the DB becomes active, an “ARCTIC Mode” warning flashes on the keypad. If the drive drops below -10 degrees C, the drive will be disabled and not allowed to run. The keypad will indicate a “Not enabled” state at this point. If the drive heats up after being below -10 degrees C, the drive must meet the following criteria before operating again: a) Drive temperature must be above -9 degrees C, and b) Drive temperature must stay above -9 degrees C until a time period has elapsed. The time period is dependent on how far below -10 degrees C the drive was. Each degree below -10 degrees C adds another 4 minutes before restart.
Parameter Value	Description											
DB Internal	Internal dynamic braking active											
DB External	External dynamic braking active											
No Dyn Brk	Dynamic braking circuit disabled											
Int-ARCTIC	When DB Config is configured to “Int-ARCTIC,” dynamic braking becomes active if the drive temperature drops below -7 degrees C. When the DB becomes active, an “ARCTIC Mode” warning flashes on the keypad. If the drive drops below -10 degrees C, the drive will be disabled and not allowed to run. The keypad will indicate a “Not enabled” state at this point. If the drive heats up after being below -10 degrees C, the drive must meet the following criteria before operating again: a) Drive temperature must be above -9 degrees C, and b) Drive temperature must stay above -9 degrees C until a time period has elapsed. The time period is dependent on how far below -10 degrees C the drive was. Each degree below -10 degrees C adds another 4 minutes before restart.											
<div><div>⚠</div><div>CAUTION</div></div> <div><div>MOTOR OVERHEATING</div><div>Do not use DC injection braking as a holding brake, or excessive motor heating may result.</div><div>Failure to observe this instruction can result in equipment damage.</div></div>												
<div><div>⚠</div><div>ATTENTION</div></div> <div><div>SURCHAUFFE DU MOTEUR</div><div>N'utilisez pas le freinage CC comme frein de maintien car cela peut entraîner une surchauffe excessive du moteur.</div><div>Si cette directive n'est pas respectée, cela peut entraîner des dommages matériels.</div></div>												
414 S Ramp Rounding	Default: 25%	Range: 1-100% Level 2										
<p>This parameter is used to define the amount of rounding or S-curve to the Accel and Decel ramp. The amount of rounding is split evenly between the beginning and the end of the ramp. A value of 1% would mean that the rounding of the ramp is near linear. A value of 50% would have 25% rounding at the start of the ramp and 25% at the end of the ramp.</p>												
Parameters 490, 491, 492: See “Description of Parameters Used in Macro Mode” on page 50.												

Table 7-2: Description of X4 Parameters (Page 10 of 25)

501 V/Hz Select	Default: Linear Fxd	Range: 0 to 7 Level 2
The V/Hz Characteristic Selection parameter determines the characteristic of the V/Hz curve and whether any boost will be applied at starting. The following data values may be assigned:		
<u>Parameter Value</u>	<u>Description</u>	
Linear Auto	The Linear Auto selection operates the Vector algorithm and activates torque limiting functionality.	
Linear Fxd	V/Hz curve with the amount of boost fixed at the value set in parameter 502 (Voltage Boost) .	
Pump Fxd	V/Hz curve with the amount of boost fixed at the value set in parameter 502 (Voltage Boost) .	
Fan Fxd	V/Hz curve with the amount of boost fixed at the value set in parameter 502 (Voltage Boost) .	
Linear 2pc	Activates parameters 512 (Midpoint Frq) and 513 (Midpoint Volt) . These parameters are used to define a midpoint through which the V/Hz curve passes so a custom curve may be created for special motor applications.	
Vector	Activates the sensorless vector algorithm for high torque / low speed operation. A vector-duty motor should be used for this mode of operation. Vector mode does not use the Boost parameter (parameter 502)	
502 Voltage Boost	Default: 1.0%	Range: 0.0 to 50.0% Levels 1,2
Parameter 502, Voltage Boost , increases the motor voltage at low speed to increase the starting torque of the motor. The parameter sets the amount of boost (expressed as a percentage of the default boost) to be applied at zero frequency. The amount of boost decreases linearly with increasing speed.		
This parameter is used when parameter 501 is set with fixed boost options.		
<div><div></div><div>CAUTION</div></div>		
MOTOR OVERHEATING		
Too much boost may cause excessive motor currents and motor overheating. Use only as much boost as is necessary to start the motor.		
Failure to observe this instruction can result in equipment damage.		
<div><div></div><div>ATTENTION</div></div>		
SURCHAUFFE DU MOTEUR		
Une amplification de puissance excessive peut entraîner des surintensités de courant et faire la surchauffe du moteur. N'utilisez que le niveau d'amplification nécessaire pour démarrer le moteur.		
Si cette directive n'est pas respectée, cela peut entraîner des dommages matériels.		
503 V/Hz Knee Freq	Default: 60 Hz	Range: 25 to 400 Hz Level 2
This parameter sets the point on the frequency scale of the V/Hz curve at which the output is at full line voltage. Normally, this is set at the base frequency of the motor, but it may be increased to enlarge the constant torque range on special motors. Setting this parameter to a higher value can reduce motor losses at low frequencies.		

Table 7-2: Description of X4 Parameters (Page 11 of 25)

504 Skip Freq Band	Default: 0.2 Hz	Range: 0.2 to 20.0 Hz Level 2
<p>To reduce mechanical resonances in a drive system, the drive may be configured to “skip” certain frequencies. Once configured, the drive will accelerate or decelerate through the prohibited frequency band without settling on any frequency in the band.</p> <p>The X4 AC drive provides the capability to configure four prohibited frequency bands. Parameter 504 (Skip Freq Band), the Skip Frequency Band parameter, sets the width of the band above and below each of the prohibited frequencies set in parameters 505, 506, 507, and 508 (Skip Freq 1,2,3, 4).</p> <p>For example, if this parameter is set to its default value of 1 Hz and parameter 505 (Skip Freq 1) is set to 20 Hz, a skip band from 19 to 21 Hz is established.</p>		
505 Skip Freq 1 506 Skip Freq 2 507 Skip Freq 3 508 Skip Freq 4	Default: 0.0 Hz	Range: Min Freq-Max Freq Level 2
<p>As discussed in the description of parameter 504 (Skip Freq Band), the drive may be configured to skip certain frequencies. These three parameters set the center of the three skip frequency bands (with the width of each band being twice the value of parameter 504 — an equal amount above and below the skip frequency).</p> <p>For example, if parameter 504 is set to 2.5 Hz and parameter 508 (Skip Freq 4) is set to 55 Hz, a skip band from 52.5 to 57.5 Hz is established.</p>		
509 Rated Mtr Volt	Default: Model dependent	Range: 100 V - 690 V Level 2, Macro
<p>The Rated Motor Voltage parameter configures the rated motor voltage, and allows a user to enter the rated voltage from the motor nameplate to provide optimal control and protection. This is usually the amount of voltage delivered to the motor terminals at the setting of 503 (V/Hz Knee Freq).</p>		
510 Rated Mtr FLA	Default: ND Rating	Range: 50% - 200% of ND rating Level 2, Macro
<p>The Rated Motor FLA parameter allows a user to enter the rated FLA from the motor nameplate to provide optimal control and protection. This parameter should be configured to the value on the nameplate of the motor, as that value is used in calculating the percentage of current at which the drive is operating.</p> <p>For information on motor timed overload operation, and how parameter 510 works with it, see page 74.</p>		
511 Rated Mtr RPM	Default: 1750 rpm	Range: 0-24000 rpm Level 2, Macro
<p>This parameter replaces the slip compensation parameter setting of the drive so the user does not need to calculate it.</p>		
512 Midpoint Freq	Default: 60.0 Hz	Range: 0.0 Hz-V/Hz Knee Freq Level 2
<p>When parameter 501, V/Hz Select, is configured to “Linear 2pc,” this parameter, together with parameter 513, Midpoint Volt, defines an additional point in the V/Hz characteristic.</p>		
513 Midpoint Volt	Default: 100.0%	Range: 0.0%-100.0% Level 2
<p>When parameter 501, V/Hz Select, is configured to “Linear 2pc,” this parameter, along with parameter 512, Midpoint Freq, defines an additional point in the V/Hz characteristic.</p>		
514 Motor RS	Default: Model dependent	Range: 0.00-655.35 Ohms Level 2, Macro
<p>This parameter allows direct entry of the Stator Resistance (Rs) of the motor for better vector performance. The motor manufacturer can provide this information, or you can physically measure this value with an ohmmeter. From the line-to-line measurement of motor resistance, enter half the measured value. (See page 47 for more information.)</p>		
515 Power Factor	Default: 0.80	Range: 0.50 - 1.00 Level 2, Macro
<p>This parameter allows direct entry of the motor's power factor for better vector performance. The motor manufacturer can provide this information.</p>		

Table 7-2: Description of X4 Parameters (Page 12 of 25)

516 Slip Comp Enable	Default: No	Range: text string Level 1,2
The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
No	No Slip Compensation enabled	
Yes	Slip Compensation enabled	
Parameter 516 permits activation of slip compensation for better speed regulation. The motor rated speed must be entered into parameter 511 (Rated Mtr RPM) for best results.		
517 Single Phase	Default: No	Range: text string Level 2
The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
No	No single phase input operation. Phase loss engaged.	
Yes	Single phase operation. No phase loss.	
519 Find Mtr Data	Default: Not active	Range: text string Macro
This parameter activates the drive's ability to measure the stator resistance of the attached motor. The automatic stator resistance measurement can be performed either through the keypad or through the serial link. See "Measuring Stator Resistance (RS Measurement)" on page 47 for more information about this parameter. The following data values may be assigned:		
<u>Parameter Value</u>	<u>Description</u>	
Not Active	No stator RS measurement.	
Motor RS	Automatic RS measurement using macro procedure.	
520 Filter FStator	Default: 8 ms	Range: 1 - 100 ms Level 2
This parameter filters the stator frequency applied to the motor, which can help tune the acceleration behavior of the motor. This is particularly helpful when using short ramps and operating the motor at a frequency above the "V/Hz Knee Freq" (parameter 503) value (field weakening area). Lower values allow dynamic currents to be produced, but with greater peaks. This could produce unstable states in the field weakening area. Low values for this parameter can cause overcurrent faults while accelerating to frequencies over the Knee Frequency. Higher values allow the drive to run more smoothly at frequencies over the Knee Frequency and protect the drive against overcurrents--often the case when using special motors or spindle drives.		
521 Start Field En	Default: No	Range: text string Level 2
<u>Parameter Value</u>	<u>Description</u>	
No	The shaft will begin rotating after receiving a Start command, without delay. If the application has heavy load conditions or short ramp times, this setting can produce very large starting currents, to overcome the inertia of the system. This may produce nuisance trips when starting.	
Yes	The shaft will begin rotating after receiving a Start command, with delay. During this delay, the drive is building up the magnetic field in the motor. This allows the drive to start in vector mode with less starting current.	
522 Filter Time Slip	Default: 100 ms	Range: 10 - 1000 ms Level 2
This parameter filters the slip frequency applied to the motor, which can help improve the dynamic response of the drive. This parameter produces the following results based on the parameter value:		
If the parameter is configured to 100 ms , the drive will produce stable conditions to a change in load, in most cases.		
If the parameter is configured to less than 100 ms , the drive will be able to react quickly to a change in load, but may over-compensate its reaction to the load.		
If the parameter is configured to greater than 100 ms , the drive will react very slowly to a change in load and will need a longer time to compensate for the difference between the setpoint and the actual frequency.		

Table 7-2: Description of X4 Parameters (Page 13 of 25)

523 Id Percent	Default: Read-only	Range: 0 - 200% Level 2
This parameter shows the Flux producing current (as a percentage of motor rated current) that is being applied to the drive.		
524 Iq Percent	Default: Read-only	Range: 0 - 200% Level 2
This parameter shows the Torque producing current (as a percentage of motor rated current) that is being applied to the drive.		
525 Power Fail Config	Default: CTS No Msg	Range: text string Level 2
This parameter can be used to define how the drive responds to an undervoltage operation when parameter 501 is set for Vector or Linear Auto mode. The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
CTS No Msg	The drive will coast to a stop when an undervoltage condition (power-down) is detected.	
Coast Stop	The drive will coast to a stop when an undervoltage condition (power-down) is detected. In this mode, however, the drive will generate an undervoltage fault, which will be registered in the fault log as F32 with an advanced fault code of "1".	
Ramp Down	With this setting, if power is lost, the drive ramps the motor down at a decel rate of Decel 1 . When the drive is fully ramped down, the drive will generate an undervoltage fault. If power is restored, the drive will continue to ramp to a stop and will fault.	
Quick Ramp	Same as Ramp Down, except the shorter ramp time (Decel 1 or Decel 2) will be used.	
Controlled	With this setting, if power is lost, the drive decelerates the motor, trying to regulate the bus voltage to the undervoltage level. If power is restored, the drive accelerates to the command frequency without faulting. If the drive reaches the stopped condition, it will generate an undervoltage fault, F32 with an advanced fault code of "2". See "X4 Fault Codes" on page 93.	
ContrNoMsg	Same as Controlled, but without generating an undervoltage fault.	
Note: If parameter 501 is set to Vector, then the Current Limiting values will actually be Torque Limiting values.		
526 UV Ride-Thru En	Default: w/ LVT	Range: text string Level 2
This parameter allows the function to disable either (a) undervoltage ride-through or (b) continuous Line Voltage Tracking (LVT) that produces dynamic Undervoltage Ride-Thru Thresholds. The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
Disabled	This turns off the Undervoltage Ride-Thru function.	
w/ LVT	This enables the standard Ride-Thru algorithm in the V/Hz modes and allows the choice of algorithm in the Linear Auto and Vector modes.	
w/o LVT	This option operates in the same way as "w/ LVT" except that the Line Voltage Tracker function of the Undervoltage Ride-Thru is not active. The Line Voltage will be estimated on powering up the drive.	
No UV Fault	With this option, the drive will do all it can to provide uninterrupted operation through UV events, but a UV fault will not be generated.	

Table 7-2: Description of X4 Parameters (Page 14 of 25)

600 Current Lim Sel	Default: Fixed Lvl's	Range: text string Level 2
<p>The X4 drive provides a Current Limit feature. With this feature enabled, the drive's frequency is automatically reduced when operating in motoring mode to keep the measured torque within limits. When operating in regenerative mode, the output frequency can be automatically increased for the same reason. In addition to the current limit parameters that activate the Current Limit mode, more current limit parameters are available to adjust the drive's response to the load demands. The following data values may be assigned to this parameter:</p> <p><u>Parameter Value</u> <u>Description</u></p> <p>Fixed Lvl's The fixed levels set in parameters 601, 602, 603 and 604 determine the current limit in each of the four quadrants of operation.</p> <p>Vin2 Vin2 analog input sets the current limit value, range 0-200%</p> <p>Cin Cin analog input sets the current limit value, range 0-200%</p> <p>Vin2 Motor Vin2 analog input sets the motoring current limit value, range 0-200%</p> <p>Cin Motor Cin analog input sets the motoring current limit value, range 0-200%</p> <p>Vin2 F-Mtr Vin2 analog input sets the FWD motoring current limit value, range 0-200%</p> <p>Cin F-Motor Cin analog input sets the FWD motoring current limit value, range 0-200%</p> <p>Note: Current limit is only available when Parameter 502 is set to Linear Auto. If Parameter 502 is set to Vector, then the Current Limiting values will actually be Torque Limiting values.</p>		
601 Cur Lim Mtr Fwd	Default: 120%	Range: 5-150% Level 2
This parameter sets the current limiting point when the drive is in motoring mode in the forward direction. The limit is expressed as a percentage of the current capacity of the drive.		
602 Cur Lim Mtr Rev	Default: 120%	Range: 5-150% Level 2
This parameter sets the current limiting point when the drive is in motoring mode in the reverse direction. The limit is expressed as a percentage of the current capacity of the drive.		
603 Cur Lim Reg Fwd	Default: 80%	Range: 5-150% Level 2
This parameter sets the current limiting point when the drive is in regenerative mode in the forward direction. The limit is expressed as a percentage of the current capacity of the drive.		
604 Cur Lim Reg Rev	Default: 80%	Range: 5-150% Level 2
This parameter sets the current limiting point when the drive is in regenerative mode in the reverse direction. The limit is expressed as a percentage of the current capacity of the drive.		
605 Cur Lim Freq	Default: 3.0 Hz	Range: 0.0 - 400.0 Hz Level 2
This parameter sets the frequency where current limit becomes active. This value will also be the frequency point the drive will decelerate the motor to during Motoring Current Limit.		
606 Ramp Time CL	Default: 1.0 sec	Range: 0.1-3200.0 sec Level 2
This parameter determines the ramp rate when the drive enters Current Limit, and defines the ramping rate of the drive when in a current limiting mode. If the drive is in regenerative current limit, it is an acceleration time. If the drive is in motoring current limit, it is a deceleration time.		
607 Cur Lim Minimum	Default: 10%	Range: 0 - 50% Level 2
This parameter limits the lowest amount of current (or torque) limiting that can occur when the limit threshold is determined by an analog input.		

Table 7-2: Description of X4 Parameters (Page 15 of 25)

608 Restart Number	Default: 0	P608 Range: 0-8
609 Restart Delay	Default: 60 sec	P609 Range: 0-60 sec Level 2

You may configure the drive to attempt to re-start a specified number of times after certain faults occur. Chapter 8 lists all faults and notes which ones may be reset automatically.

The number of attempts at re-starting is set with parameter **608 (Restart Number)**. A value of 0 prevents the drive from attempting a re-start. The time duration that must elapse between re-start attempts is set with parameter **609 (Restart Delay)**. The type of start to be attempted is set with [parameter 802 \(Start Options\)](#); see page 78).

If the number of attempted re-starts is exceeded, the drive will trip with a fault and will stop operating. **Resetting the fault can result in instant starting.** (See page 93 for more information on faults and troubleshooting.)

Note that for 2-wire operation, the FWD or REV terminal must still be active for the drive to attempt a re-start.

Also note that the counter for attempted re-starts will not reset to zero until ten minutes after a successful re-start.

⚠ WARNING

UNINTENDED EQUIPMENT ACTION

Ensure that automatic re-starting will not cause injury to personnel or damage to equipment.

Failure to observe this instruction can result in serious injury or equipment damage.

⚠ AVERTISSEMENT

ACTIONNEMENT INVOLONTAIRE DE L'APPAREIL

Assurez-vous qu'un redémarrage automatique n'entraînera ni des blessures au personnel ni des dommages matériels.

Si cette directive n'est pas respectée, cela peut entraîner des blessures graves ou des dommages matériels.

610 Timed OL Select	Default: Std Ind 60s	Range: text string Level 2
----------------------------	----------------------	-------------------------------

Two parameters in the X4 work together to configure how the motor timed overload operates: [Parameter 510 \(Rated Mtr FLA\)](#) and parameter **610 (Timed OL Select)**.

[Parameter 510 \(Rated Mtr FLA\)](#) should be configured to the value on the nameplate of the motor. This value is used in calculating the percentage of current at which the drive is operating.

Set parameter **610** to one of the following data values to configure the desired overload characteristic:

Options	Trip Time	Motor Type	Motor Class
Std Ind Shp	0 sec	Standard Induction	N/A
Std Ind 30s	30 sec	Standard Induction	1
Std Ind 60s	60 sec	Standard Induction	2
Std Ind 5mn	300 sec	Standard Induction	10
In Duty Shp	0 sec	Inverter Duty	N/A
In Duty 30s	30 sec	Inverter Duty	1
In Duty 60s	60 sec	Inverter Duty	2
In Duty 5mn	300 sec	Inverter Duty	10

Timed OL Select determines the graph of Trip (Fault) Time vs. Percent Current that is used by the Motor TOL functionality. This protective feature is speed-dependent to handle standard induction motors whose cooling is limited by the shaft-mounted fan. Blower-cooled motors and most inverter-duty motors do not have this limitation.

613 Max Regen Ramp	Default: 300%	Range: 100 - 1000% Level 2
---------------------------	---------------	-------------------------------

This parameter operates as a percentage of the longest ramp time. This time then defines the amount of time a deceleration to stop can take without causing a "Regen Timeout" fault. For example, if "Decel Time 1" is 5.0 seconds, "Decel Time 2" is 10.0 seconds, and "Max Regen Ramp" is 300%, a deceleration to stop that takes more than 30 seconds will cause a "Regen Timeout" fault in the drive.

Table 7-2: Description of X4 Parameters (Page 16 of 25)

614 Stability Gain 615 Stability Rate	Default: Model dependent	P 614: Range: 0-10 P 615: Range: 0-1000 Level 2
Both of these parameters can be used to resolve stability problems if they occur. Use Parameter 615 if the load has significant inertia with respect to the motor itself.		
700 Vmet Config	Default: Freq Out	Range: text string Levels 1,2
This parameter configures the analog signal that will be applied to the Vmet output pin. The following data values may be assigned to this parameter:		
<u>Para. Value</u>	<u>Description</u>	<u>Range Limit</u>
Freq Out	Output frequency of the drive	Parameter max freq.
Voltage Out	Voltage being supplied to the motor	Rated motor voltage
Current Out	Current being supplied to the motor	200% of drive rating
Drive Load	Calculated percentage of drive rating	200% of drive rating
Drive Temp	Calculation of total drive temp rating	100% of unit temp rating
Stator Freq	Commanded frequency	100% of input config
Power Out	Calculated power output of drive	250% of drive rating
PI Fback	Allows the analog output to produce a signal in proportion to the PI feedback received.	
Load +/-	A 5v (50%) offset is introduced into the Vmet output; more positive outputs will be achieved with higher load values.	200% of drive rating
701 Vmet Span	Default: 100%	Range: 0.0%-200.0% Level 2
This parameter sets the span of the Vmet analog output.		
702 Imet Config	Default: Drive Load	Range: text string Level 2
This parameter configures the analog signal that will be applied to the Imet output pin. The following data values may be assigned to this parameter:		
<u>Para. Value</u>	<u>Description</u>	<u>Range Limit</u>
Freq Out	Output frequency of the drive	Parameter max freq.
Voltage Out	Voltage being supplied to the motor	Rated motor voltage
Current Out	Current being supplied to the motor	200% of drive rating
Drive Load	Calculated percentage of drive rating	200% of drive rating
Drive Temp	Calculation of total drive temp rating	100% of unit temp rating
Stator Freq	Commanded frequency	100% of input config
Power Out	Calculated power output of drive	250% of drive rating
PI Fback	Allows the analog output to produce a signal in proportion to the PI feedback received.	100% of feedback signal
703 Imet Span	Default: 100%	Range: 0.0%-200.0% Level 2
This parameter sets the span of the Imet analog output.		
704 Imet Offset	Default: 0.0%	Range: 0.0%-90.0% Level 2
This parameter sets the offset of the Imet analog output.		

Table 7-2: Description of X4 Parameters (Page 17 of 25)

705 Relay 1 Select 706 Relay 2 Select 707 DO1 Select 708 DO2 Select	Default: Drv Fault Default: Drv Run Default: Drv Ready Default: At Speed	Range: text string Levels 1, 2 for Parameters 705-706 Level 2 for Parameters 707-708																																			
<p>These four parameters configure what condition will cause relays R1, R2, DO1, and DO2 to activate. Parameter 705 is associated with relay R1; parameter 706 with relay R2; parameter 707 with DO1; and parameter 708 with relay DO2. The following values may be assigned:</p> <table><tr><th><u>Parameter Value</u></th><th><u>Description</u></th></tr><tr><td>Drv Ready</td><td>The drive is ready. (The relay will be open in Fault and Low Voltage conditions.)</td></tr><tr><td>Drv Fault</td><td>A fault occurs. (If automatic fault reset and re-start is enabled, only faults that cannot be reset will activate the relay. The relay will also activate for faults that can be reset when the number of re-start attempts exceeds the value set in parameter 608 (Restart Number).)</td></tr><tr><td>Drive Run</td><td>The drive has received a direction command.</td></tr><tr><td>Running FWD</td><td>The motor is running in Forward.</td></tr><tr><td>Running REV</td><td>The motor is running in Reverse.</td></tr><tr><td>Zero Speed</td><td>The drive is in Run mode, but the speed reference is 0 Hz.</td></tr><tr><td>At Speed</td><td>The drive has reached reference speed.</td></tr><tr><td>Freq Limit</td><td>The drive limit is active when the speed commanded exceeds the value of parameter 306, Preset Freq 4.</td></tr><tr><td>Freq Hyst</td><td>This is active when the speed exceeds parameter 306 (Preset Freq 4) but is less than parameter 307 (Preset Freq 5).</td></tr><tr><td>Current Lim</td><td>Current Limit mode is active.</td></tr><tr><td>High Temp</td><td>The temperature limit of the drive has been exceeded.</td></tr><tr><td>Local Mode</td><td>The keypad is the control path for reference speed and control functions.</td></tr><tr><td>SeqOut-00</td><td rowspan="4">Programmed sequence step active. SeqOut-00, SeqOut-01, SeqOut-10, SeqOut-11 are all status outputs linked to a step in the program sequencer.</td></tr><tr><td>SeqOut-01</td></tr><tr><td>SeqOut-10</td></tr><tr><td>SeqOut-11</td></tr><tr><td>ARCTIC</td><td>When a digital output is configured to use this option, the output will be active when the Arctic Mode is turning on the DB resistor. This option will turn on when the temperature drops below the Arctic mode entry point, which is -7 degrees C. This will work even if Arctic Mode is not enabled.</td></tr><tr><td>Ref Loss</td><td>Independent of the status of parameter 222 (Ref Loss Config), this selection activates the digital output when a 4-20mA input to either the VIN1 or CIN inputs drop to approximately 3mA.</td></tr></table>			<u>Parameter Value</u>	<u>Description</u>	Drv Ready	The drive is ready. (The relay will be open in Fault and Low Voltage conditions.)	Drv Fault	A fault occurs. (If automatic fault reset and re-start is enabled, only faults that cannot be reset will activate the relay. The relay will also activate for faults that can be reset when the number of re-start attempts exceeds the value set in parameter 608 (Restart Number) .)	Drive Run	The drive has received a direction command.	Running FWD	The motor is running in Forward.	Running REV	The motor is running in Reverse.	Zero Speed	The drive is in Run mode, but the speed reference is 0 Hz.	At Speed	The drive has reached reference speed.	Freq Limit	The drive limit is active when the speed commanded exceeds the value of parameter 306, Preset Freq 4 .	Freq Hyst	This is active when the speed exceeds parameter 306 (Preset Freq 4) but is less than parameter 307 (Preset Freq 5) .	Current Lim	Current Limit mode is active.	High Temp	The temperature limit of the drive has been exceeded.	Local Mode	The keypad is the control path for reference speed and control functions.	SeqOut-00	Programmed sequence step active. SeqOut-00, SeqOut-01, SeqOut-10, SeqOut-11 are all status outputs linked to a step in the program sequencer.	SeqOut-01	SeqOut-10	SeqOut-11	ARCTIC	When a digital output is configured to use this option, the output will be active when the Arctic Mode is turning on the DB resistor. This option will turn on when the temperature drops below the Arctic mode entry point, which is -7 degrees C. This will work even if Arctic Mode is not enabled.	Ref Loss	Independent of the status of parameter 222 (Ref Loss Config) , this selection activates the digital output when a 4-20mA input to either the VIN1 or CIN inputs drop to approximately 3mA.
<u>Parameter Value</u>	<u>Description</u>																																				
Drv Ready	The drive is ready. (The relay will be open in Fault and Low Voltage conditions.)																																				
Drv Fault	A fault occurs. (If automatic fault reset and re-start is enabled, only faults that cannot be reset will activate the relay. The relay will also activate for faults that can be reset when the number of re-start attempts exceeds the value set in parameter 608 (Restart Number) .)																																				
Drive Run	The drive has received a direction command.																																				
Running FWD	The motor is running in Forward.																																				
Running REV	The motor is running in Reverse.																																				
Zero Speed	The drive is in Run mode, but the speed reference is 0 Hz.																																				
At Speed	The drive has reached reference speed.																																				
Freq Limit	The drive limit is active when the speed commanded exceeds the value of parameter 306, Preset Freq 4 .																																				
Freq Hyst	This is active when the speed exceeds parameter 306 (Preset Freq 4) but is less than parameter 307 (Preset Freq 5) .																																				
Current Lim	Current Limit mode is active.																																				
High Temp	The temperature limit of the drive has been exceeded.																																				
Local Mode	The keypad is the control path for reference speed and control functions.																																				
SeqOut-00	Programmed sequence step active. SeqOut-00, SeqOut-01, SeqOut-10, SeqOut-11 are all status outputs linked to a step in the program sequencer.																																				
SeqOut-01																																					
SeqOut-10																																					
SeqOut-11																																					
ARCTIC	When a digital output is configured to use this option, the output will be active when the Arctic Mode is turning on the DB resistor. This option will turn on when the temperature drops below the Arctic mode entry point, which is -7 degrees C. This will work even if Arctic Mode is not enabled.																																				
Ref Loss	Independent of the status of parameter 222 (Ref Loss Config) , this selection activates the digital output when a 4-20mA input to either the VIN1 or CIN inputs drop to approximately 3mA.																																				
720 Active Logic	Default: Active High	Range: text string Level 2																																			
<p>This parameter configures the input state of all the digital inputs except the EN digital input. The EN digital input is always active high. The following data values may be assigned to this parameter:</p> <table><tr><th><u>Parameter Value</u></th><th><u>Description</u></th></tr><tr><td>Active Low</td><td>Low input is true ("pull-down logic")</td></tr><tr><td>Active High</td><td>High input is true ("pull-up logic")</td></tr></table>			<u>Parameter Value</u>	<u>Description</u>	Active Low	Low input is true ("pull-down logic")	Active High	High input is true ("pull-up logic")																													
<u>Parameter Value</u>	<u>Description</u>																																				
Active Low	Low input is true ("pull-down logic")																																				
Active High	High input is true ("pull-up logic")																																				

Table 7-2: Description of X4 Parameters (Page 18 of 25)

721 DI1 Configure 722 DI2 Configure 723 DI3 Configure 724 DI4 Configure 725 DI5 Configure 727 MOL Configure	Default: Preset 1 Default: Preset 2 Default: Preset 3 Default: Alt Ramp Default: Fault Reset Default: MOL	Range: text string Level 2
Parameters 721-725 configure the function that the digital inputs DI1-5 will perform when active. Parameter 727 serves as the selection for the operation of the MOL terminal. Polarity of the MOL digital input is still determined by parameter 726, MOL Polarity. The options for these and all of the additional digital input parameters are as follows:		
<u>Parameter Value</u>	<u>Description</u>	
Preset 1	Preset Speed Input 1 (PS1).	
Preset 2	Preset Speed Input 2 (PS2).	
Preset 3	Preset Speed Input 3 (PS3).	
Coast Stop	Activates a Coast-to-Stop condition.	
DC Inject	Begins DC injection braking.	
Loc/Rem	Switches from Local to Remote mode.	
Alt Ramp	Activates Alternate Ramp.	
Fault Reset	Resets a fault.	
EMOP+	EMOP increases speed.	
EMOP-	EMOP decreases speed.	
PI Enable	Enables PI control.	
Ref Switch	Switches speed reference signals.	
Cur Lim Dis	Disables Current Limit mode.	
CurLimMax	Sets all Current Limit inputs at the maximum value the drive will allow.	
SL Override	Takes control away from the serial link.	
Seq 1	Sequencer input 1.	
Seq 2	Sequencer input 2.	
Seq 3	Sequencer input 3.	
Seq Dwell	Sequencer dwell mode (pause).	
Seq Advance	Sequencer advance (skip).	
FLY Dis	Disable Catch-on-fly operation.	
MOL	Motor Overload input for external customer connection.	
726 MOL Polarity	Default: NO Operate	Range: text string Level 2
This parameter sets the Motor Overload input polarity. The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
NC Operate	A normally closed (NC) connection allows the unit to operate; the drive faults when the connection opens.	
NO Operate	A normally open (NO) connection allows the unit to operate; the drive faults when the connection closes.	
801 Program Number	Default: 0	Range: 0 to 9999 Level 2, Macro
This parameter (Special Program Number) provides a way of enabling hidden functions in the drive and storing parameters to the customer set.		
<u>Data Value</u>	<u>Special Function Configured</u>	
0	Standard program	
1	Reset all parameters to factory default values (display = SETP).	
2	Store customer parameter values (display = STOC).	
3	Load customer parameter values (display = SETC).	
4	Swap active parameters with customer stored settings.	
10	Reset Total Run Time, parameter 108 .	

Table 7-2: Description of X4 Parameters (Page 19 of 25)

802 Start Options	Default: LS Lockout	Range: text string Level 2
<p>The Start Options parameter configures the Line Start Lockout functionality of the drive. All data values ending with “2” allow you to press the Enter key to store the customer speed reference value on the keypad. You must press and hold the Enter key for two seconds to save the speed command. The following data values may be assigned:</p>		
<u>Data Value</u>	<u>Description</u>	
LS Lockout	(Line Start Lockout). If maintained contact run operators are used, they must be opened and then re-closed for the drive to start after AC power is applied.	
AutoStart	When AC power is applied, if a Run command is present through the terminal strip, the drive will start.	
LSL w/FLY	This setting has both LS Lockout and Catch on the Fly enabled at the same time.	
Auto w/FLY	This setting has both Auto-Start and Catch on the Fly enabled at the same time.	
LS Lockout2	(Line Start Lockout). If maintained contact run operators are used, they must be opened and then re-closed for the drive to start after AC power is applied.	
AutoStart2	When AC power is applied, if a Run command is present through the terminal strip, the drive will start.	
LSL w/FLY 2	This setting has both LS Lockout and Catch on the Fly enabled at the same time.	
Auto w/FLY2	This setting has both Auto-Start and Catch on the Fly enabled at the same time.	

803 PWM Frequency	Default: 3.0 kHz	Range: 0.6-16.0 kHz Level 2
<p>The PWM Carrier Frequency parameter sets the carrier frequency of the Pulse-Width Modulation (PWM) waveform supplied to the motor. Low carrier frequencies provide better low-end torque, but produce some audible noise from the motor. Higher carrier frequencies produce less audible noise, but cause more heating in the drive and motor.</p>		

804 Display Mode	Default: Std Disply	Range: text string Level 2
<p>The Display Mode parameter determines how the reference or output of the drive will be displayed to the user. If User Units is selected, parameter 805 allows you to customize the 3 unit values on the display. The following data values may be assigned to this parameter:</p>		
<u>Parameter Value</u>	<u>Description</u>	
Std Disply	Standard commanded frequency	
Out Freq	Output frequency actually sent to the motor	
Stator Freq	Frequency of the stator	
User Units	Custom units display based on value in parameter 805	
RPM Units	Custom speed display with RPM as units	
GPM Units	Custom speed display with GPM as units	
FPM Units	Custom speed display with FPM as units	
MPM Units	Custom speed display with MPM as units	
PSI Units	Custom speed display with PSI as units	
Degrees C	Custom display with degrees C	
Degrees F	Custom display with degrees F	
Time hrs	Custom display time in hours of operation	
Time min	Custom display time in minutes of operation	
Time sec	Custom display time in seconds of operation	
Time sec	Custom display time in seconds of operation	
Fbk RPM	Display is scaled to read in RPM based on the PI feedback input to an analog input	
Fbk PSI	Display is scaled to read in PSI based on the PI feedback input to an analog input	
Fbk GPM	Display is scaled to read in GPM based on the PI feedback input to an analog input	
Fbk User	Display is scaled to read in User units (parameter 805) based on PI feedback input to an analog input	

When using any of the Time functions, these refer to “Retention Time.” Retention time is an inverse function: as speed goes up, time goes down, and vice versa. It is typically used in oven-type applications. The value set in [parameter 809 \(Display Scale\)](#) references the time of operation when running at Max. Frequency. For instance, if [parameter 302 \(Max. Frequency\)](#) is set for 60 Hz, [804 \(Display Mode\)](#) is set for Time min, and [809 \(Display Scale\)](#) is set for 600, the scales of the display will read 60.0 min at maximum speed and increase in time (in minutes) up to the maximum scale of 6553.5 at minimum frequency.

Table 7-2: Description of X4 Parameters (Page 20 of 25)

805 Display Units	Default: RPM: 1	Range: text string Level 2
This parameter determines the three-character customer display units used when parameter 804 is set to User Units. The last digit indicates the number of decimal places to be shown on the display. Up to three decimal places are possible.		
809 Display Scale	Default: 1	Range: 1-65535 Level 2
This parameter determines how the reference or output of the drive will be displayed to the user. It selects the maximum scaling of the display when running at maximum frequency.		
810 Language	Default: English	Range: text string Level 2, Macro
This parameter configures the language text strings will be displayed in. The following data values may be assigned: <u>Parameter Value</u> English Italian Spanish French German		
811 Access Code	Default: 0	Range: 0-9999 Level 2
The security Access Code allows the user to control access to the programmable functions of the inverter. The initial value of this parameter is 000, which signifies that no access code is necessary. Any number between 001 and 999 may be used for an access code, but is not necessary. If an access code is entered, you will not be able to view the values while scrolling through parameters. Only after the Shift key is pressed will the actual value appear. To enter an access code, re-program parameter 811 as you would any other parameter. After the new value is stored, you have 10 minutes of free access. If you remove power and then restore it, you will need to enter the access code to change any program parameter. If you enter an incorrect access code, the drive displays **WRONG CODE** and allows only viewing rights to the various parameters. Once the correct code is entered, you again have 10 minutes of free access unless power is removed and restored. To disable the access code requirement, set parameter 811 back to 000.		
812 Freq Ref Output	Default: 6FS	Range: text string Level 2
The Frequency Reference Output parameter determines the frequency pulse-train output from the DOP terminal. This digital output is a pulse train that can be linked to another drive or to a field meter for speed indication. The pulse train is a 50% duty cycle signal and requires a pull-up resistor of approximately 4.7 kOhms. The following data values may be assigned to this parameter: <u>Parameter Value</u> 6FS 48FS		
813 Speed Ratio	Default: 100.0%	Range: 0.0%-200.0% Level 2
The Master / Follower Speed Ratio parameter allows the pulse train output of one X4 series drive (master) to be used to control the speed of up to 8 other follower drives. The output of each follower can be individually programmed, or trimmed "ON-THE-FLY" with this parameter. The range of adjustment is 0-200% of the master. This function only works when using the 6FS and 48FS functions in parameter 204 .		

Table 7-2: Description of X4 Parameters (Page 21 of 25)

814 Display Status	Default: Drive Load	Range: text string Level 2
This parameter allows configuration of the additional parameter status field on the operate screen. The following fields can be configured:		
<u>Parameter Value</u>	<u>Description</u>	<u>Range Limit</u>
Voltage Out	Voltage being supplied to the motor	Rated motor voltage
Current Out	Current being supplied to the motor	200% of drive rating
Drive Load	Calculated percentage of drive rating	200% of drive rating
Drive Temp	Calculation of total drive temp rating	100% of unit temp rating
Power Out	Calculated power output of drive	250% of drive rating
% of FLA	Calculated percentage of drive rating	Percent of motor FLA
816 Fly Catch Mode	Default: Sweep Fwd	Range: text string Level 2
This parameter configures how the "catch on the fly" operates.		
<u>Parameter Value</u>	<u>Description</u>	
Sweep Fwd	Catch on the fly algorithm sweeps through frequencies only in the forward direction while searching for the operating frequency	
Sweep Rev	Catch on the fly algorithm sweeps through frequencies only in the reverse direction while searching for the operating frequency	
Sweep F/R	Catch on the fly algorithm sweeps through frequencies in both directions while searching for the operating frequency. The direction that is chosen first depends on the direction of the command given to the drive. Note that this option is slower than the other two modes of operation.	
850 PI Configure	Default: No PI	Range: text string Level 2
The PI Configure parameter determines what type of PI control is active in the drive.		
PI can be active at all times, or activated using a digital input. If you select a digital input or function key as the means to enable PI control, remember to configure the parameter that sets the function of the digital input or function key to enable PI control to complete the implementation.		
The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
No PI	PI control is always inactive.	
Dir F-FWD	Direct action with feed-forward.	
Rev F-FWD	Reverse action with feed-forward.	
Dir F-FWD E	Direct action with feed-forward, with PI enabled by DI.	
Rev F-FWD E	Reverse action with feed-forward, with PI enabled by DI.	
Dir Full	Direct action with full range.	
Rev Full	Reverse action with full range.	
Dir Full E	Direct action with full range, with PI enabled by DI.	
Rev Full E	Reverse action with full range, with PI enabled by DI.	
851 PI Feedback	Default: Vin1	Range: text string Level 2
The PI Feedback parameter configures the feedback signal to be used in PI control.		
The following data values may be assigned to this parameter:		
<u>Parameter Value</u>	<u>Description</u>	
Vin1	Vin1 is the PI feedback.	
Cin	Cin is the PI feedback.	
Vin2	Vin2 is the PI feedback.	
852 PI Prop Gain	Default: 0	Range: 0-2000 Level 2
The PI Proportional Gain parameter configures the proportional gain that is applied to the PI control.		
Note: Value must be greater than 0 for this to be active.		

Table 7-2: Description of X4 Parameters (Page 22 of 25)

853 PI Int Gain	Default: 0	Range: 0-10000 Level 2										
The PI Integral Gain parameter configures the integral gain that is applied to the PI control. Note: Value must be greater than 0 for this to be active.												
854 PI Feed Gain	Default: 1000	Range: 0-2000 Level 2										
The PI Feed Gain parameter allows the feedback signal to be scaled. A setting of 1000 indicates 100.0%.												
855 PI Error 1	Default: Read-Only	Range: 0.00-100.00% Level 2										
856 PI Error 2												
Both the PI Error 1 and PI Error 2 parameters are read-only; they provide feedback on how the PI control is operating.												
857 PI High Corr	Default: 100.00%	Range: 0.00-100.00% Level 2										
This parameter sets the high limit of the PI output.												
858 PI Low Corr	Default: 0.00%	Range: 0.00-100.00% Level 2										
This parameter sets the low limit of the PI output.												
900 SIO Protocol	Default: RTU N81	Range: text string Level 2 (SIO)										
This parameter defines the protocol and the parity of the SIO port. The following data values may be assigned to this parameter: <table><tr><td><u>Parameter Value</u></td><td><u>Description</u></td></tr><tr><td>RTU N81</td><td>No parity, 8 data bits, 1 stop bit</td></tr><tr><td>RTU N82</td><td>No parity, 8 data bits, 2 stop bits</td></tr><tr><td>RTU E81</td><td>Even parity, 8 data bits, 1 stop bit</td></tr><tr><td>RTU O81</td><td>Odd parity, 8 data bits, 1 stop bit</td></tr></table>			<u>Parameter Value</u>	<u>Description</u>	RTU N81	No parity, 8 data bits, 1 stop bit	RTU N82	No parity, 8 data bits, 2 stop bits	RTU E81	Even parity, 8 data bits, 1 stop bit	RTU O81	Odd parity, 8 data bits, 1 stop bit
<u>Parameter Value</u>	<u>Description</u>											
RTU N81	No parity, 8 data bits, 1 stop bit											
RTU N82	No parity, 8 data bits, 2 stop bits											
RTU E81	Even parity, 8 data bits, 1 stop bit											
RTU O81	Odd parity, 8 data bits, 1 stop bit											
901 SIO Baud Rate	Default: 9600	Range: text string Level 2 (SIO)										
This parameter defines the baud rate of the SIO port. The following data values may be assigned to this parameter: <table><tr><td><u>Parameter Value</u></td></tr><tr><td>4800</td></tr><tr><td>9600</td></tr><tr><td>19200</td></tr><tr><td>38400</td></tr><tr><td>57600</td></tr></table>			<u>Parameter Value</u>	4800	9600	19200	38400	57600				
<u>Parameter Value</u>												
4800												
9600												
19200												
38400												
57600												
902 Comm Drop #	Default: 1	Range: 1-247 Level 2 (SIO)										
This parameter defines the network drop number for both SIO and IRDA communications.												
903 SIO Timer	Default: 1.0 sec	Range: 0.0-60.0 sec Level 2 (SIO)										
This parameter defines a watchdog timer that will require a valid communication in the specified time period while in SIO control. If the requirement is not met, a fault occurs.												

Table 7-2: Description of X4 Parameters (Page 23 of 25)

904 SIO Cntl Word	Default: 0x0000	Range: text string Level 2 (SIO)
--------------------------	-----------------	-------------------------------------

The SIO Control Word parameter allows control of the drive through Modbus communications.

The following bits are used with this parameter:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Bit When Set to 1 Signifies								Bit When Set to 1 Signifies							
8	Alt Ramp							0	SLC (Run)						
9	PI Enable							1	SLF (Ref)						
10	Not Used							2	FWD						
11	Cur Lim							3	REV						
12	DCI							4	FEXT2						
13	CTS							5	Preset Input 1 (PS1)						
14	Ref Switch							6	Preset Input 2 (PS2))						
15	Fault Reset							7	Preset Input 3 (PS3)						

905 Ext Ref Freq 1 906 Ext Ref Freq 2	Default: 0.0 Hz	Range: Min. Freq.-Max. Freq. Level 2 (SIO)
--	-----------------	---

These parameters provide access for changing the frequency reference over the serial link.

908 Status Word	Default: Read-Only	Range: text string Level 2 (SIO)
------------------------	--------------------	-------------------------------------

The Status Word parameter provides status of the drive operation to a serial link user.

The following bits are used with this parameter:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Bit When Set to 1 Signifies								Bit When Set to 1 Signifies							
8	Alt Ramp							0	SLC (Run)						
9	SL Override							1	SLF (Ref)						
10	Remote							2	FWD run						
11	Curr Lim							3	REV run						
12	DCI							4	FEXT2						
13	Jogging							5	Accel						
14	Zero Spd							6	Decel						
15	Drive Fit							7	At Speed						

909 DI Status	Default: Read-Only	Range: text string Level 2 (SIO)
----------------------	--------------------	-------------------------------------

This parameter provides a 10-bit status display.

The following bits are used with this parameter:

9	8	7	6	5	4	3	2	1	0
Bit When Set to 1 Signifies					Bit When Set to 1 Signifies				
5	DI3 Input				0	FWD Input			
6	DI4 Input				1	REV Input			
7	DI5 Input				2	R/J Input			
8	MOL Input				3	DI1 Input			
9	EN Input				4	DI2 Input			

Table 7-2: Description of X4 Parameters (Page 24 of 25)

910 Vin1 Status 911 Cin Status 912 Vin2 Status	Default: Read-Only	Range: 0.00-100.00% Level 2 (SIO)																								
Parameter 910 provides the input percentage applied to the Vin1 terminal; parameter 911 provides the input percentage applied to the Cin terminal; and parameter 912 provides the input percentage applied to the Vin2 terminal.																										
913 Output Status	Default: Read-Only	Range: text string Level 2 (SIO)																								
This parameter provides a 10-bit binary status display. A "1" in the status word indicates that the output is active. The following bits are used with this parameter:																										
<table><tr><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td></tr></table>			9	8	7	6	5	4	3	2	1	0														
9	8	7	6	5	4	3	2	1	0																	
<table><tr><td>Bit</td><td>When Set to 1 Signifies</td><td>Bit</td><td>When Set to 1 Signifies</td></tr><tr><td>5</td><td>N/A</td><td>0</td><td>R1 Output</td></tr><tr><td>6</td><td>N/A</td><td>1</td><td>R2 Output</td></tr><tr><td>7</td><td>N/A</td><td>2</td><td>DO1 Output</td></tr><tr><td>8</td><td>N/A</td><td>3</td><td>DO2 Output</td></tr><tr><td>9</td><td>N/A</td><td>4</td><td>N/A</td></tr></table>			Bit	When Set to 1 Signifies	Bit	When Set to 1 Signifies	5	N/A	0	R1 Output	6	N/A	1	R2 Output	7	N/A	2	DO1 Output	8	N/A	3	DO2 Output	9	N/A	4	N/A
Bit	When Set to 1 Signifies	Bit	When Set to 1 Signifies																							
5	N/A	0	R1 Output																							
6	N/A	1	R2 Output																							
7	N/A	2	DO1 Output																							
8	N/A	3	DO2 Output																							
9	N/A	4	N/A																							
914 Vmet Status 915 Imet Status	Default: Read-Only	Range: 0.00-100.00% Level 2 (SIO)																								
Parameter 914 provides the output percentage applied to the Vmet terminal; parameter 915 provides the output percentage applied to the Imet terminal.																										
916 Infrared Baud	Default: 9600	Range: text string Level 2 (SIO)																								
This parameter defines the baud rate of the IRDA port. The following data values may be assigned to this parameter: <u>Parameter Value</u> 9600 19200 38400 57600																										
931 Seq Cntl 1 932 Seq Cntl 2 933 Seq Cntl 3 934 Seq Cntl 4 935 Seq Cntl 5 936 Seq Cntl 6 937 Seq Cntl 7 938 Seq Cntl 8 939 Seq Cntl 9	Default: 00000000000	Range: text string Level 2 (SEQ)																								
These parameters each provide a 10-bit binary status display. See "Using the X4 Program Sequencer" on page 84 . The following bits are used with each of these parameters: Bit 0-2=Speed Sel Bit 3=Accl Sel Bit 4-6=Event Length Bit 7-8=Dir Sel Bit 9-10=Output Sel																										

Table 7-2: Description of X4 Parameters (Page 25 of 25)

951 Seq Count 1 952 Seq Count 2 953 Seq Count 3 954 Seq Count 4 955 Seq Count 5 956 Seq Count 6 957 Seq Count 7 958 Seq Count 8 959 Seq Count 9	Default: 0	Range: 0-65535 Level 2 (SEQ)
--	------------	---------------------------------

These parameters configure the time, number of pulses, or analog level of sequencer steps 1 through 9, respectively. See ["Using the X4 Program Sequencer" on page 84](#).

7.4 Using the X4 Program Sequencer

The X4 AC drive offers functionality that allows users to program up to nine independent operation states of the drive. This functionality is called the “program sequencer” because it allows the drive to sequence through the operation states programmed by the user. The X4 Program Sequencer can be used in applications that would normally require external intelligence, such as a simple programmable logic controller.

7.4.1 Enabling the X4 Program Sequencer

The X4 Program Sequencer can be enabled with parameter 491 (Seq Appl), found in the Application Macro programming mode of the X4 keypad. This parameter configures:

- Whether the sequencer is enabled,
- The time base used for all timing of the sequencer,
- Whether other sequencer parameters are visible in Level 2 programming.

Table 7-3 shows the options for this parameter:

Table 7-3: Seq Appl Parameter Options

Options	Value	Meaning
Disabled	0	The Sequencer mode of the X4 is not active and the sequencer parameters are not visible in Level 2 programming.
1 sec base	1	The Sequencer mode of the X4 is active, sequencer parameters are visible in Level 2, and all timing for the sequencer will be on a 1-second base.
.1 sec base	2	The Sequencer mode of the X4 is active, sequencer parameters are visible in Level 2, and all timing for the sequencer will be on a .1-second base.
.01 sec base	3	The Sequencer mode of the X4 is active, sequencer parameters are visible in Level 2, and all timing for the sequencer will be on a .01-second base.

7.4.2 Controlling the X4 Program Sequencer

The Program Sequencer can be activated and controlled from either the keypad or the terminal strip. It is not possible to control the sequencer through the serial link. The control method of the program sequencer is determined by [parameter 201, Input Mode](#). Setting the Input Mode parameter also

allows switching from Sequencer mode to normal keypad operation by way of the Local/Remote switch. Table 7-4 illustrates possible program sequencer control configurations.

Table 7-4: Program Sequencer Control Configuration

Input Mode Setting	Input Mode Value	Local Operation	Remote Operation
Local Only	0	Sequencer control via keypad (FWD/Stop) Default Seq Ref is keypad	N/A
Remote Only	1	N/A	Seq control via FWD terminal Default Seq Ref is "Ref Select"
L/R Rem Ref	2	Normal X4 keypad operation (Sequencer disabled)	Seq control via keypad (FWD/Stop) Default Seq Ref is "Ref Select"
L/R Rem Ctl	3	Normal X4 keypad operation (Sequencer disabled)	Seq control via FWD terminal Default Seq Ref is keypad
L/R Rem Bth	4	Normal X4 keypad operation (Sequencer disabled)	Seq control via FWD terminal Default Seq Ref is "Ref Select"
EMOP	5	Sequencer not enabled	Sequencer not enabled
EMOP2	6	Sequencer not enabled	Sequencer not enabled
LOC/EMOP	7	Sequencer not enabled	Sequencer not enabled
LOC/EMOP2	8	Sequencer not enabled	Sequencer not enabled

Note: If Input Mode is configured to any of the EMOP options, the sequencer is not available.

Keypad Control (Activation) of the X4 Program Sequencer

When activating or controlling the X4 Program Sequencer from the keypad, pressing the FWD key commands the drive to cycle through the programmed states of the sequencer one time only (one-shot operation). One-shot operation will run the sequencer until state 9 is reached, or until any state that is not changed from the default is reached.

Pressing the SHIFT and FWD keys simultaneously causes the programmed sequence to repeat until the Stop key is pressed (continuous operation). In continuous mode, the sequencer runs until state 9 or any state that is not changed from the default is reached; it then jumps back to state 1.

Note that the REV key has no function in the sequencer mode.

Terminal Control of the X4 Program Sequencer

When activating or controlling the X4 Program Sequencer from terminals, continuous and one-shot operation is determined by whether the drive is wired for 2-wire or 3-wire control. If the terminal is set up for 2-wire control, the sequencer operates in continuous mode (R/J terminal inactive). This will run the sequencer until the Forward command is removed. If the terminal is set up for 3-wire control, the sequencer runs one cycle when the FWD terminal is activated.

Note that the REV terminal has no function in sequencer mode.

X4 Sequencer Dwell Functionality

The X4 sequencer has the capability to dwell, or pause, in a state and disregard any command to advance to the next state. This can be done in two different ways, and both methods can be used at the same time.

If the sequencer is actively running and the Enter key is pressed from the Operate screen of the X4 keypad, the sequencer will dwell in the current state (it will never advance to the next state). While the sequencer is dwelling, a warning of “Seq Dwell” will flash on the Operate screen. To leave the dwell state, press the Enter key again from the Operate screen.

The sequencer Dwell mode can also be entered by programming a digital input to “Seq Dwell.” The sequencer will then dwell in the current state, for as long as the digital input is active.

X4 Sequencer Advance Functionality

The sequencer has the ability to allow the user to advance to the next state without satisfying the conditions programmed to advance. To do this, program a digital input to “Seq Advance.” When a digital input program to this option changes from inactive to active, a running sequencer will advance one state. This feature is useful when debugging a sequence with long time intervals.

7.4.3 Sequencer State Configuration Overview

Each state of the program sequencer is defined by five characteristics:

- Direction in which the drive will operate
- Speed at which the drive will operate
- Ramp selection of the drive
- Output configuration (relays and digital outputs) of the drive
- How the sequencer advances to the next state.

These five characteristics are configured by two parameters for each state. These parameters are named “Seq Cntl X” and “Seq Count X,” where X represents the state number of the sequencer. The “Seq Cntl X” parameter is a binary parameter that sets each of the five characteristics listed above. “Seq Count X” configures the threshold that the sequencer will use in determining when to advance by the method programmed in the control parameter. The bit patterns of the Seq Cntl X” parameters are shown in Figure 7-1:

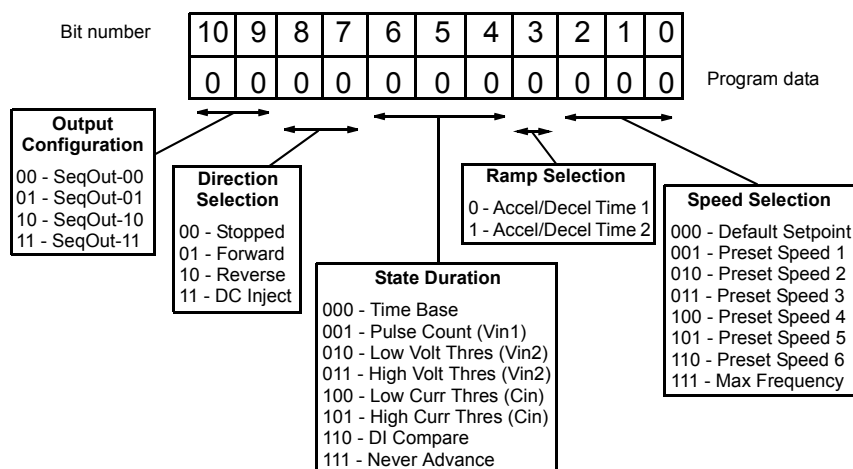


Figure 7-1: Seq Cntl Parameter, Bit Definition

X4 Sequencer Speed Selection

Table 7-5 gives more information on the speed selection options available in the X4 sequencer by programming bits 0, 1, and 2 of each state's control parameter. The options include any Preset Speed, Max Frequency, or allowing the reference to be determined in the normal X4 control path.

Table 7-5: Speed Selection Options

Binary Value	Definition (Resulting Speed)
000	Speed selection as in normal X4 operation, as defined by parameters 204 (Ref Select) and 201 (Input Mode) .
001	Value of parameter Preset Speed 1(303)
010	Value of parameter Preset Speed 2(304)
011	Value of parameter Preset Speed 3(305)
100	Value of parameter Preset Speed 4(306)
101	Value of parameter Preset Speed 5(307)
110	Value of parameter Preset Speed 6(308)
111	Value of parameter Max Frequency (302)

X4 Sequencer Ramping Selection

When the sequencer is active, the active ramp is no longer determined by parameter “Ramp Select.” The user, however, does have the choice of using the main ramps (Accel Time 1/Decel Time1), or the alternate ramps (Accel Time 2/Decel Time 2) for each independent state. This is determined by bit 3 of the control parameter. If bit 3 is set to 1, then the alternate ramps are used (Accel Time 2/Decel Time 2).

Sequencer Output Configuration

The X4 Program Sequencer allows digital outputs to be activated during states of the sequencer. This function could be used to activate other devices in a system or to signal to an operator when a part of the sequence is active. The user sets the digital output by setting bits 9 and 10 of the control parameter with a binary value, and then sets a digital output parameter with the option for that same binary value. For example, if a control state was output configured for a binary value of 11, then any digital output configured to “SeqOut-11” would be activated during that time.

Sequencer Direction Selection

The sequencer allows each state to be configured as running **Forward**, **Reverse**, **Stopped**, or **DC Injected** by setting bits 7 and 8 of the control parameters.

Sequencer State Duration

Bits 4, 5, and 6 of each sequencer control parameter specify how that step will allow advancement to the next step. The options for advancement are **time**, **pulse input**, **voltage threshold**, **current threshold**, or **digital input comparison**. After the advancement method is selected with these bits, the threshold of advancement is determined by the state's count parameter (see the next paragraph).

Sequencer State Advance Threshold (via Count Parameter)

The sequencer count parameters work in conjunction with the state duration configuration in the control parameter to determine when to advance to the next state. The function of this parameter is dependent on the state duration configuration as defined in [Table 7-6 on page 88](#). The range of data

programmed into this parameter can be from 0 to 65,535, and can represent time, pulse counts, analog voltage thresholds, analog current thresholds, or digital comparison values.

Table 7-6: Seq Count Definition Based on Cntl Parameter Configuration

Bits 4,5,6 of Seq Cntl	Description of Seq Count Function				
000	Time Base - The current sequencer state will last for a time interval equal to the number "Seq Count X" multiplied by the time base configured in the Seq Appl parameter.				
	Seq Appl Setting	Time to Advance	Maximum Sequence Time		
	1 sec Base	(1 sec) * (Seq Count X)	18.2 hours		
	.1 sec Base	(0.1 sec) * (Seq Count X)	1.82 hours		
	0.1 sec Base	(0.01 sec) * (Seq Count X)	10.92 minutes		
001	Pulse Count - The current sequencer state will last until the number of pulses programmed into "Seq Count X" is detected on terminal Vin1.				
010	Low Analog Voltage Threshold - The active sequencer state lasts until the voltage signal applied to terminal Vin2 is < a value programmed into "Seq Count X." The value programmed into "Seq Count X" should be the percentage of input after span and offset are applied (where 100.00% = 10000). Note: The % of analog input after span and offset can be read in parameter 912, Vin2 Status .				
011	High Analog Voltage Threshold - The active sequencer state lasts until the voltage signal applied to terminal Vin2 is > a value programmed into "Seq Count X." The value programmed into "Seq Count X" should be the percentage of input after span and offset are applied (where 100.00% = 10000). Note: The % of analog input after span and offset can be read in parameter 912, Vin2 Status .				
100	Low Analog Current Threshold - The active sequencer state lasts until the current signal applied to Cin terminals is < a value programmed into "Seq Count X." The value programmed into "Seq Count X" should be the percentage of input after span and offset are applied (where 100.00% = 10000). Note: The % of analog input after span and offset can be read in parameter 911, Cin Status .				
101	High Analog Current Threshold - The active sequencer state lasts until the current signal applied to Cin terminals is > a value programmed into "Seq Count X." The value programmed into "Seq Count X" should be the percentage of input after span and offset are applied (where 100.00% = 10000). Note: The % of analog input after span and offset can be read in parameter 911, Cin Status .				
110	Digital Comparison - The active sequencer state lasts until the binary value of digital inputs configured to Seq1, Seq2, and Seq3 is equal to the value programmed into "Seq Count X." Note: For this option to work, "Dlx Configure" parameters must be set to "Seq1," "Seq2," and "Seq3."				
	Seq Count	Digital Input Terminals			Description
		Seq1	Seq2	Seq3	
	0	0	0	0	No input active
	1	1	0	0	Seq1 active
	2	0	1	0	Seq2 active
	3	1	1	0	Seq1 & Seq2 active
	4	0	0	1	Seq3 active
	5	1	0	1	Seq1 & Seq3 active
	6	0	1	1	Seq2 & Seq3 active
7	1	1	1	Seq1, Seq2, Seq3 active	
111	The sequencer will never advance if this option is selected.				

7.4.4 Sequencer Status Indicators

When the sequencer is enabled, the control path indication field on the keypad will indicate SQx, where x represents the active state of the sequencer. A sample operate screen (where the sequencer is in state 1) is shown below:

```

s:Q:1:::Sto:p:p:e:d:
:::0:0:Hz:::~+0%

```

When the sequencer is running, a warning, “Seq Running,” will flash on the screen to indicate that the drive control state may change without user input. For example:

S.Q.1	S.t.o.p.p.e.d	S.Q.1	S.e.g. R.u.n.n.i.n.g
0	0 Hz	0	0 Hz
	+0%		+0%

When the sequencer is dwelling (pausing) in a state, a warning, “Seq Dwell,” will flash on the screen to indicate that the sequencer will not advance. For example:

S:Q:1	S:t:o:p:p:e:d	S:Q:1	S:e:q	D:w:e:l
0	0:H:z	0	0:H:z	+0%

7.4.5 Sample Sequencer Program

A machine is required to run in the forward direction at 50 Hz for one hour, then quickly decelerate to a stop. While stopped, a digital output must be enabled to sound an alarm to an operator. After two minutes, the machine must accelerate in the reverse direction to 5 Hz until a limit switch is activated, causing the drive to decelerate to a stop. The following three sequential states can be programmed using only the drive:

Table 7-7: Sample Sequencer Program Requirements

	State 1	State 2	State 3
Direction Selection	Forward	Stop	Reverse
Speed Selection	50 Hz	Zero speed	5 Hz
Ramp Selection	Primary	Alternate	Primary
Output Configuration	SeqOut-00	SeqOut-01	SeqOut-10
State Duration	1 hour	2 minutes	Until DI active

First, since two of the sequential states are time-based, the proper setting of the “Seq Appl” parameter must be determined. Since there is not time required that has resolution needed of less than one second, the “1 sec Base” option is the easiest to use. If greater resolution is needed (for example, if a state needed to last for 2.5 seconds), another option should be chosen.

Since the sequence requires use of a digital input and a digital output, two non-sequencer parameters need to be used. Set the parameter “DI1 Configure” to “Seq1” and the parameter “DO1 Configure” to “SeqOut-01.”

Since control of the sequencer is only needed from the keypad, the configuration of the “Input Mode” parameter should be “Local Only.”

Required parameter modifications for this program are provided in Table 7-8, with explanations.

Table 7-8: Required Parameter Settings for Sample Sequencer Program

Parameter	Value	Explanation
Seq Appl	"1 sec Base"	Sets 1 second time increments
DI1 Configure	"Seq1"	Allows DI1 to end state 3
DO1 Configure	"SeqOut-01"	Allows DO1 to be active in state 2
Preset Speed 1	5 Hz	Speed for state 3
Preset Speed 6	50 Hz	Speed for state 1
Seq Cntl1*	00010000110	No outputs/FWD/Timed/Primary Ramp/Preset Speed 6
Seq Count 1	3600	1 hour = 3600 seconds
Seq Cntl 2*	01000001000	Enable Output/Stop/Timed/Alt Ramp/Speed Ignored
Seq Count 2	120	2 minutes = 120 seconds
Seq Cntl 3*	00101100001	No outputs/REV/DI Value/Primary Ramp/Preset Speed 1
Seq Count 3	1	Seq1 active

Chapter 8: Troubleshooting

8.1 X4 Fault Codes

Table 8-1 shows the fault codes that may be displayed during X4 AC drive operation, along with suggestions for recovering from the fault condition.

When faults occur, you can access the status parameters that are saved along with the fault (Advanced Fault history). To view these parameters, which store the drive's status at the time of the fault, view **Fault History**, and select **Last Fault**. Press the **Shift** key while viewing the last fault, and then use the **UP** and **DOWN** arrow keys to scroll through the stored drive status parameters. Press the **Shift** key again to return to the programming mode fault parameter.

Table 8-1: X4 Fault Codes (Page 1 of 5)

Code	Fault Display	Description	Adv. Fault Code	Explanation	Suggestions for Recovery
1	System	System fault	0,1,2	Internal microprocessor problem	Consult factory for repair or replacement.
			3	Thermistor profile incorrect	Consult factory for repair or replacement.
2	EE Checksum	Checksum error	0	Memory problem when reflashing the drive's memory	<ul style="list-style-type: none">Reset drive to factory settings.Consult factory.
			1,2,3	Conflict in drive's memory	<ul style="list-style-type: none">Reset drive to factory settings.Consult factory.
			4	Unable to write an EE parameter after a parameter has been changed through the keypad or SIO	<ul style="list-style-type: none">Reset drive to factory settings.Consult factory.
			5	The drive is receiving EE write requests faster than they can be processed. This would typically be caused by writing parameters too frequently through Modbus.	Slow down the frequency of Modbus writes.
3	Curr Calibr	Current calibration fault	0	Current calibration fault on phase T1/U	<ul style="list-style-type: none">Check the motor connections to the terminal strip of the drive and at the motor.Have motor checked.Consult factory for repair or replacement of drive.
			1	Current calibration fault on phase T2/V	
			2	Current calibration fault on phase T3/W	
4	Power Supp	Power supply fault	0	5V supply is below 4 Vdc for more than 100 ms	<ul style="list-style-type: none">Increase resistance between REF and analog inputs.Check wiring to REF terminals.Consult factory.
6	IOC Trip	Instantaneous overcurrent trip	0	Short circuit was detected on power-up	<ul style="list-style-type: none">Remove the short from the power wiringCheck for shorted motorConsult factory.
			1	Short circuit was detected during operation	
7	MOL	MOL contact fault	0	The MOL digital input was activated, depending on pull-up or pull-down logic configuration	Reset MOL contact or remove condition causing the MOL contact activation.

Note: Shaded faults are auto-resettable, except where noted.

Table 8-1: X4 Fault Codes (Page 2 of 5)

Code	Fault Display	Description	Adv. Fault Code	Explanation	Suggestions for Recovery
8	Model ID	ID # out of range	0,1,2	Control board is not reading the drive ID properly	Consult factory for repair or replacement.
10	Res Lockout	Restart lockout	0	The number of fault restarts is greater than the limit defined in the customer parameter.	Check the actual fault in the fault log and use the appropriate remedy.
11	Ground	Ground fault	0	The drive has detected current imbalance between output phases. Imbalance determined to be current flow to ground.	<ul style="list-style-type: none"> • Check for unbalanced currents. • Check for grounded motor leads or motor. • Consult factory.
12	Vac Imblnce	Input voltage imbalance	0	The drive has detected a single-phase condition or a voltage imbalance outside the drive's rating while running a load that could be damaging to the drive.	Check input voltage and current for imbalance, and correct.
13	OverVoltage	Overvoltage condition	0	The drive has detected an overvoltage condition during power-up (<i>not auto-resettable</i>).	Verify incoming line power is within specification. Add reactor or transformer to correct.
			1,3	The drive has detected an overvoltage condition during a running condition.	Verify incoming line power and check for regenerative load. Reduce Regen load or add dynamic braking resistors. Regen Current Limit may help; consult factory.
			2	The drive has detected an overvoltage condition on power-up on the load side.	Verify incoming line power is within specification. Add reactor or transformer to correct.
15	Dyn Brake	Dynamic brake overload	0	The DB circuit is active on power-up (<i>not auto-resettable</i>)	Check for failed braking transistor. Consult factory.
			1	The DB circuit is being activated for too long, possibly causing the resistor to overheat or fail.	Reduce braking cycle or increase capacity. Activate current limit; consult factory.
			2	The DB circuit is overloaded because of too large a regenerative load.	Reduce braking cycle or increase capacity. Activate current limit; consult factory.
			3,4,5	The DB circuit is faulty on power-up (<i>not auto-resettable</i>).	Consult factory.
18	OverCurrent	Overcurrent condition	0	The drive sensed an overcurrent condition on power-up (<i>not auto-resettable</i>).	Check for failed output power device or shorted motor.
			1	The drive sensed an overcurrent condition during operation. The current has exceeded the safe operation point of power devices.	Reduce load on motor. Verify that Motor FLA is programmed correctly. Check for mechanical binding and shock loading.

Note: Shaded faults are auto-resettable, except where noted.

Table 8-1: X4 Fault Codes (Page 3 of 5)

Code	Fault Display	Description	Adv. Fault Code	Explanation	Suggestions for Recovery
19	Over Temp	Over- temperature condition	0	The temperature of the heatsink exceeded a temperature limit.	Check that ambient temperature does not exceed drive's rating. Check for fan operation (assuming drive has fans installed).
			1	The temperature of the control board exceeded a temperature limit.	Check that ambient temperature does not exceed drive's rating. Check for fan operation (assuming drive has fans installed).
			2	The drive sensed the heatsink thermistor sensor is faulty or not connected properly.	Check thermistor connections or replace. Consult factory.
			3	The drive sensed the control board thermistor sensor is faulty or not connected properly.	Check thermistor connections or replace. Consult factory.
20	Motor TOL	Motor timed overload trip	0	The drive detected an overload that exceeds the customer's defined overload setting.	Check load current demand. Verify Motor FLA is programmed to the correct value. Verify TOL characteristic is correct for the application.
21	Low Temp	Low temperature	0	This fault occurs if the temperature of the heatsink falls below -10.0 degrees C.	Verify that ambient temperature is within the drive's specifications; increase the ambient temperature if necessary.
22	Ref Loss	Speed reference loss	0	The drive detected the analog input was configured to fault if the input current went below the level specified by customer parameters.	Check physical connections for reference signal. Check that programming for 4-20 mA signal is correct. Verify that signal to the drive is correct.
23	Brk Wire	Broken wire detection	0	The drive detected that the potentiometer circuit wiring opened and generated a fault.	Check wiring for loss of connection to control terminals. Check that a proper-value potentiometer is installed.
24	Keypad Loss	Keypad loss	0	This fault occurs because of a problem with the keypad or a keypad connection. It occurs if the drive detects that it cannot read any key presses.	Note: The keypad is not intended for remote mounting without the use of an X4 Remote Keypad option. See Chapter 9 for more information on X4 Optional Equipment.
			1	This fault occurs because of a problem with the keypad, a keypad connection, or the wrong keypad is being used. It occurs if the keypad ID for an X4 cannot be read.	
			2	This fault occurs because of a problem with the keypad or a keypad connection. It occurs if the drive detects that it cannot write to the LCD.	

Note: Shaded faults are auto-resettable, except where noted.

Table 8-1: X4 Fault Codes (Page 4 of 5)

Code	Fault Display	Description	Adv. Fault Code	Explanation	Suggestions for Recovery
25	Comm Loss	Communication loss	0	This fault occurs when the drive is in a serial link control path and the amount of time since the last Modbus comm. exceeds the time set in parameter 903 (SIO Timer) .	Check connections to the Modbus port. Adjust value of parameter 903 (SIO Timer) as needed.
26	Regen Time	Regen timeout	0	This fault occurs if the drive takes more time to decelerate to a stop than is allowed. The timeout is determined by the longest deceleration ramp time (Decel1 or Decel2) plus the Regen Timeout parameter.	Reduce the amount of regenerative energy or increase the Regen timeout parameter.
27	Pwr Bridge	Power bridge fault	0,1,2	The drive detected a failure in the output power devices.	Check for failed input power device.
28	Drive TOL	Drive timed overload	0	The drive sensed an overload that exceeded the drive rating.	Check that load conditions do not exceed the drive's rating (120% for 60 seconds from nameplate current rating for normal duty and 150% or rated current for 60 seconds heavy duty).
29	Stuck Key	Stuck key error	0	This fault occurs if a key press is detected upon power-up. This would occur because of a defective keypad or because someone was holding down a key when powering-up the drive.	Check for stuck keypad and repair or replace. Consult factory.
30	Param Range	Parameter out of range	0	One of the customer parameters is out of range.	Check for a parameter value saved out of the standard range. Reset parameters to factory default. Consult factory.
31	Pwr Wiring	Power wiring error	0	This fault flags a problem with the drive wiring.	Check that input power wiring is not connected to load power terminals. Consult factory.
			1	This fault can occur if an IOC fault is detected during the power wiring test.	

Note: Shaded faults are auto-resettable, except where noted.

Table 8-1: X4 Fault Codes (Page 5 of 5)

Code	Fault Display	Description	Adv. Fault Code	Explanation	Suggestions for Recovery
32	Low Voltage (Undervoltage)	Low voltage trip	0	This fault occurs if a power dip occurs when the drive is operating, and the drive is not able to ride through the power dip before shutting off outputs.	Verify that input line power is within the drive's specifications. Add a transformer or reduce demands to power feed. Consult factory.
			1	This fault occurs when an undervoltage condition (power-down) is detected, and when parameter 501 is set for Vector or Linear Auto mode, with "Coast Stop" assigned as the parameter value. In undervoltage conditions, the drive coasts to a stop, and generates an undervoltage fault.	
			2	This fault occurs when an undervoltage condition (power-down) is detected, and when parameter 501 is set for Vector or Linear Auto mode, with "Controlled" assigned as the parameter value. In undervoltage conditions, the drive decelerates the motor. If power is restored, the drive accelerates to the command frequency without faulting; if the drive stops, it generates an undervoltage fault.	
33	1Ph Overload	1Ph overload	0	If the user configures parameter 517 (Single Phase) for single-phase operation, this fault occurs if the bus voltage ripple is outside the limit of the drive.	Check that input power demand does not exceed the drive's capacity for single-phase operation. Consult factory.
34	RS Meas. Fail	Stator resistance measurement failed	0	If the drive cannot measure the stator resistance properly, this fault occurs.	Try the routine again and if the fault occurs twice, consult the factory.
35	Fan Loss	Loss of fan control or operation	0	There is a problem with the heat sink fan.	Consult factory.
			1	There is a problem with the internal fan. This occurs only on Size 4 and 5 models. All other models display a fan error warning. Note that this is lack of fan control, so the fan can be spinning and this fault will still occur. This can happen if the fan is on and should not be, or if the fan feedback signals are obstructed from getting to the control board.	

Note: Shaded faults are auto-resettable, except where noted.

Chapter 9: X4 AC Drive Options

PDA-trAC+® For Pocket PC

The wireless optical interface on the **X4** allows data transfer for X4 AC Drive settings, using the PDA-trAC+ to upload, download, edit, and save drive parameters easily and conveniently. This software can be downloaded from our web site at www.vacon.com, or contact your sales representative.

WIN-trAC® and WIN-trAC PRO® Drive Supervisor

This Windows®-based software program provides a simple and unique way to configure, monitor, diagnose, control, and manage drive applications. **WIN-trAC**, for single-drive, point-to-point applications, is provided free with the SIOC03 adapter for drives. **WIN-trAC PRO**, configured for multi-drive applications, must be registered for use.

Serial Communications Adapter

Part Numbers: **SIOC03**

This adapter is required when you are connecting to a PC. It converts the RS-232 serial output on the PC to RS-485 accepted by the drive. Cables and our WIN-trAC software package are bundled with this option.

Remote Keypad for X4 when used as a panel-mounted drive (Sizes 0 - 2)

Part Number: **XRKPM**

This Remote Keypad kit can be used when a Size 0 - 2 **X4** model is mounted inside a host enclosure, and when programming and operation need to be done on the front of the enclosure. The kit comes with a keypad and adapter assembly that replaces the standard keypad on the drive. The original keypad assembly is removed and discarded, or can be kept as a spare for other drive models not using the XRKPM option. The option includes a standard 12-foot ribbon cable. When installed properly, the remote keypad meets NEMA 4x/IP66 standards and the drive rating will be IP20.

Remote Keypad for X4 when used as a wall-mounted drive (Sizes 0 - 2)

Part Number: **XRKWM**

This Remote Keypad kit can be used when a Size 0 - 2 **X4** model is mounted in a stand-alone configuration, and when programming and operation need to be done in another location. The kit comes with a keypad and adapter assembly that replaces the standard keypad on the drive. The remote keypad can be mounted up to 100 feet from the drive, and requires a 15-conductor shielded cable to be supplied by the user. When installed properly, both the remote keypad and drive meet NEMA 4x/IP66 standards.

Remote Keypad Mounting Kit for X4 (Sizes 3 through 5)

Part Number: **XRKMK**

This Remote Keypad kit can be used with a Size 3, 4, or 5 **X4** model to allow the keypad to be mounted in another location. The kit comes with an adapter assembly to allow the existing keypad to be remotely mounted. The remote keypad can be mounted up to 100 feet from the drive, and requires a 15-conductor shielded cable to be supplied by the user. When installed properly, both the remote keypad and drive will meet the unit's core enclosure standards, either NEMA 4x/IP66, or NEMA 12/IP55.

Appendix A: Parameter 201 Options

The following table shows how parameter **201** (Input Mode) options function in local or remote mode.

Parameter 201 Option	Local		Remote	
	Speed Control	Start/Stop Control	Speed Control	Start/Stop Control
Local Only	Keypad	Keypad	None	None
Remote Only	None	None	Speed potentiometer, terminal strip signals	Terminal strip switch network
L/R Rem Ctl	Keypad	Keypad	Keypad	Terminal strip switch network
L/R Rem Ref	Keypad	Keypad	Speed potentiometer, terminal strip signals	Keypad
L/R Rem Bth	Keypad	Keypad	Speed potentiometer, terminal strip signals	Terminal strip switch network
EMOP_EMOP2	None	None	Terminal strip momentary pushbuttons	Terminal strip switch network
LOC / EMOP_EMOP2	Keypad	Keypad	Terminal strip momentary pushbuttons	Terminal strip switch network



EU Declaration of Conformity

WE: Vacon, Inc.
3181 Black Gap Road
Chambersburg, PA 17202 USA

hereby declare that the products:

Product Name: Vacon X Series AC Drives;

Model Designation: Vacon X4CxxxxxC(or D) and X5CxxxxxC(or D) and X5CxxxxxC09

have been designed and manufactured in accordance with standards:

Low Voltage Directive:	EN50178
Electromagnetic compatibility:	Electronic equipment for use in power installations The models listed above do not include internal EMC filters and external equipment must be used to achieve EN61800-3 compliance. Units in the 380-460V range (as denoted with a 1 suffix, e.g. XxC4xxxxC1) include internal EMC filters, and fulfill the requirements of the 2 nd environment (EN61800-3 category C3; EN55011 class A2). XxC40750C through XxC42000D meet the 2nd environment requirements without added filters.

The products referenced above are for the use of control of the speed of AC motors.

Via internal mechanisms and Quality Control, it is verified that these products conform to the requirements of the Directive and applicable standards.

Chambersburg, PA, USA — February 27, 2009

Frank H. Custis
Product Marketing Manager
Harsh Duty Drives
Vacon

VACON

DRIVEN BY DRIVES

Find your nearest Vacon office
on the Internet at:

www.vacon.com



CONSTANT SPEED DRIVES



SIMPLE RELIABLE EFFICIENT



UNICASE™






**NORD GEAR
DRIVESYSTEMS**


Service

- Oil Plugs
 - In-line
 - Clincher™
 - Helical-bevel
 - Helical-worm
- Parts Lists
 - In-line
 - Clincher
 - Helical-bevel
 - Helical-worm
 - Helical Input Stage
 - Motor
 - NEMA C-face
 - Solid Input Shaft - W

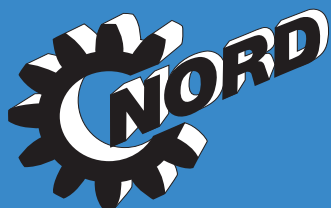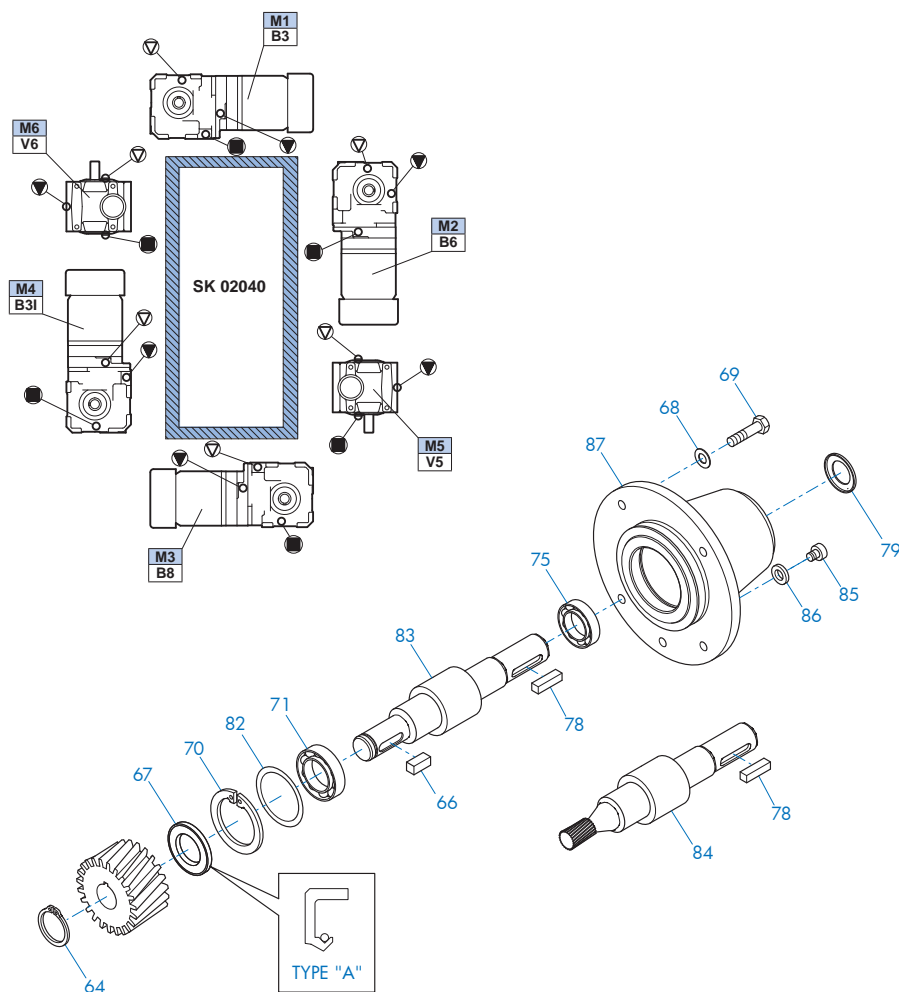


www.nord.com

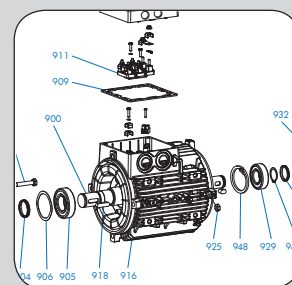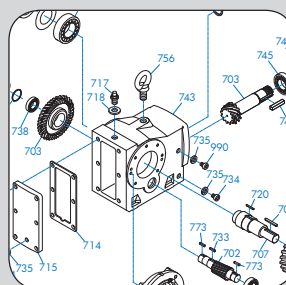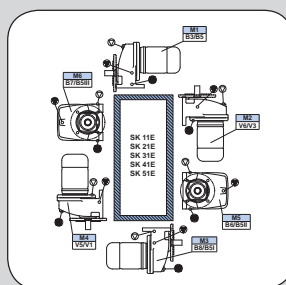

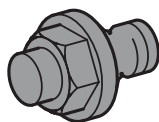

Oil Plugs

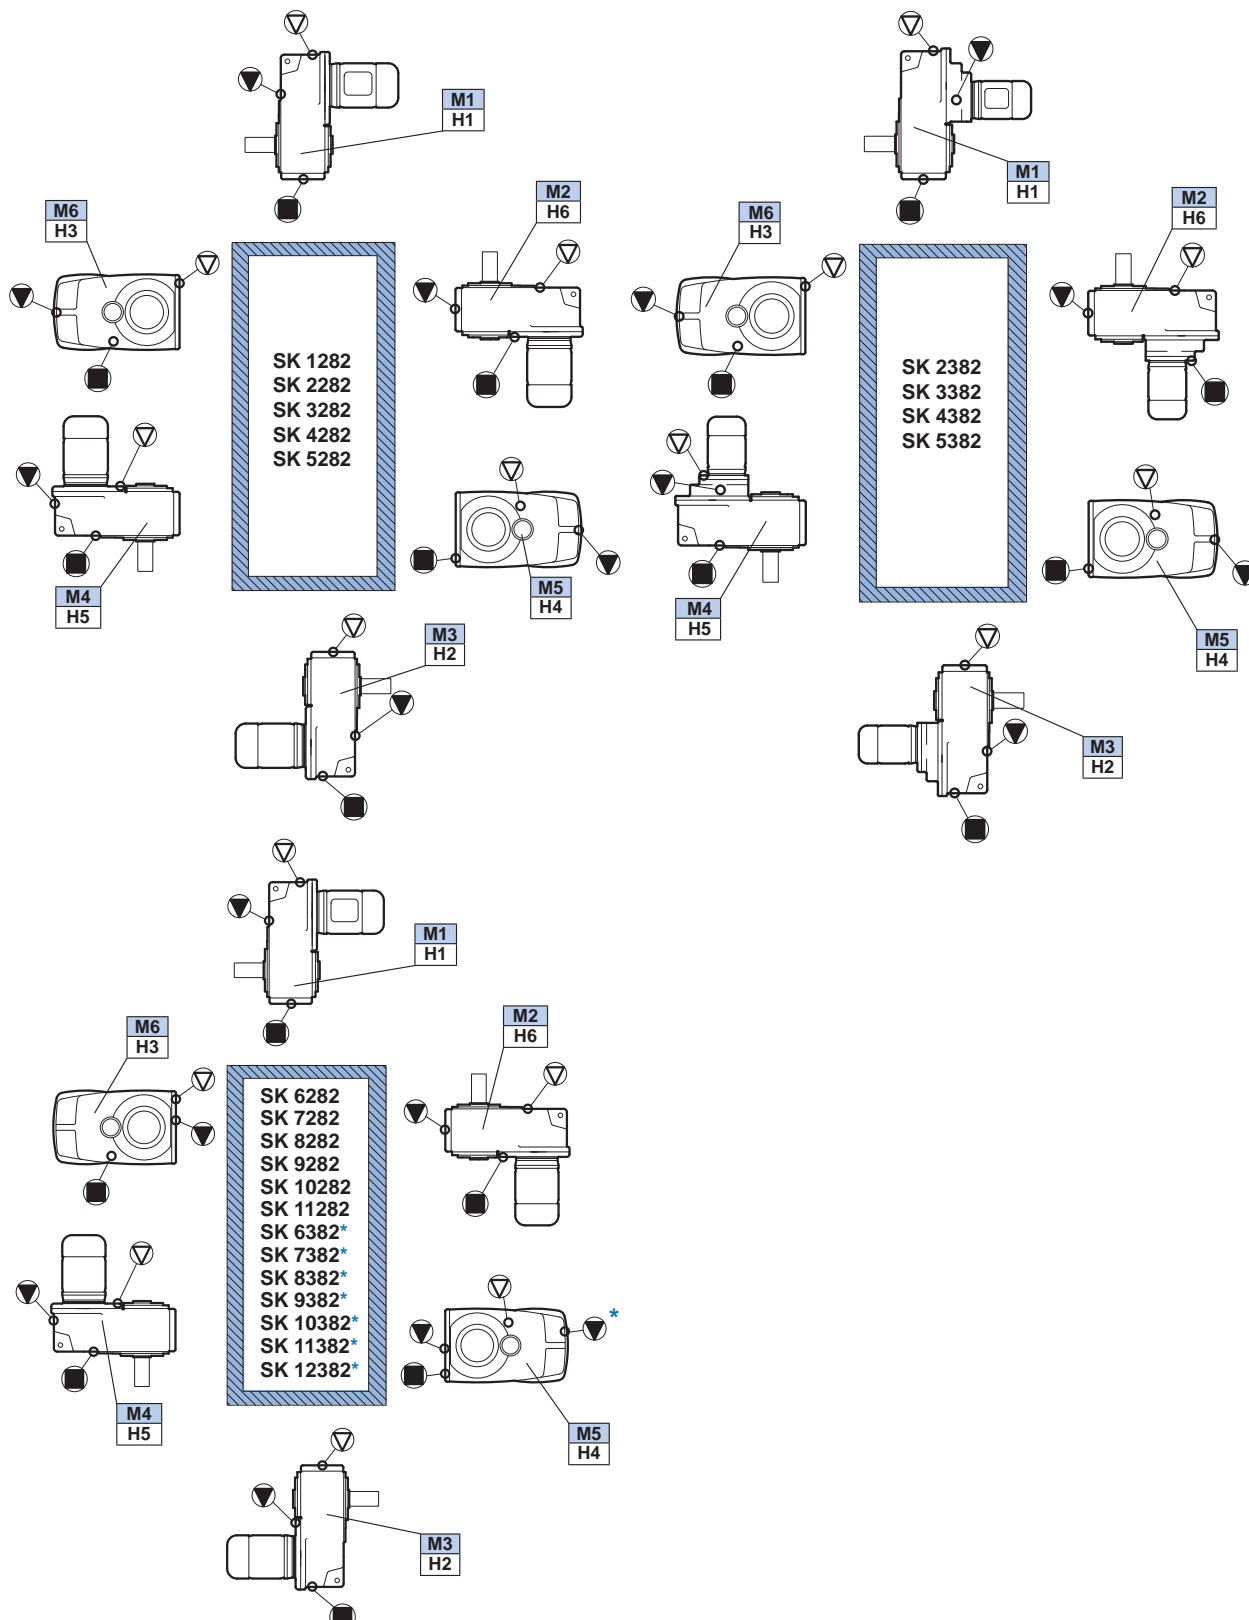

▽ = Vent

▼ = Oil Level


■ = Oil Drain



Parts Lists



Clincher™ SK0182NB + SK1282 - SK5282 AZB + VZ

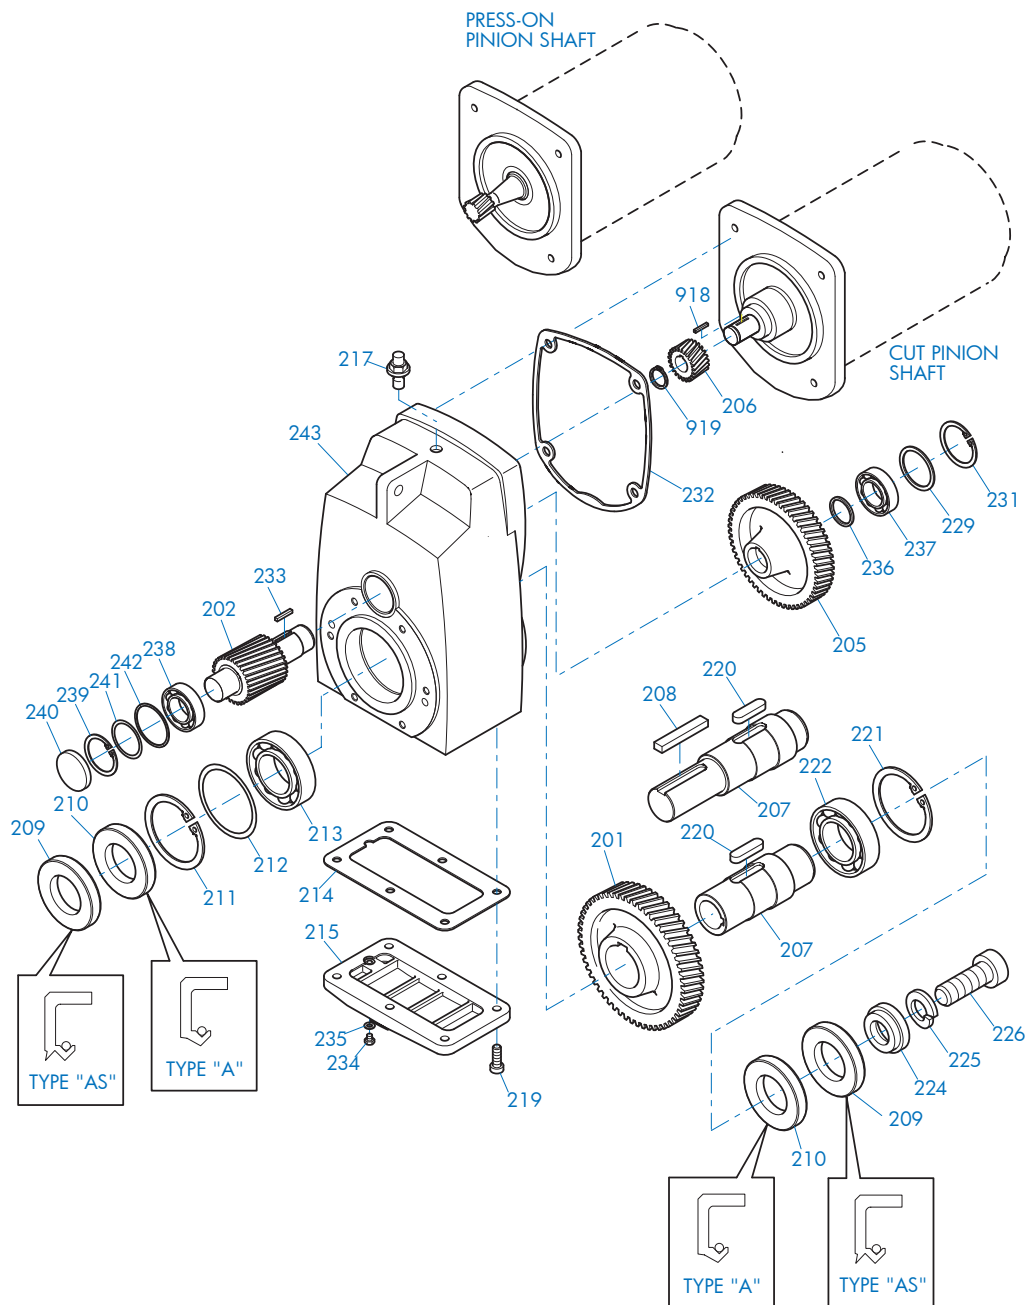

201 Gear	213 Anti-Friction Bearing	226 Bolt	239 Snap Ring
202 Pinion Shaft	214 Gasket	229 Thrust Washer	240 Bore Plug
205 Gear	215 Inspection Cover	231 Snap Ring	241 Shim
206 Pinion	217 Vent Plug	232 Gasket	242 Thrust Washer
207 Output Shaft	219 Bolt	233 Key	243 Gearcase
208 Key	220 Key	234 Drain Plug	918 Key
209 Oil Seal	221 Snap Ring	235 Gasket	919 Snap Ring
210 Oil Seal	222 Anti-Friction Bearing	236 Thrust Washer	
211 Snap Ring	224 Retaining Washer	237 Anti-Friction Bearing	
212 Shim	225 Lock Washer	238 Anti-Friction Bearing	



www.nord.com

NORD Gear Corporation

National Customer Service Toll-Free: 888.314.6673
Info.us@nord.com

NORD Gear Limited

Toll-Free in Canada: 800.668.4378
info.ca@nord.com

WEST

Corona, CA (Los Angeles)
Phone: 608.849.0190

MIDWEST

Waukegan, WI (Madison)
Phone: 608.849.7300

EAST

Charlotte, NC
Phone: 608.849.0140

CANADA

Brampton, ON (Toronto)
Phone: 905.796.3606

PDA1004 & PDA1044

Relay & I/O Expansion Module

Instruction Manual



PRECISION DIGITAL CORPORATION
89 October Hill Road • Holliston MA 01760 USA
Tel (800) 343-1001 • Fax (508) 655-8990

**PRECISION
DIGITAL** 

www.predig.com

Disclaimer

The information contained in this document is subject to change without notice. Precision Digital makes no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability or fitness for a particular purpose.



CAUTION: Read complete instructions prior to installation and operation of the module.



WARNING: Risk of electric shock or personal injury.

Expansion modules **DO NOT** contain internal jumpers or user settings.



WARNING!

***Hazardous voltages exist within enclosure.
Installation and service should be performed only by
trained service personnel.***



WARNING!

***Do not connect or disconnect the expansion module
with the power on!***

Limited Warranty

Precision Digital Corporation warrants this product against defects in material or workmanship for the specified period under "Specifications" from the date of shipment from the factory. Precision Digital's liability under this limited warranty shall not exceed the purchase value, repair, or replacement of the defective unit.

Registered Trademarks

All trademarks mentioned in this document are the property of their respective owners.

© 2009 Precision Digital Corporation. All rights reserved.

www.predig.com

Table of Contents

INTRODUCTION	3
Accessories	3
SPECIFICATIONS	4
General (applicable to both models)	4
PDA1004 4-Relay Expansion Module	4
PDA1044 Digital Input & Output Expansion Module	5
INSTALLATION	6
External Relays & Digital I/O Connections	6
Terminal Block Connections	7

INTRODUCTION

These external expansion modules add functionality to any **ProVu** in the field. They can be added at any time and are easy-to-install.

Add a 4-relay expansion module and/or up to two I/O modules. The menu items for these modules do not appear until the module is connected, simplifying the basic menu.

The relay module consists of four 3 amp Form A (SPST) relays.

The I/O module has four digital inputs and four digital outputs per module. External digital inputs can function similarly to the front panel function keys. They can be configured to trigger certain events (i.e. acknowledge/reset alarms, reset max and/or min values, disable/enable all output relays, and hold current relay states), provide direct menu access point, or mimic front panel keys. Digital outputs can be used to remotely monitor **ProVu** alarm relay output states, or the states of a variety of actions and functions executed by the meter.

RS-232 or RS-422/485 communications modules are also available; refer to the accessories section for ordering details.

Accessories

Model	Description
PDA1232	RS-232 serial adapter
PDA1485	RS-422/485 serial adapter
PDA1002	DIN rail mounting kit for two expansion modules
PDA1200	Meter copy cable

SPECIFICATIONS

Except where noted all specifications apply to operation at +25°C.


General (applicable to both models)

POWER	ProVu meter M-LINK connection
CABLE	Standard CAT5e cable; provided with module. <i>Note: To ensure optimum performance use only supplied cables.</i>
CONNECTORS	RJ45; identical and interchangeable Removable screw terminal blocks that accept 12 to 22 AWG wire.
TIGHTENING TORQUE	Screw terminal connectors: 5 lb-in (0.56 Nm)
ENCLOSURE	ABS-94HB material, UL94HB (Flame-Class Rating)
OVERALL DIMENSIONS	2.286" x .924" x 3.624" (W x H x D) 58.06 mm x 23.47 mm x 92.05 mm (W x H x D)

PDA1004 4-Relay Expansion Module

RELAYS	Four Form A (SPST); Rated 3 A @ 30 VDC and 125/250 VAC for resistive loads 1/14 HP @ 125/250 VAC for inductive loads.
WEIGHT	2.4 oz (68 g)

PDA1044 Digital Input & Output Expansion Module

CHANNELS	4 digital inputs & 4 digital outputs per module
	Up to 2 modules for a total of 8 inputs & 8 outputs
SYSTEM	<i>Note: The jumper located between the RJ45 connectors must be removed on the second module in order for the system to recognize it as module #2.</i>
DIGITAL INPUT LOGIC HIGH	3 to 5 VDC
DIGITAL INPUT LOGIC LOW	0 to 1.25 VDC
DIGITAL OUTPUT LOGIC HIGH	4.75 to 5 VDC
DIGITAL OUTPUT LOGIC LOW	0 to 0.4 VDC
SOURCE CURRENT	10 mA maximum output current
SINK CURRENT	1.5 mA minimum input current
+5 V TERMINAL	<p>To be used as pull-up for digital inputs only. Connect normally open pushbuttons across +5 V & DI1-4.</p> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p><u>DO NOT</u> use +5 V terminal (pin 1) to power external devices.</p> <p>WARNING</p> </div> </div>
WEIGHT	2.2 oz (62 g)

INSTALLATION

There is no need to remove the expansion module from its case to complete the installation, wiring, or setup of the unit.



Do not connect or disconnect the expansion module with the power on!

WARNING!

External Relays & Digital I/O Connections

The relay and the digital I/O expansion modules PDA1004 & PDA1044 are connected to the meter using a CAT5e cable provided with each module (see Figure 1).

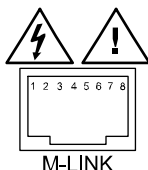


Figure 1: M-Link Connector Location on the Meter



WARNING!

Do not connect any equipment other than Precision Digital's expansion modules, cables, or meters to the RJ45 M-LINK connector. Otherwise damage will occur to the equipment and the meter.

The two RJ45 connectors on the expansion modules are identical and interchangeable; they are used to connect additional modules to the system.

Note: The jumper located between the RJ45 connectors of the PDA1044 (see Figure 2) must be removed on the second digital I/O module in order for the system to recognize it as module #2.



Figure 2: Jumper Location

Terminal Block Connections

All connections are made to removable screw terminal connectors located at the front of the module.



Use copper wire with 60°C or 60/75°C insulation for all line voltage connections. Observe all safety regulations. Electrical wiring should be performed in accordance with all applicable national, state, and local codes to prevent damage to the meter and ensure personnel safety.

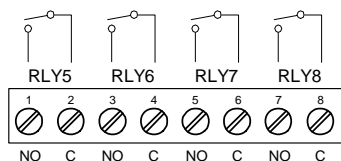


Figure 3: External Relays Module Connections

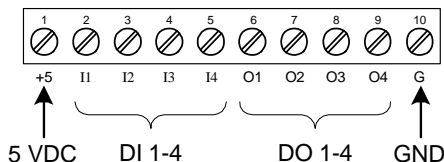


Figure 4: Digital I/O Module Connections

How to Contact Precision Digital

- For Technical Support please
Call: (800) 610-5239 or (508) 655-7300
Fax: (508) 655-8990
Email: support@predig.com
- For Sales Support or to place an order please
contact your local distributor or
Call: (800) 343-1001 or (508) 655-7300
Fax: (508) 655-8990
Email: sales@predig.com
- For the latest version of this manual please visit
www.predig.com






1700

OPERATOR'S MANUAL

■ 1710	■ 1720	■ 1722	■ 1723	■ 1724	■ 1725	■ 1730
■ 1732	■ 1733	■ 1734	■ 1735	■ 1740	■ 1742	■ 1743
■ 1744	■ 1745	■ 1750	■ 1752	■ 1753	■ 1754	■ 1755

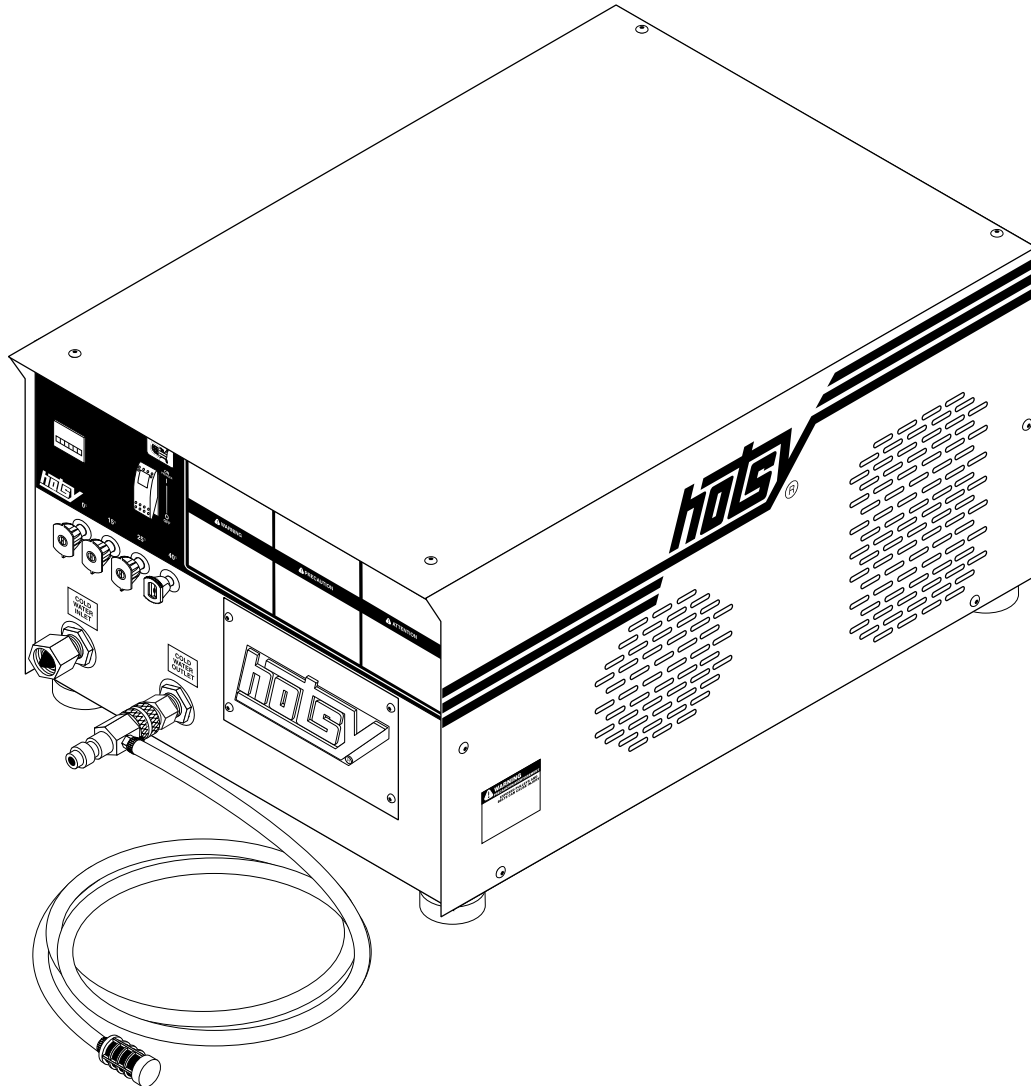

For technical assistance or the Hotsy Dealer nearest you, consult our web page at www.hotsy.com

8.914-380.0 / 97-6419

1710 SPECIFICATIONS

- Pump Volume At Pump Head: 2.75 GPM
- Pump Pressure At Pump Head: 1000 PSI
- Machine Voltage: 120VAC/60Hz/1Ph
- Total Machine Amperage: 20 Amps
- Machine Weight: 154 Lbs.
- Shipping Weight: 200 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1720 SPECIFICATIONS

- Pump Volume At Pump Head: 3.9 GPM
- Pump Pressure At Pump Head: 2000 PSI
- Machine Voltage: 230VAC/60Hz/1Ph
- Total Machine Amperage: 28 Amps
- Machine Weight: 229 Lbs.
- Shipping Weight: 275 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1722 SPECIFICATIONS

- Pump Volume At Pump Head: 3.9 GPM
- Pump Pressure At Pump Head: 2000 PSI
- Machine Voltage: 208VAC/60Hz/1Ph
- Total Machine Amperage: 30 Amps
- Machine Weight: 229 Lbs.
- Shipping Weight: 250 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1723 SPECIFICATIONS

- Pump Volume At Pump Head: 3.9 GPM
- Pump Pressure At Pump Head: 2000 PSI
- Machine Voltage: 208VAC/60Hz/3Ph
- Total Machine Amperage: 16 Amps
- Machine Weight: 229 Lbs.
- Shipping Weight: 250 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1724 SPECIFICATIONS

- Pump Volume At Pump Head: 3.9 GPM
- Pump Pressure At Pump Head: 2000 PSI
- Machine Voltage: 230VAC/60Hz/3Ph
- Total Machine Amperage: 14.4 Amps
- Machine Weight: 229 Lbs.
- Shipping Weight: 250 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1725 SPECIFICATIONS

- Pump Volume At Pump Head: 3.9 GPM
- Pump Pressure At Pump Head: 2000 PSI
- Machine Voltage: 460VAC/60Hz/3Ph
- Total Machine Amperage: 7.2 Amps
- Machine Weight: 229 Lbs.
- Shipping Weight: 250 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1730 SPECIFICATIONS

- Pump Volume At Pump Head: 3.46 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 230VAC/60Hz/1Ph
- Total Machine Amperage: 36 Amps
- Machine Weight: 241 Lbs.
- Shipping Weight: 280 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1732 SPECIFICATIONS

- Pump Volume At Pump Head: 3.46 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 208VAC/60Hz/1Ph
- Total Machine Amperage: 38 Amps
- Machine Weight: 241 Lbs.
- Shipping Weight: 330 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1733 SPECIFICATIONS

- Pump Volume At Pump Head: 3.46 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 208VAC/60Hz/3Ph
- Total Machine Amperage: 23 Amps
- Machine Weight: 241 Lbs.
- Shipping Weight: 330 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1734 SPECIFICATIONS

- Pump Volume At Pump Head: 3.46 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 230VAC/60Hz/3Ph
- Total Machine Amperage: 21.5 Amps
- Machine Weight: 241 Lbs.
- Shipping Weight: 290 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1735 SPECIFICATIONS

- Pump Volume At Pump Head: 3.46 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 460VAC/60Hz/3Ph
- Total Machine Amperage: 11 Amps
- Machine Weight: 241 Lbs.
- Shipping Weight: 270 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1740 SPECIFICATIONS

- Pump Volume At Pump Head: 4.76 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 230VAC/60Hz/1Ph
- Total Machine Amperage: 45 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 305 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1742 SPECIFICATIONS

- Pump Volume At Pump Head: 4.76 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 208VAC/60Hz/1Ph
- Total Machine Amperage: 45 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 305 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1743 SPECIFICATIONS

- Pump Volume At Pump Head: 4.76 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 208VAC/60Hz/3Ph
- Total Machine Amperage: 29 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 302 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1744 SPECIFICATIONS

- Pump Volume At Pump Head: 4.76 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 230VAC/60Hz/3Ph
- Total Machine Amperage: 26.8 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 300 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1745 SPECIFICATIONS

- Pump Volume At Pump Head: 4.76 GPM
- Pump Pressure At Pump Head: 3000 PSI
- Machine Voltage: 460VAC/60Hz/3Ph
- Total Machine Amperage: 13.5 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 315 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1750 SPECIFICATIONS

- Pump Volume At Pump Head: 5.93 GPM
- Pump Pressure At Pump Head: 2500 PSI
- Machine Voltage: 230VAC/60Hz/1Ph
- Total Machine Amperage: 45 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 320 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1752 SPECIFICATIONS

- Pump Volume At Pump Head: 5.93 GPM
- Pump Pressure At Pump Head: 2500 PSI
- Machine Voltage: 208VAC/60Hz/1Ph
- Total Machine Amperage: 45 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 320 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1753 SPECIFICATIONS

- Pump Volume At Pump Head: 5.93 GPM
- Pump Pressure At Pump Head: 2500 PSI
- Machine Voltage: 208VAC/60Hz/3Ph
- Total Machine Amperage: 29 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 320 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1754 SPECIFICATIONS

- Pump Volume At Pump Head: 5.93 GPM
- Pump Pressure At Pump Head: 2500 PSI
- Machine Voltage: 230VAC/60Hz/3Ph
- Total Machine Amperage: 26.8 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 310 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

1755 SPECIFICATIONS

- Pump Volume At Pump Head: 5.93 GPM
- Pump Pressure At Pump Head: 2500 PSI
- Machine Voltage: 460VAC/60Hz/3Ph
- Total Machine Amperage: 13.5 Amps
- Machine Weight: 257 Lbs.
- Shipping Weight: 310 Lbs.
- Machine Dimensions:
Length = 30.25", Width = 21", Height = 15"

CONTENTS

Introduction and General Safety Information	6-7
Operating Instructions.....	8
Component Identification	9
Detergent Injector	10
General Washing Techniques and Maintenance.....	11
Multi-Room Installation	12
Troubleshooting	13-14
Maintenance	15
Oil Change Record	15
Exploded Views	16-17
Exploded View Parts List	18-22
Hose, Gun & Wand Assembly & Parts List	23
Specifications.....	24-25
HD Series Pump Exploded View and Parts List	26-27
MT High Temperature Pump Exploded View and Parts List	28-29
HC950A Pump Exploded View and Parts List	30-31
VBR Unloader Exploded View and Parts List	32
Wiring Diagrams	33-44
Warranty	

Model Number _____

Serial Number _____

Date of Purchase _____

The model and serial numbers will be found on a decal attached to the pressure washer. You should record both serial number and date of purchase and keep in a safe place for future reference.

INTRODUCTION & SAFETY INFORMATION

Thank you for purchasing this Pressure Washer.

We reserve the right to make changes at any time without incurring any obligation.

Owner/User Responsibility:

The owner and/or user must have an understanding of the manufacturer's operating instructions and warnings before using this pressure washer. Warning information should be emphasized and understood. If the operator is not fluent in English, the manufacturer's instructions and warnings shall be read to and discussed with the operator in the operator's native language by the purchaser/owner, making sure that the operator comprehends its contents.

Owner and/or user must study and maintain for future reference the manufacturers' instructions.


The operator must know how to stop the machine quickly and understand the operation of all controls. Never permit anyone to operate the engine without proper instructions.

This manual should be considered a permanent part of the machine and should remain with it if machine is resold.

When ordering parts, please specify model and serial number. Use only identical replacement parts.

This machine is to be used only by trained operators.

IMPORTANT SAFETY INFORMATION

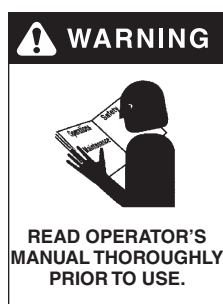

WARNING: To reduce the risk of injury, read operating instructions carefully before using.

1. Read the owner's manual thoroughly. Failure to follow instructions could cause malfunction of the machine and result in death, serious bodily injury and/or property damage.
2. Know how to stop the machine and bleed pressure quickly. Be thoroughly familiar with the controls.
3. Stay alert — watch what you are doing.
4. All installations must comply with local codes. Contact your electrician, plumber, utility company or the selling distributor for specific details. If your machine is rated 250 volts or less, single phase will be provided with a ground fault circuit interrupter (GFCI). If rated more than 250 volts, or more than single phase this product should only be connected to a power supply receptacle protected by a GFCI.

DANGER: Improper connection of the equipment-grounding conductor can result in a risk of electrocution. Check with a qualified electrician or service personnel if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use any type of adaptor with this product



WARNING: Keep wand, hose, and water spray away from electric wiring or fatal electric shock may result.

5. To protect the operator from electrical shock, the machine must be electrically grounded. It is the responsibility of the owner to connect this machine

to a UL grounded receptacle of proper voltage and amperage ratings. Do not spray water on or near electrical components. Do not touch machine with wet hands or while standing in water. Always disconnect power before servicing.



WARNING: Flammable liquids can create fumes which can ignite, causing property damage or severe injury.

WARNING: Risk of explosion — Do not spray flammable liquids.

6. Do not allow acids, caustic or abrasive fluids to pass through the pump.
7. Never run pump dry or leave spray gun closed longer than 1-2 minutes.
8. Keep operating area clear of all persons.




WARNING: High pressure spray can cause paint chips or other particles to become airborne and fly at high speeds. To avoid personal injury, eye, hand and foot safety devices must be worn.

9. Eye, hand, and foot protection must be worn when using this equipment.

SAFETY INFORMATION

WARNING

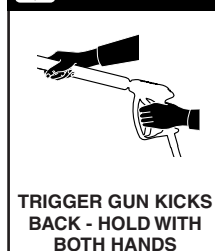

WARNING: Grip cleaning wand securely with both hands before starting. Failure to do this could result in injury from a whipping wand.

WARNING



WARNING: High pressure developed by these machines will cause personal injury or equipment damage. Keep clear of nozzle. Use caution when operating. Do not direct discharge stream at people, or severe injury or death will result.

10. To reduce the risk of injury, close supervision is necessary when a machine is used near children. Do not allow children to operate the pressure washer. **This machine must be attended during operation.**

11. Never make adjustments on machine while in operation.

12. Be certain all quick coupler fittings are secured before using pressure washer.

WARNING



WARNING: Protect machine from freezing.

13. To keep machine in best operating conditions, it is important you protect machine from freezing. Failure to protect machine from freezing could cause malfunction of the machine and result in death,

serious bodily injury, and/or property damage. Follow storage instructions specified in this manual.

14. Inlet water must be clean fresh water and no hotter than 90°F.

15. Manufacturer will not be liable for any changes made to our standard machines or any components not purchased from us.

16. The best insurance against an accident is precaution and knowledge of the machine.

WARNING




WARNING: Be extremely careful when using a ladder, scaffolding or any other relatively unstable location. The cleaning area should have adequate slopes and drainage to reduce the possibility of a fall due to slippery surfaces.

17. Do not overreach or stand on unstable support. Keep good footing and balance at all times.

18. Do not operate this machine when fatigued or under the influence of alcohol, prescription medications, or drugs.



19. Follow the maintenance instructions specified in the manual.

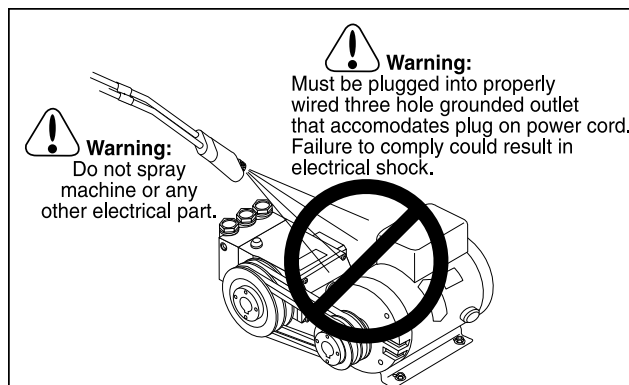

OPERATING INSTRUCTIONS

PRE-OPERATION CHECK

- ☐ Read machine safety warnings
- ☐ Pump oil (SAE 30W (non-detergent oil))
- ☐ Cold water supply (1gpm over machines rating • 5/8" • 20 psi)
- ☐ Proper power supply and circuit protection
- ☐ Hose, wand, nozzles (nozzle sizes per serial plate)
- ☐ Water filter (intact, non restrictive)
- ☐ Read operation instructions
- ☐ This machine must be protected from the elements/ freezing.

SET-UP PROCEDURES

This machine is intended for indoor use. Machine must be stored indoors when not in use.


1. Attach a minimum 5/8" garden hose to inlet connector. Minimum flow should be 1 gpm over the flow rate of the pressure washer.
2. Attach high pressure hose to discharge nipple using quick coupler. Lock coupler securely into place by pulling back coupler collar and inserting it onto discharge nipple, then pushing collar forward to lock in place.
3. Attach wand to spray gun using teflon tape on threads to prevent leakage.
4. Attach connector on discharge hose to spray gun using teflon tape on threads.
5. Remove oil plug on top of pressure washer pump and replace with dipstick supplied. (This may be installed from the factory.)
6. Check oil level on oil dipstick on top of pump. Oil should be visible one half way up sight glass (30W non-detergent).

OPERATING INSTRUCTIONS

1. Read safety and preventative maintenance instructions before starting machine.
2. Turn on water at faucet and pull trigger on spray gun allowing water to flow until all air has discharged from system. Check for water leaks; tighten as needed.
3. Push the pump switch on.
4. Turn the variable pressure control handle clockwise to increase pressure.
5. To apply detergent read "How to Use The Detergent Injector."


SHUT DOWN PROCEDURES

1. Rinse with clean water to remove any soap residue, by placing detergent hose into fresh water bucket and operating injector as described below.
2. Release the trigger on the spray gun. Turn the switch off if the machine is going to be left unattended. (Time delay only).
3. Turn off water supply.
4. Open spray gun to relieve remaining pressure.
5. Remove water supply hose.

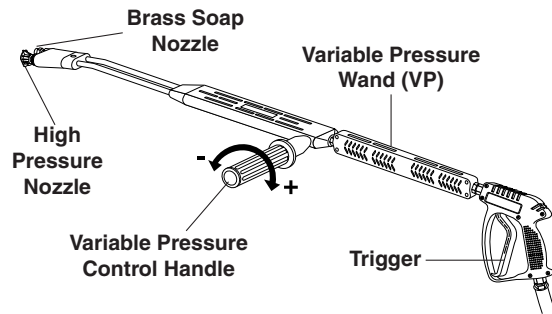


Selection of high or low pressure is accompanied by turning the handle. **Note:** High pressure nozzle must be inserted at end of wand to obtain high pressure. To apply soap read operator's manual.

COMPONENT IDENTIFICATION

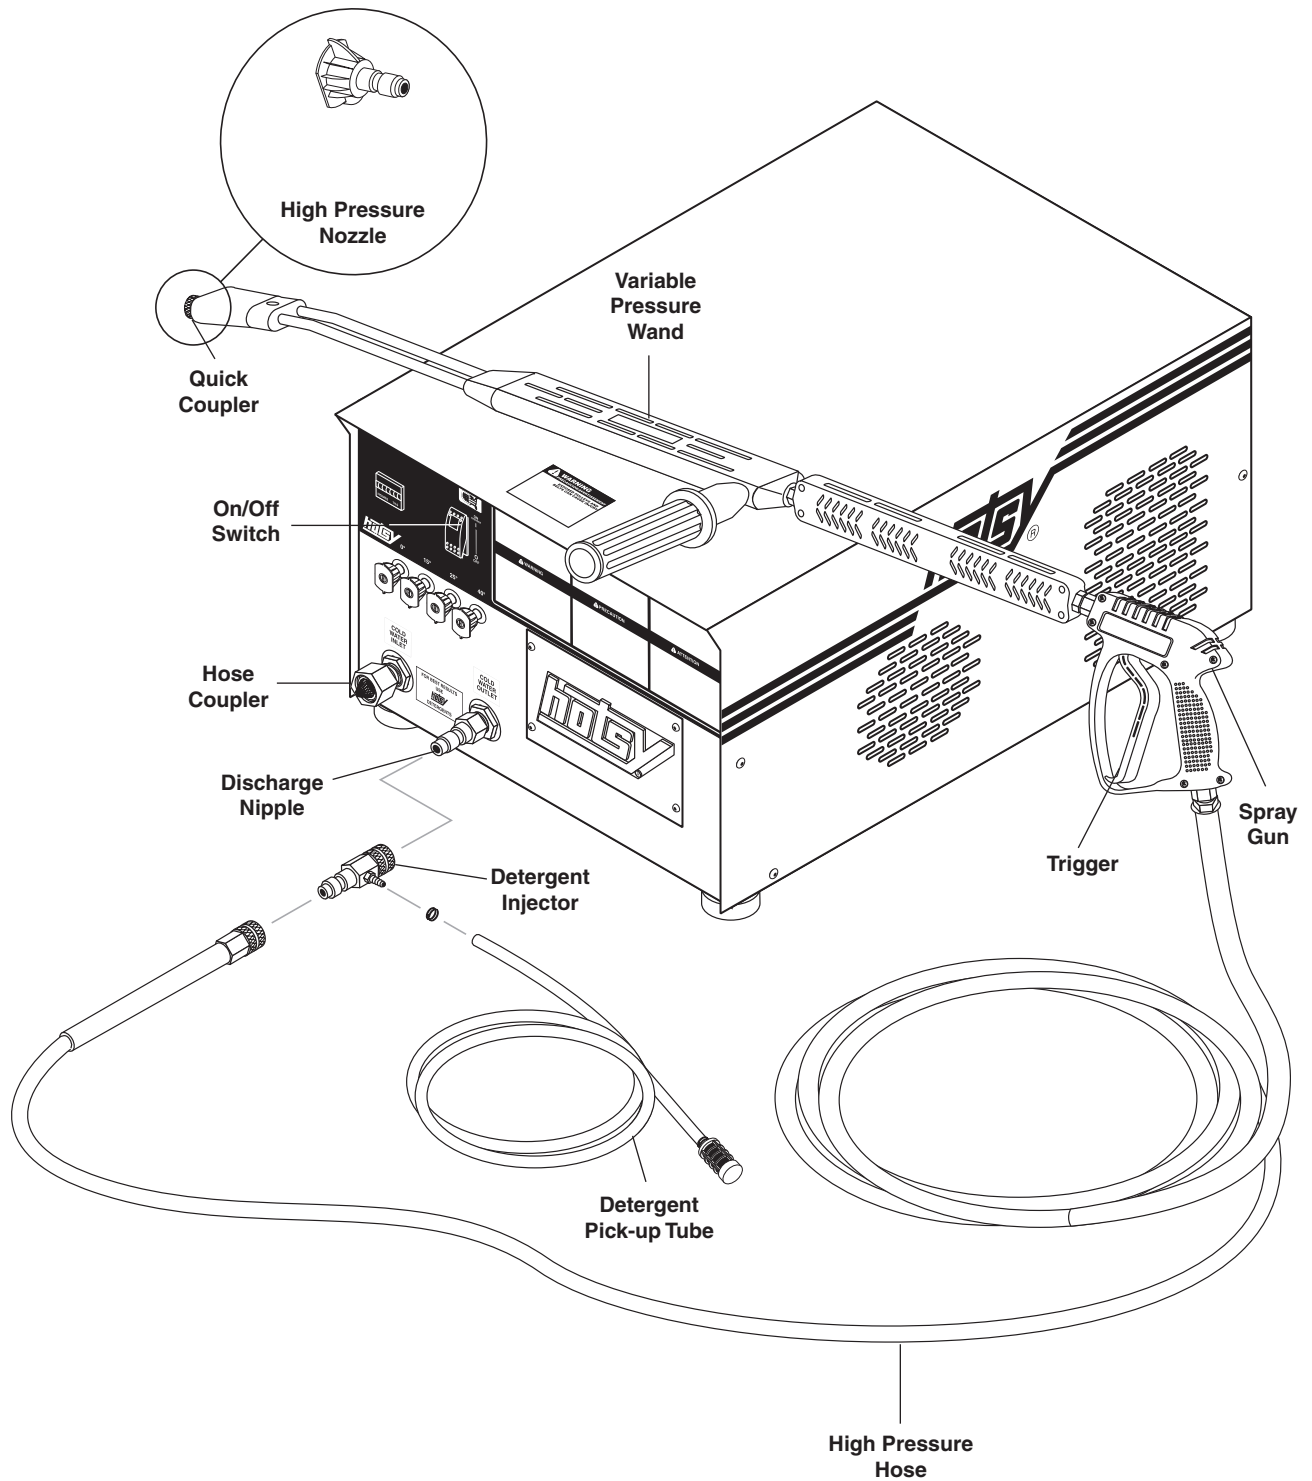

DETERGENT INJECTOR

HOW TO USE THE DETERGENT INJECTOR

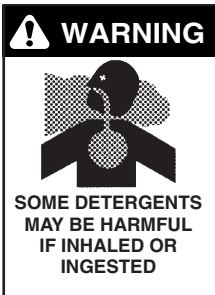


WARNING: *Some detergents may be harmful if inhaled or ingested, causing severe nausea, fainting or poisoning. The harmful elements may cause property damage or severe injury.*

The machine can siphon and mix detergents with the use of the detergent injector kit.

1. Start machine as outlined in Operating Instructions.
2. Place detergent pick-up tube into container of detergent solution.
3. Turn the pressure control handle on the variable pressure wand counterclockwise to low pressure.
4. Open trigger on spray gun. Water detergent ratio is approximately 15 to 1.

NOTE: Soap will not siphon under high pressure.

5. When you finish with the detergents, rinse by simply turning the variable pressure control handle clockwise to high pressure.
6. After use, place siphon strainer into container of clear water and follow steps 3 and 4 to avoid detergent deposit build-up.

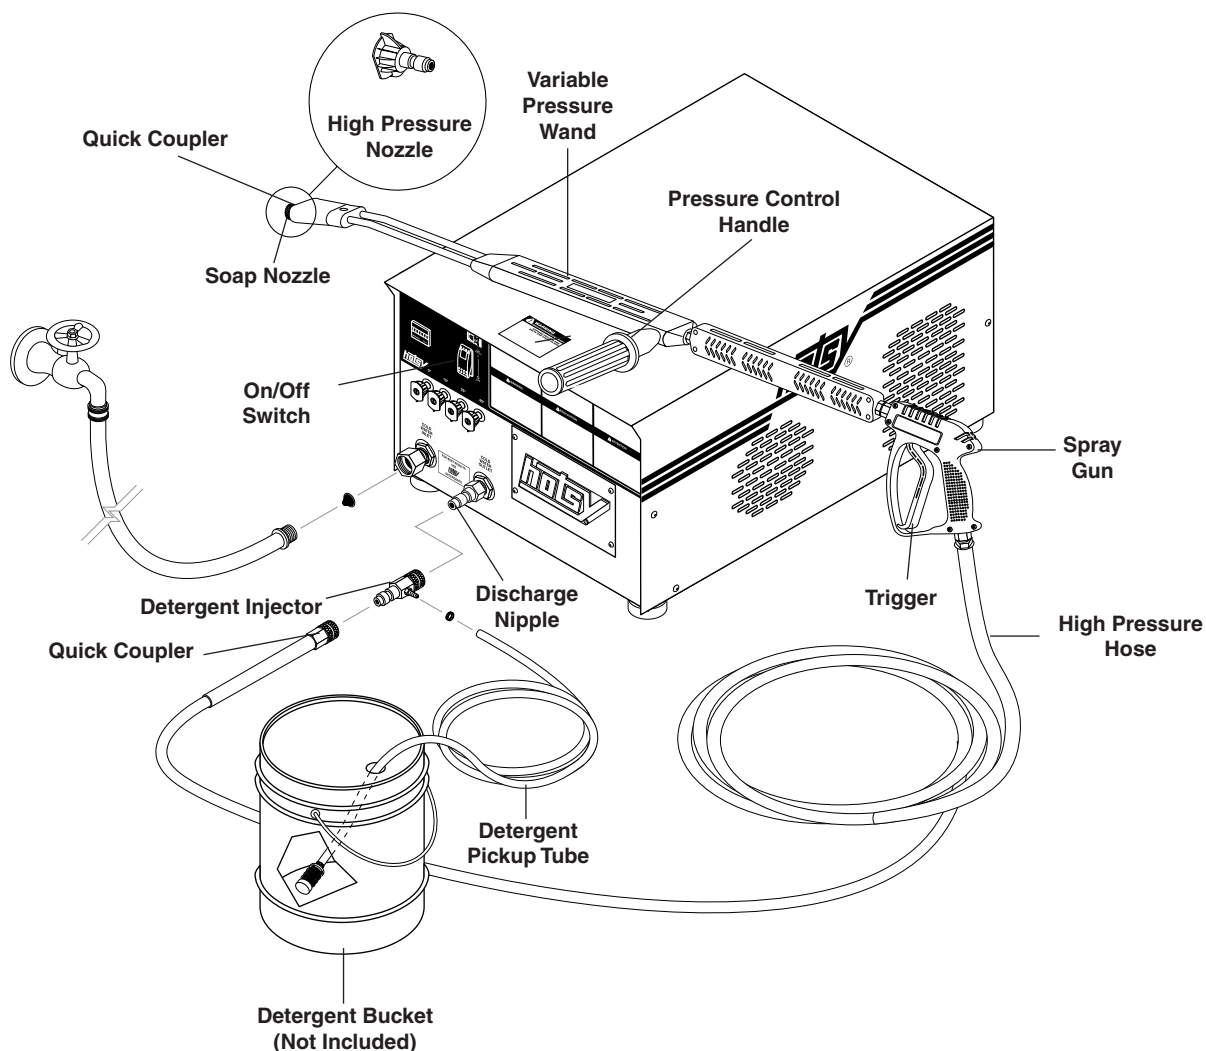

GENERAL WASHING TECHNIQUES AND MAINTENANCE

GENERAL WASHING TECHNIQUES

1. Hold spray nozzle a foot or so from the surface being cleaned. Spray at an angle to get under the material and lift it off.
2. When washing large objects, use detergent injector to apply detergent. Start washing from the bottom and work up. Allow the detergent to set a few minutes. After washing, rinse from the top down.
3. Cleaning heavy dirt or material away with a hard stream of clear water is recommended before using a cleaning agent.

MAINTENANCE

Pump Lubrication

The pump on your 1700 Series pressure washer is a triplex ceramic plunger pump. As the plungers move back, water flows through the inlet valve into the manifold chamber. Then, when the plungers move forward, the inlet valves close and the discharge valves open to produce discharge pressure.

Use only SAE 30 weight (non-detergent oil); change oil after first 50 hours of use. Thereafter, change oil every three months or at 500 hour intervals. Oil level should be checked through the use of the dipstick found on top of the pump, or half way up on the oil gauge window. Oil should be maintained at that level.

Unloader Valves

The unloader valve is connected directly to the discharge port of the pump. Its purpose is to allow recirculation back into the pump inlet when the trigger on the spray gun is closed.

Nozzles

Each machine is equipped with four spray nozzles depending on the flow and pressure of that particular model. Spray nozzles vary in bore size and angle of spray. When ordering replacement nozzles, please specify size and angle of nozzle. Nozzle size for each machine is located on the serial plate.

Winterizing Procedure

Damage due to freezing is not covered by warranty. Use the following cold weather procedures whenever the washer must be stored or operated outdoors under freezing conditions.


During winter months, when the temperature drops below 32°F, protecting your machine against freezing is necessary. A blowout valve is available which can be screwed on in place of the garden hose to blow water out of the system. When compressed air is not available or impractical, siphon a small amount of antifreeze into the machine and siphon a 50/50 mixture of antifreeze into the pump. Run the pump dry for a few seconds and disconnect all hoses to allow water to drain.

Low Pressure Diagnosis

Refer to Troubleshooting Chart for low pressure. If, by referring to the chart, the trouble is found to be either the unloader or the pump, your next step is to determine whether in fact the unloader or the pump is the problem. This can be done by eliminating the unloader from the system and attaching the discharge hose directly to the pump. If high pressure is developed in this manner the pump is good, and the unloader needs to be repaired or replaced.

CAUTION: When using this procedure to test components, keep the spray gun open at all times.

MULTI-ROOM INSTALLATION

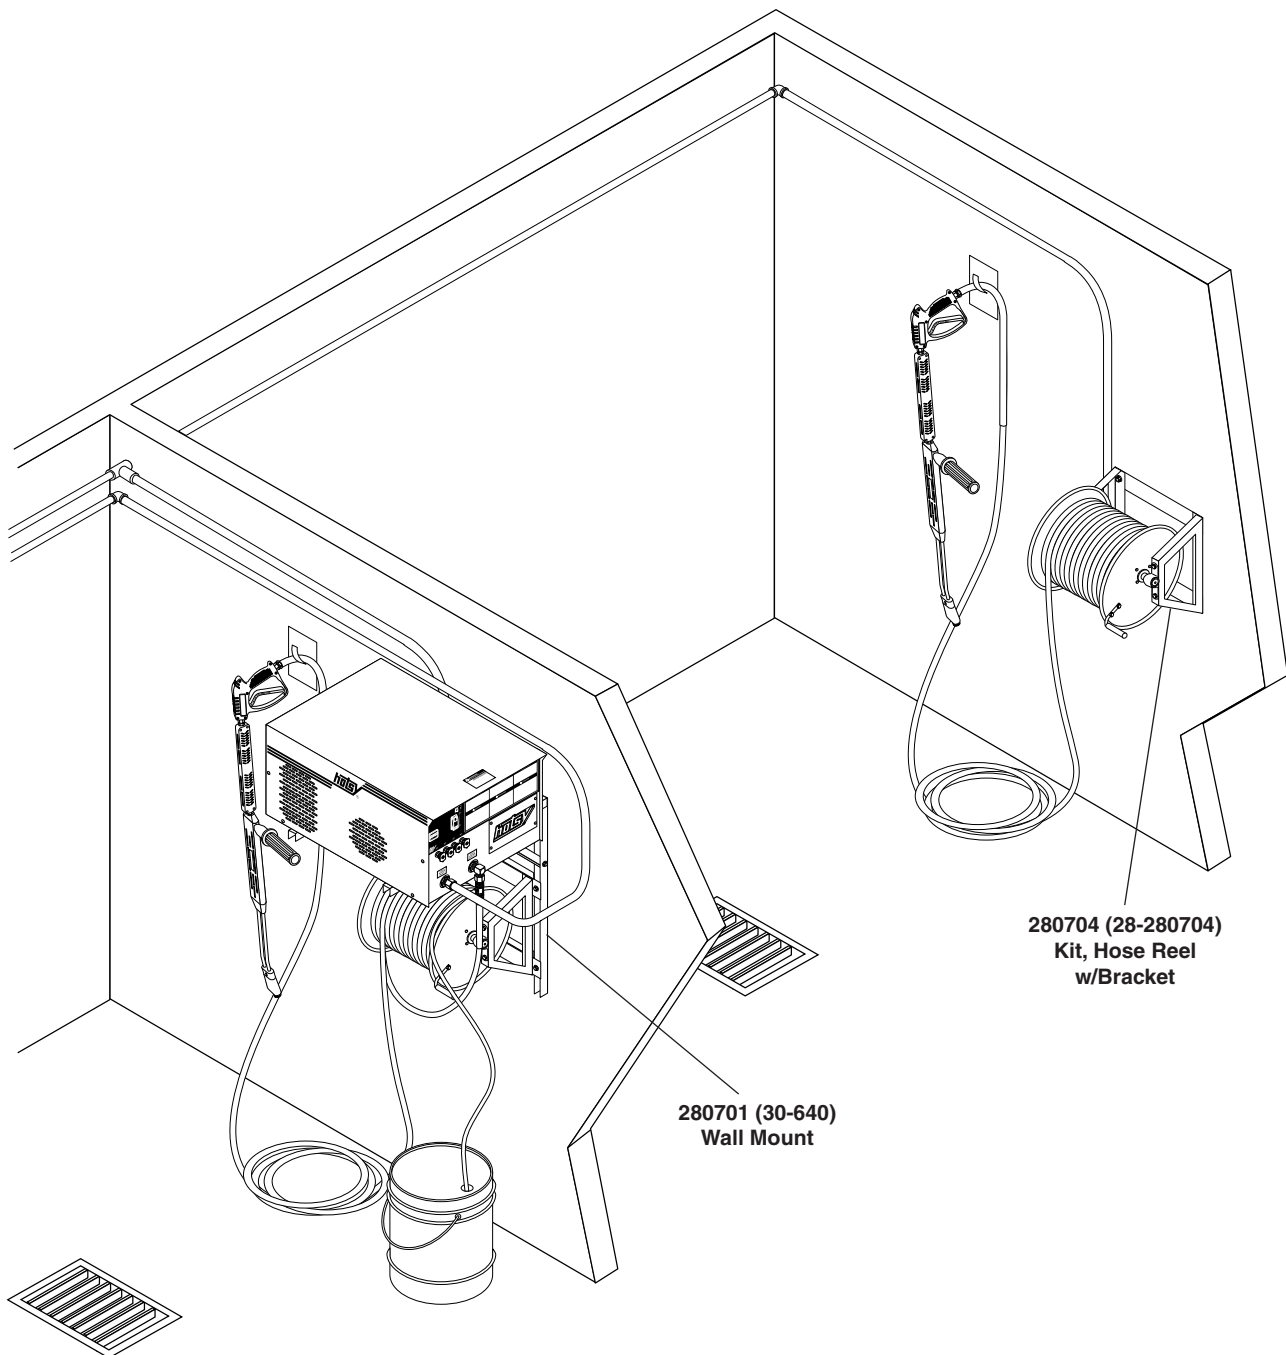

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
LOW OPERATING PRESSURE	Faulty pressure gauge	Install new gauge.
	Insufficient water supply	Use larger supply hose; clean filter at water inlet.
	Old, worn or incorrect spray nozzle	Match nozzle number to machine and/or replace with new nozzle.
	Belt slippage	Tighten or replace; use correct belt.
	Plumbing or hose leak	Check plumbing system for leaks. Re-tape leaks with teflon tape.
	Faulty or mis-adjusted unloader valve (Where applicable)	Call technical support.
	Worn packing in pump	Install new packing kit.
	Fouled or dirty inlet or discharge valves in pump	Clean inlet and discharge valves.
	Worn inlet or discharge valves	Replace with valve kit.
	Obstruction in spray nozzle	Remove obstruction.
	Leaking pressure control valve (where applicable)	Rebuild or replace as needed.
	Insufficient power supply	Check voltage.
FLUCTUATING PRESSURE	Valves worn	Check and replace if necessary.
	Blockage in valve	Check and clean out if necessary.
	Pump sucking air	Check water supply and suction line for air seepage at joints.
	Worn piston packing	Check and replace if necessary.
PRESSURE LOW AFTER PERIOD OF NORMAL USE	Nozzle worn	Check and replace if necessary.
	Inlet or discharge valves worn	Check and replace if necessary.
	Inlet or discharge valves blocked	Check and clean if necessary.
	Unloader valve seat worn	Check and replace if necessary.
PUMP NOISY	Air in suction line	Check water supply and connections on suction line.
	Broken or weak inlet or discharge valve springs	Check and replace if necessary.
	Foreign matter in valves	Check and clean if necessary.
	Worn bearings	Check and replace if necessary.
	Excessive temperature of liquid	Reduce to below 75° C (180°F).
PRESENCE OF WATER IN PUMP OIL	Oil seal worn	Check and replace if necessary.
	High humidity in air	Check and change oil twice as often.
	Piston packing worn	Check and replace if necessary.
MOTOR STRAINS UNDER LOAD (CONTINUED ON NEXT PAGE)	Faulty motor	Send to nearest Baldor repair center.
	Incorrect spray nozzle	Install proper nozzle size (see serial plate for proper size).
	Obstruction in spray nozzle	Remove obstruction.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
MOTOR STRAINS UNDER LOAD (CONTINUED FROM PREVIOUS PAGE)	Mis-adjusted unloader valve	Call technical support.
	Pump low or out of oil	Check oil level.
OIL SQUIRTS OUT OF OIL CAP ON PUMP	Pump over filled with oil	Maintain oil level halfway up on the sight glass at rear of pump or at top of notch on dipstick (where applicable).
PUMP RUNNING NORMALLY BUT PRESSURE OUTPUT LOW	Pump sucking air	Check water supply and possibility of air seepage.
	Valves sticking	Check and clean or replace if necessary.
	Unloader valve seat faulty	Check and replace if necessary.
	Nozzle incorrectly sized	Check and replace if necessary (See serial plate for proper size).
	Worn piston packing	Check and replace if necessary.
WATER DRIPPING FROM UNDER PUMP	Piston packing worn	Check and replace if necessary.
	O-Ring plunger retainer worn	Check and replace if necessary.
	Cracked piston	Check and replace if necessary.
OIL DRIPPING	Oil seal worn	Check and replace if necessary.
EXCESSIVE VIBRATION IN DELIVERY LINE	Irregular functioning of the valves	Check and replace if necessary.
SYSTEM WILL NOT START	Motor overload tripped	Check and reset.
	Pressure switch faulty (time delay only)	Check, clean or replace.
	Timer faulty (time delay only)	Check and replace.
MOTOR "HUMS" BUT DOES NOT TURN	Electric motor single phasing	Check for blown fuse or loose power line.
SYSTEM WILL NOT STOP	Pressure switch faulty	Check clean or replace.
	Timer faulty	Check and replace.
SYSTEM STOPS AFTER APPROXIMATELY FOUR (4) SECONDS AND THEN RESTARTS	Faulty pressure switch	Check and replace.
	Leak at discharge line	Check for leak at hose and spray gun.
MACHINE WILL NOT START WHEN SPRAY GUN TRIGGER IS PULLED	Loss of electrical power	Check circuit breaker.
	Faulty on/off switch, pressure switch, timer or magnetic contactor	Test and replace as needed.
MACHINE DOES NOT TURN OFF AFTER FOUR (4) SECONDS WHEN SPRAY GUN IS RELEASED	Test power control switch and solid state timer faulty	Replace the defective component.

PREVENTATIVE MAINTENANCE

IMPORTANT

If the pressure washer demonstrates other symptoms or the corrective actions listed do not correct the problem, contact the local authorized Hotsy Service Center. The Hotsy Service Center can be identified by visiting www.hotsy.com.

PREVENTATIVE MAINTENANCE

This pressure washer was produced with the best available materials and quality craftsmanship. However, you as the owner, have certain responsibilities for the correct care of the equipment. Attention to regular preventative maintenance procedures will assist in preserving the performance of your equipment. Contact your Hotsy dealer for maintenance. Regular preventative maintenance will add many hours to the life of your pressure washer. Perform maintenance more often under severe conditions.

MAINTENANCE SCHEDULE		
Pump Oil	Inspect	25 Hours or Weekly
	Change	Yearly
Check Valve Clearance		Yearly
Water Filter	Inspect	Every 6 Hours or Daily
	Clean	Yearly


OIL CHANGE RECORD

Check pump oil level before first use. Change pump oil after first 50 hours and every month or 500 hours thereafter. Use SAE 30 weight oil.


Date Oil Changed Month/Day/Year	Estimated Operating Hours Since Last Oil Change

Date Oil Changed Month/Day/Year	Estimated Operating Hours Since Last Oil Change

EXPLODED VIEW - LEFT SIDE

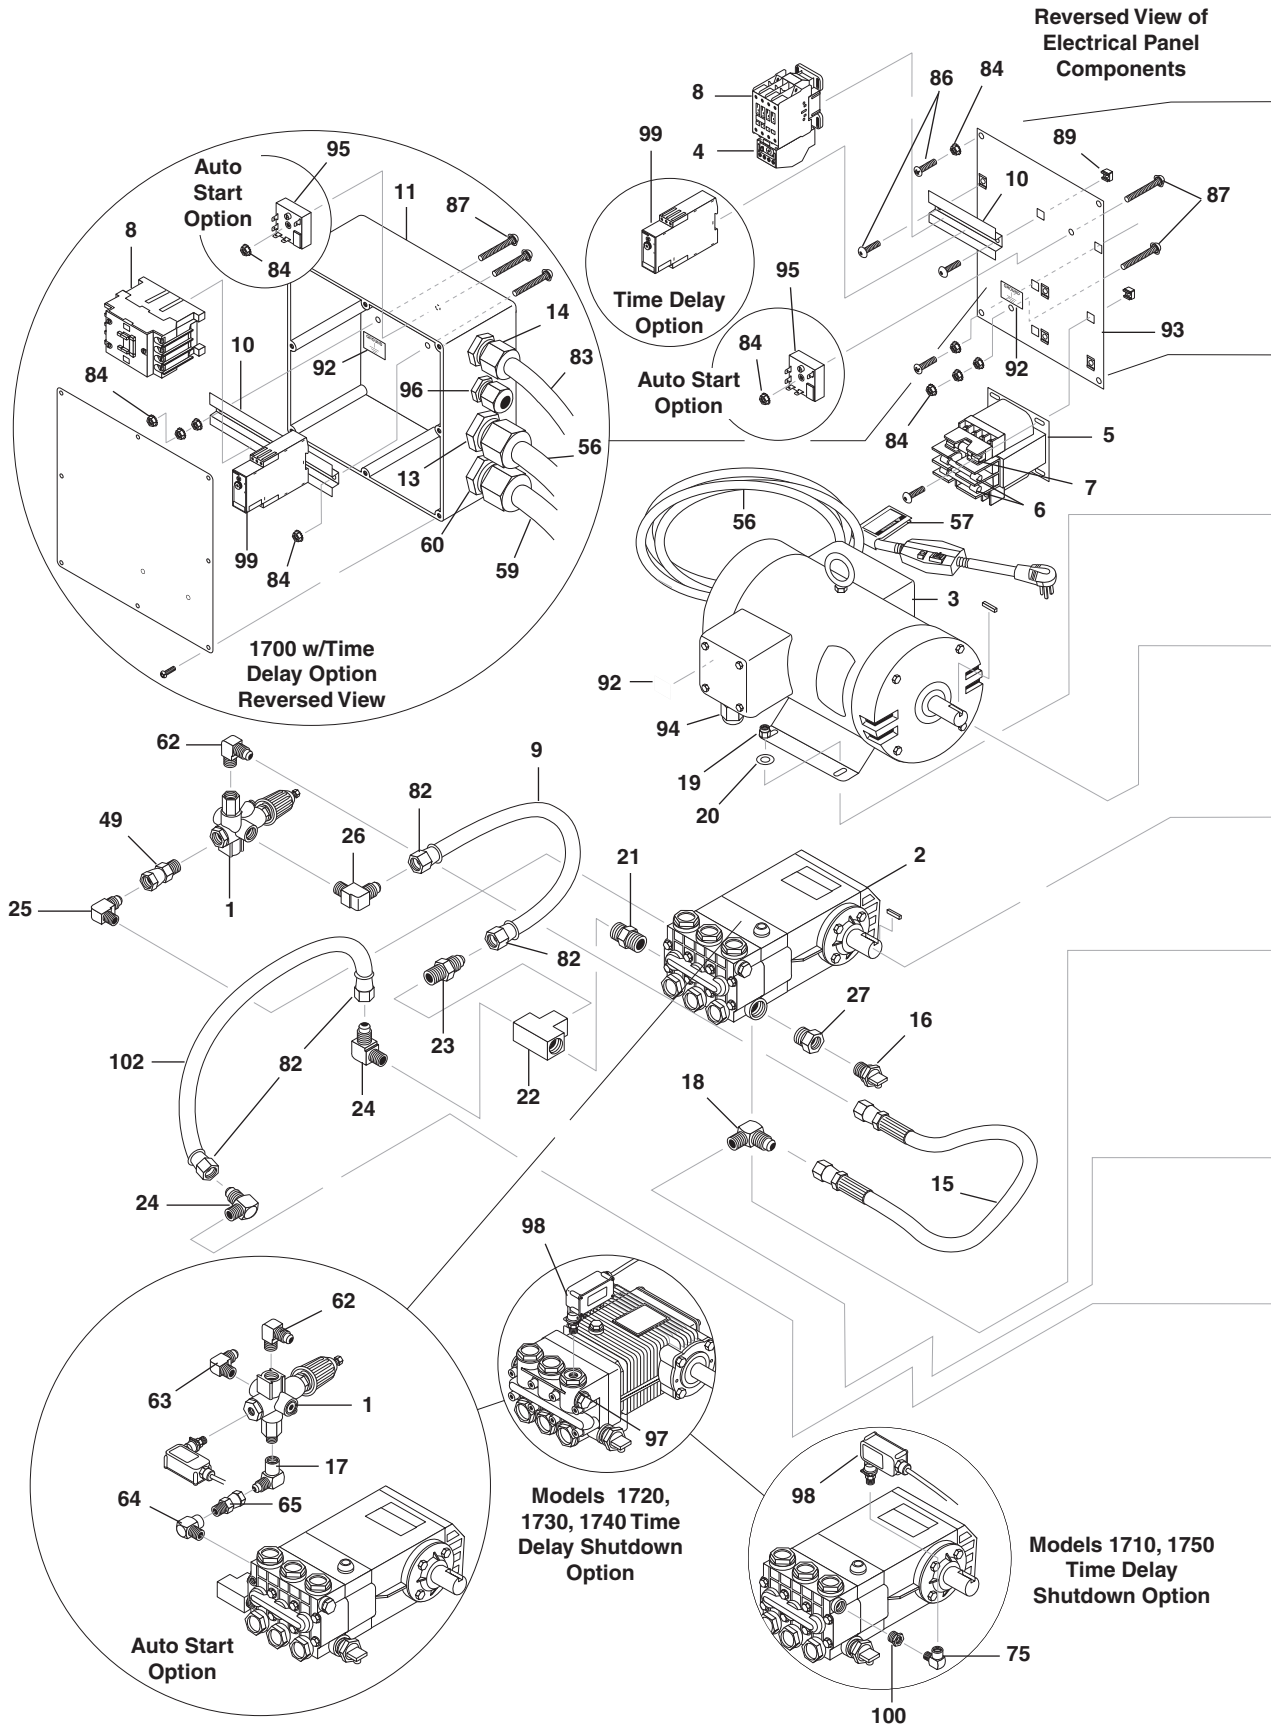

EXPLODE VIEW - RIGHT SIDE

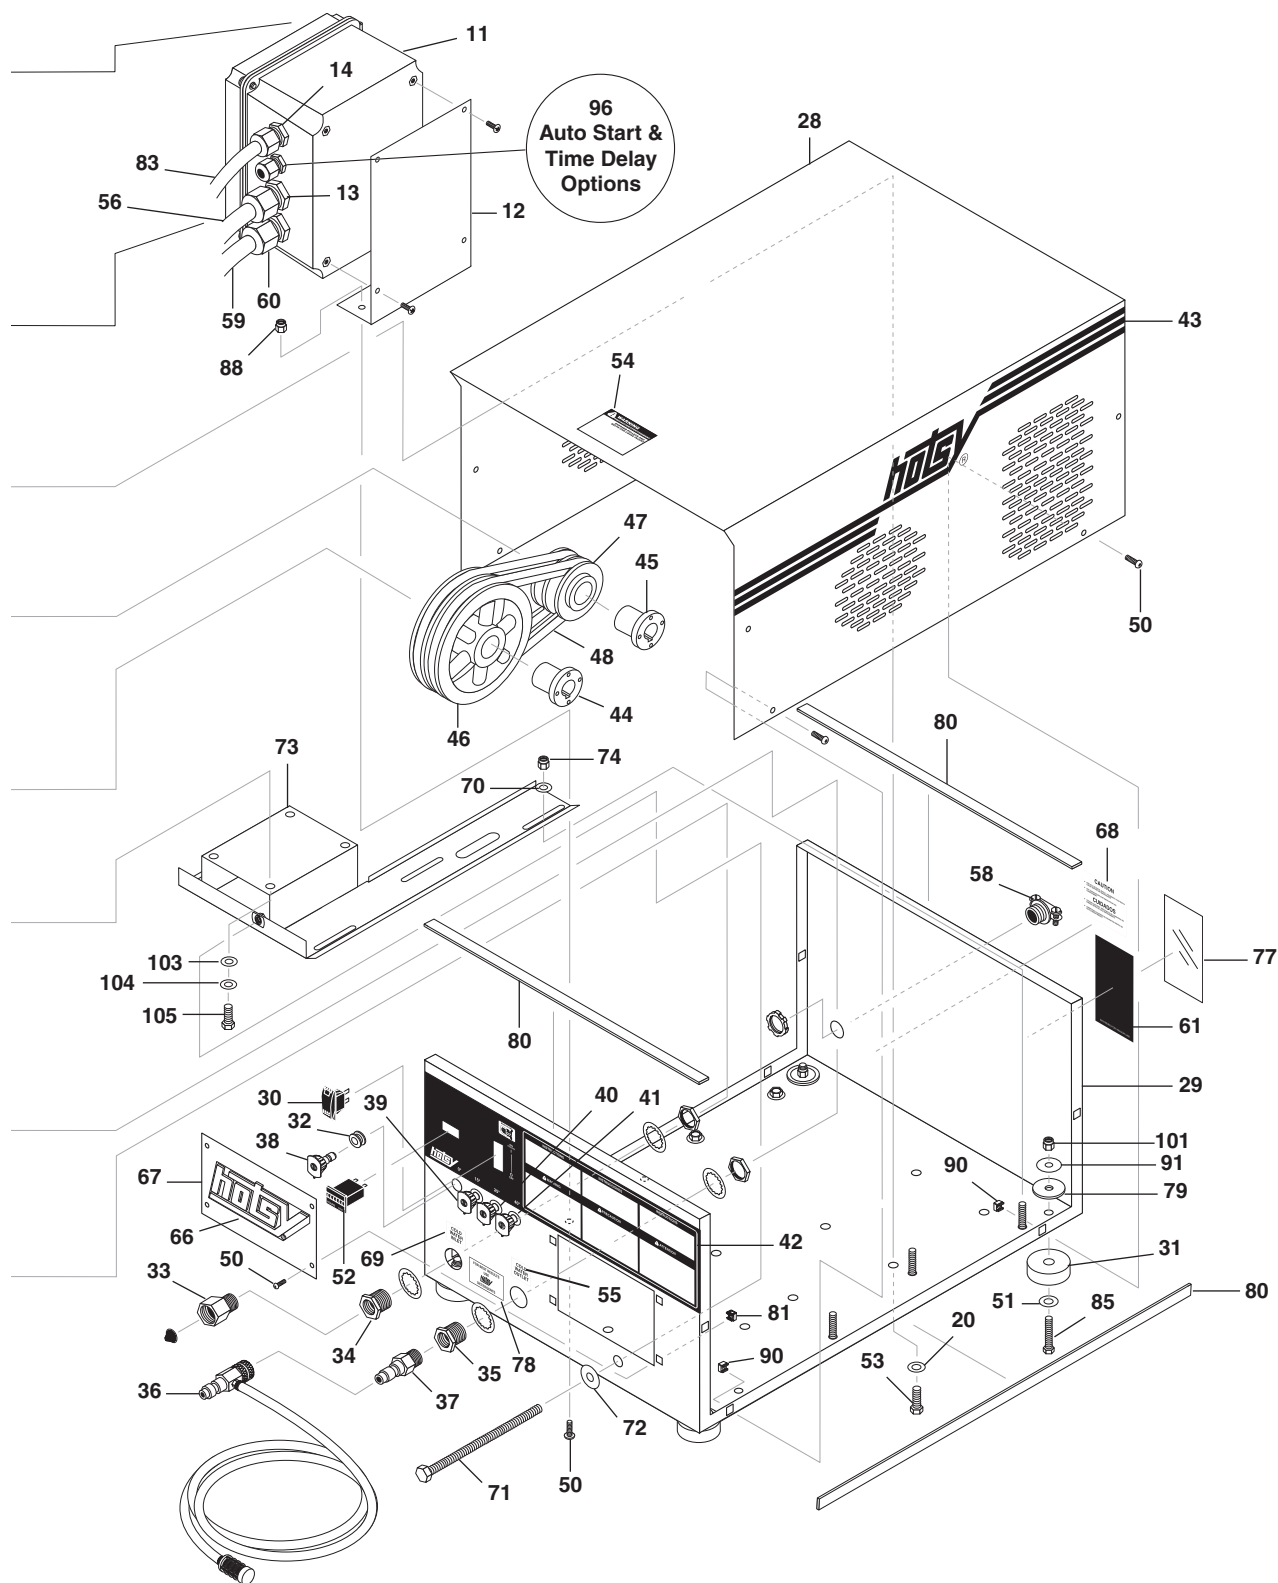

EXPLODED VIEW PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY
1		Unloader, See Specifications Pages	
2		Pump, See Specifications Pages	
3		Motor, See Specifications Pages	
4		Overload, See Specifications Pages	
5		Transformer, See Specifications Pages	
6		Fuse, See Specifications Pages	
7		Fuse, See Specifications Pages	
8		Contactor, See Specifications Pages	
9	867372 9.802-259.0	Hose, 1/2" Push On	18"
10	800005 9.802-457.0	Din Rail, 35 mm	4"
		(Time Delay Option)	6"
11	616609 9.802-476.0	Box, Plastic, 10" x 8" x 6" w/Lid (All models except 1710)	1
	220275 9.802-475.0	Box, Plastic, 8" x 8" x 4" w/Lid (Only 1710)	1
12	616008 9.803-038.0	Bracket, Support for Elec Box	1
13	876029 9.802-515.0	Strain Relief, LQ Tit (Only 1710)	1
	903086 9.802-524.0	▲ Locknut, 1/2" Conduit (Only 1710)	
	875473 9.802-518.0	Strain Relief, 3/4" LQ Tite (1720, 1722, 1723, 1724, 1725, 1733, 1734,1735, 1745, 1755)	1
	903087 9.802-526.0	▲ Locknut, 3/4" Conduit (1720,1722, 1723, 1724, 1725, 1733,1734, 1735, 1745, 1753, 1755)	1
	9.802-521.0	Strain Relief, 3/4" (1730, 1732, 1743, 1744, 1753, 1754)	1
	903087 9.802-526.0	▲ Locknut, 3/4" (1730, 1732,1743, 1744, 1753, 1754)	1
	6-051710 9.803-975.0	Strain Relief, 1" (1740, 1742,1750,1752)	1
	9.803-280.0	▲ Locknut, 1" (1740, 1742, 1750,1752)	1
14	876029 9.802-515.0	Strain Relief, Strt, LQ Tite, Med	1
	903086 9.802-524.0	▲ Locknut, 1/2" Conduit	1
15	9.802-240.0	Hose, 3/8" x 22", 2 Wire, Pressure Loop (1710, 1720, 1722, 1723,1724, 1725,1730,1732,1733,1734, 1735, 1740, 1742, 1743,1744, 1745)	1
	707513 9.802-241.0	Hose, 3/8" x 25", 2 Wire Pressure Loop (1750, 1752, 1753, 1754, 1755)	1
16	9.803-670.0	Pump Protector, 1/2" PTP,190° (1710, 1752, 1753, 1754, 1755)	1
	8.707-250.0	Pump Protector, 3/8" 190° (all except 1710, 1750)	1
17	661356 9.802-042.0	Elbow, 1/2" JIC, 3/8" Fem, 90°	1
18	661357 9.802-039.0	Elbow, 1/2" JIC, 3/8", 90°	1
19	703146 9.802-779.0	Nut, 3/8", ESNA	4
	703155 9.802-776.0	Nut, 5/16", ESNA (Only 1710)	4
	90-20021 9.802-780.0	Nut, 3/8", ESNA SS (SS Option)	4
20	780562 9.802-807.0	Washer, 3/8", SAE, Flat	8
	9.802-808.0	Washer, 3/8", SAE Flat (SS Option)	8
	780452 8.718-980.0	Washer, 5/16" SAE Flat (Only 1710)	8
	9.802-805.0	Washer, 5/16" SAE Flat (SS Option for 1710)	8
21	877455 8.706-881.0	Nipple, 3/4" Pipe x 1/2" Pipe (1750, 1752, 1753, 1754, 1755)	1
	722774 8.706-880.0	Nipple, 1/2" Pipe x 3/8" Pipe (1720, 1722, 1723, 1724,1725, 1730, 1732, 1733, 1734,1735, 1740, 1742, 1743, 1744,1745)	1
	897952 8.706-790.0	Nipple, 1/2" Close (Only 1710)	1

EXPLODED VIEW PARTS LIST

ITEM	PART NO.		DESCRIPTION	QTY
22	954710	8.706-844.0	Tee, 1/2" Female, Pipe	1
23	799419	9.802-128.0	Nipple, 1/2" JIC x 1/2" MPT Pipe	1
24	661355	9.802-131.0	Elbow, 1/2" JIC x 1/2", 90°	2
25	661357	9.802-039.0	Elbow, 1/2" JIC x 3/8" Steel (1710,1720, 1722, 1723, 1724,1725, 1730, 1732, 1733, 1734, 1735,1740, 1742, 1743, 1744, 1745)	1
	644600	9.802-040.0	Elbow, 1/2" JIC x 1/2", 90° (1750,1752, 1753, 1754, 1755)	1
26	661354	9.802-129.0	Elbow, 1/2" x JIC x 3/8", Brass	1
27	722740	8.706-925.0	Bushing, 3/4" x 1/2" Pipe (1750, 1752, 1753, 1754, 1755)	1
28	630040	8.911-329.0	Cover, Hotsy 1700 Series	1
	630041	8.911-330.0	Cover, Cabinet Cold Water, 1700, Stainless (SS Option)	1
29	630006	8.911-326.0	Base, Hotsy 1700 Series	1
		9.802-876.0	Base, RHINO CE, (SS Option)	1
30	875858	9.802-451.0	Switch, Rocker, Carling w/Green Lens	1
	876321	9.802-452.0	Switch, Rocker, Red Face (Time Delay Only)	1
31	615527	9.802-066.0	Pad, Soft Rubber, 50 Duro	4
32	859815	9.802-064.0	Grommet, Rubber, Nozzle Holder	4
33	801139	9.802-146.0	Swivel, 1/2" MP x 3/4" GHF w/Strainer	1
34	631008	8.707-000.0	Connector, 1/2" Anchor	1
35	631007	8.706-998.0	Connector, 3/8" Anchor	1
36	729404	9.802-225.0	Downstream Injector Assy., Non Adj #3	1
37	844806	9.802-171.0	Nipple, 3/8" x 3/8" NPT ST Male	1
38	799000	8.712-345.0	Nozzle, SAQCMEG 0004 Red (1730, 1732, 1733, 1734, 1735)	1
37	799004	8.712-361.0	Nozzle, SAQCMEG 0006 Red (1720, 1722, 1723, 1724, 1725)	1
38	799003	8.712-357.0	Nozzle, SAQCMEG 00055 Red (1710, 1740, 1742, 1743, 1744, 1745)	1
	799006	9.802-800.0	Nozzle, SAQCMEG 0007 Red (1750, 1752, 1753, 1754, 1755)	1
39	799012	8.712-346.0	Nozzle, SAQCMEG 1504 Yellow (1730, 1732, 1733, 1734, 1735)	1
	799016	8.712-362.0	Nozzle, SAQCMEG 1506 Yellow (1720, 1722, 1723, 1724, 1725)	1
	799015	8.712-358.0	Nozzle, SAQCMEG 15055 Yellow (1710, 1740, 1742, 1743, 1744, 1745)	1
	799018	8.712-370.0	Nozzle, SAQCMEG 1507 Yellow (1750, 1752, 1753, 1754, 1755)	1
40	799144	8.712-347.0	Nozzle, SAQCMEG 2504 Green (1730, 1732, 1733, 1734, 1735)	1
	799392	8.712-347.0	Nozzle, SAQCMEG 2506 Green (1720, 1722, 1723, 1724, 1725)	1
	190004	8.712-359.0	Nozzle, SAQCMEG 25055 Green (1710, 1740, 1742, 1743, 1744, 1745)	1
	799198	8.712-371.0	Nozzle, SAQCMEG 2507 Green (1750, 1752, 1753, 1754, 1755)	1
41	799024	8.712-348.0	Nozzle, SAQCMEG 4004, White (1730, 1732, 1733, 1734, 1735)	1
	799028	8.712-364.0	Nozzle, SAQCMEG 4006, White (1720, 1722, 1723, 1724, 1725)	1
	799027	8.712-360.0	Nozzle, SAQCMEG 40055 White (1710, 1740, 1742, 1743, 1744, 1745)	1
	799030	8.712-372.0	Nozzle, SAQCMEG 4007 White (1750, 1752, 1753, 1754, 1755)	1
42	630013	8.900-919.0	Label, Hotsy, 1700 Series	1
43	834086	8.901-106.0	Label, Hotsy Logo Stripe	2
44	Bushing, See Specifications Pages			
45	Bushing, See Specifications Pages			
46	Pulley, See Specifications Pages			
47	Pulley, See Specifications Pages			
48	Belt, See Specifications Pages			
49	661426	9.802-048.0	Swivel, 1/2" JIC Fem, 3/8" Male	1

EXPLODED VIEW PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY
50	630009	9.802-765.0 Screw, 1/4 "x 1/2" BH SOC ES	14
		9.802-760.0 Screw, 1/4" x 1/2", BH SOC C/S, (SS Option)	14
51	936438	9.802-817.0 Washer, 3/8" x 1" Steel	4
		9.802-818.0 Washer, 3/8" X 1", (SS Option)	4
52	886541	9.802-283.0 Hour Meter, 115 VAC	1
53	612984	9.802-720.0 Bolt, 3/8" x 1", NC HH (All Models Except 1710)	4
	90-1007	9.802-710.0 Bolt, 5/16" x 1", NC HH (1710)	4
		8.718-621.0 Bolt, 5/16" x 1" NC HH (1710 - SS Option)	4
	90-10162	9.802-721.0 Bolt, 3/8" x 1" SS (SS Option)	4
54	646663	8.932-965.0 Label, Warning, Exposed Pulley	1
55	646665	8.932-970.0 Label, Cold Water Outlet	1
56	630814	9.802-434.0 Cord, GFCI, 230V, 40A, 8-3 Cord w/Plug (1730,1732)	1
	825985	9.802-429.0 Service Cord 12/4 (1723, 1724, 1725, 1734, 1735,1745,1755)	10 ft.
	630936	9.802-437.0 Service Cord 10/4 (1733)	10 ft.
	645893	9.802-426.0 Service Cord 8/4 (1743, 1744, 1753, 1754)	10 ft.
	631004	9.802-430.0 GFCI Cord 230V/30 Amp, 10-3 Cord (1720, 1722)	1
	981000	9.802-431.0 GFCI Cord 120V/20 Amp w/36', 12-3 Cord (Only 1710)	1
	630815	9.804-049.0 Cord, GFCI, 230V, 50A, 37' Cord w/Plug (1740,1742,1750,1752)	1
57	646359	8.932-969.0 Label, GFCI	1
58	826029	9.802-522.0 Strain Relief 1"	1
		9.804-052.0 Connector, 1" (1740, 1742, 1750, 1752)	1
59	825989	9.802-428.0 Service Cord 12/3 (Only 1710)	51"
	825985	9.802-429.0 Service Cord 12/4 (1723,1724, 1735, 1725, 1734, 1745, 1755)	40"
	826010	9.802-436.0 Service Cord 10/3 (1722,1720)	40"
	826020	9.802-425.0 Service Cord 8/3 (1730,1732)	40"
	630936	9.802-437.0 Service Cord 10/4 (1733)	40"
	645891	9.804-048.0 Service Cord 6/3 (1740,1742,1750,1752)	40"
	645893	9.802-426.0 Service Cord 8/4 (1743, 1744, (1753,1754)	40"
60	875473	9.802-518.0 Strain Relief, Strt, LQ Tite 3234 Large (1720, 1722, 1723, 1724, 1725, 1730, 1732, 1733, 1734, 1735, 1745, 1755)	1
	903087	9.802-526.0 ▲ Locknut, 3/4" Conduit (1720, 1722, 1723, 1724, 1725, 1730, 1732, 1733, 1734, 1735, 1745, 1755)	1
	876029	9.802-515.0 Strain Relief LQ Tite (Only 1710)	1
	903086	9.802-524.0 ▲ Locknut, 1/2" Conduit (Only 1710)	1
		9.802-521.0 Strain Relief, 3/4" (1740, 1742, 1743, 1744, 1750, 1752, 1753, 1754)	1
	903087	9.802-526.0 ▲ Locknut, 3/4" Conduit (1740, 1742, 1743, 1744, 1750, 1752, 1753, 1754)	1
61	646648	9.800-013.0 Label, Intended For Indoor Use	1
62	661357	9.802-039.0 Elbow, 1/2" JIC, 3/8", Steel (Auto/Start Option)	2
63	661354	9.802-129.0 Elbow, 1/2" JIC, 3/8", Brass (Auto/Start Option)	1
64	644802	8.706-207.0 Elbow, 3/8" Street (Auto Start Option)	1
65	661426	9.802-048.0 Swivel, 1/2" JIC Fem x 3/8" Male (Auto Start Option)	1
66	834083	8.901-108.0 Label, Hotsy, White	1
67	630007	8.912-147.0 Cover, Access Hole	1
68	444467	8.901-148.0 Label, Caution	1

EXPLODED VIEW PARTS LIST


ITEM	PART NO.	DESCRIPTION	QTY
69	646666	9.800-020.0 Label, Cold Water Inlet	1
70	780452	8.718-980.0 Washer, 5/16" Flat	4
71		9.802-738.0 Bolt, 1/2" x 8" NC HH	1
		9.802-739.0 Bolt, 1/2"-13 x 8" HEX, SS (SS Option)	1
72	780455	9.802-800.0 Washer, 1/2" Flat	1
		9.802-801.0 Washer, 1/2" Flat, (SS Option)	1
73		8.911-815.0 Slider, Pump	1
74	703155	9.802-776.0 Nut, 5/16" ESNA	4
75	644802	8.706-207.0 Elbow, 3/8" Street (Time Delay Option, 1710, 1750, 1752, 1753, 1754, 1755)	1
76	815220	9.802-045.0 Bushing, 1/2" x 3/8" Steel (Auto Start Option, 1750, 1752, 1753, 1754, 1755)	1
77		8.706-294.0 Clear Lexan	1
78	834159	8.901-136.0 Detergent label	1
79	830587	9.802-067.0 Bumper Pad	4
80	630011	9.802-073.0 Weather Stripping	84"
81	630008	9.802-074.0 Nut, 1/4" Square	4
82	2-1105	9.802-424.0 Swivel, 1/2" JIC Fem. Push-On	4
83	826009	9.802-424.0 Cord, 16-4 Service	30"
84	799484	9.802-695.0 Nut, 10/32" Keps (Only 1710)	4
		(1723, 1724, 1725, 1733, 1734, 1735, 1744, 1745, 1754, 1755)	7
		(1720, 1722, 1730, 1732, 1740, 1742, 1743, 1750, 1752, 1753)	10
85	612985	9.802-723.0 Bolt, 3/8" x 1-1/2" NC HH	4
		9.802-724.0 Bolt, 3/8" x 1-1/2", HH NC SS (SS Option)	4
86	876025	9.802-759.0 Screw, 10/32" x 1/2" Black (1723, 1724, 1725, 1733, 1734, 1735, 1744, 1745, 1754, 1755)	10
		(1720, 1722, 1730, 1732, 1740, 1742, 1743, 1750, 1752, 1753)	11
87	876026	9.802-762.0 Screw, 10/32" x 1-1/4" (Only 1710)	2
		(Auto Start Option, All Models Except 1710)	1
88	703185	Nut, 1/4" ESNA NC	2
		9.802-774.0 Nut, 1/4", ESNA, NC, SS (SS Option)	
89	185300	9.802-791.0 Cage Nut, 10/32" x 16 Gauge (1723, 1724, 1725, 1733, 1734, 1735, 1744, 1745, 1754, 1755)	6
		(1720, 1722, 1730, 1732, 1740, 1742, 1743, 1750, 1752, 1753)	4
90	799488	9.802-794.0 Cage Nut, 1/4" x 12 Gauge	8
91	936688	9.802-811.0 Washer, 3/8" x 1-1/2" Fender	4
		9.802-812.0 Washer, 3/8" x 1-1/2", SS (SS Option)	4
92	646155	9.800-040.0 Label, Ground	2
93	826043	9.803-032.0 Standoff, Electrical Box (All Models Except 1710)	1
94		9.802-520.0 Strain Relief, 3/4" (1710, 1720, 1722, 1723, 1724, 1725, 1734, 1735, 1740, 1742, 1750, 1752)	1
	826029	9.802-522.0 Strain Relief, 1" (1730, 1732, 1733, 1743, 1744, 1745, 1753, 1754, 1755)	1
95	891010	9.802-472.0 Timer, Solid State, 120V 5-60 Min. Adjust. (Auto Start Option)	1
96	876032	9.802-514.0 Strain Relief, 1/2" (Auto Start/Time Delay Option)	1
	903086	9.802-524.0 ▲ Locknut, 1/2" (Auto Start/Time Delay Option)	1

EXPLODED VIEW PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY
97	829596	8.707-264.0 Plug, 3/8" Gas Tap (Time Delay Option, 1720, 1722, 1723, 1724, 1725, 1730, 1732, 1733, 1734, 1735, 1740, 1742, 1743, 1744, 1745)	1
98	875651	8.716-129.0 Switch, Pressure Block (Time Delay Option)	1
99	876320	9.802-473.0 Timer, Multi-Function (Time Delay Option)	1
100	815220	9.802-045.0 Bushing, 1/2" x 3/8" Steel (Time Delay Option, 1750, 1752, 1753, 1754, 1755)	1
101	703146	9.802-779.0 Nut, 3/8" ESNA NC	4
		9.802-780.0 Nut, 3/8", ESNA, NC, SS (SS Option)	4
102	867372	9.802-259.0 Hose, 1/2" Push-on	12"
103	780453	8.718-986.0 Washer, 3/8" SAE Flat (All except 1710)	4
	780452	8.718-980.0 Washer, 5/16" SAE Flat (Only 1710)	4
104		9.804-057.0 Washer (All except 1710)	4
	780479	9.802-813.0 Washer, 5/16" Lock, Split (Only 1710)	4
105	726318	9.804-058.0 Bolt, Pump Mounting (All except 1710)	4
	615532	9.802-741.0 Bolt, 8 mm x 16 mm Hex Head (Only 1710)	4

▲ Not Shown

HOSE & SPRAY GUN ASSEMBLY

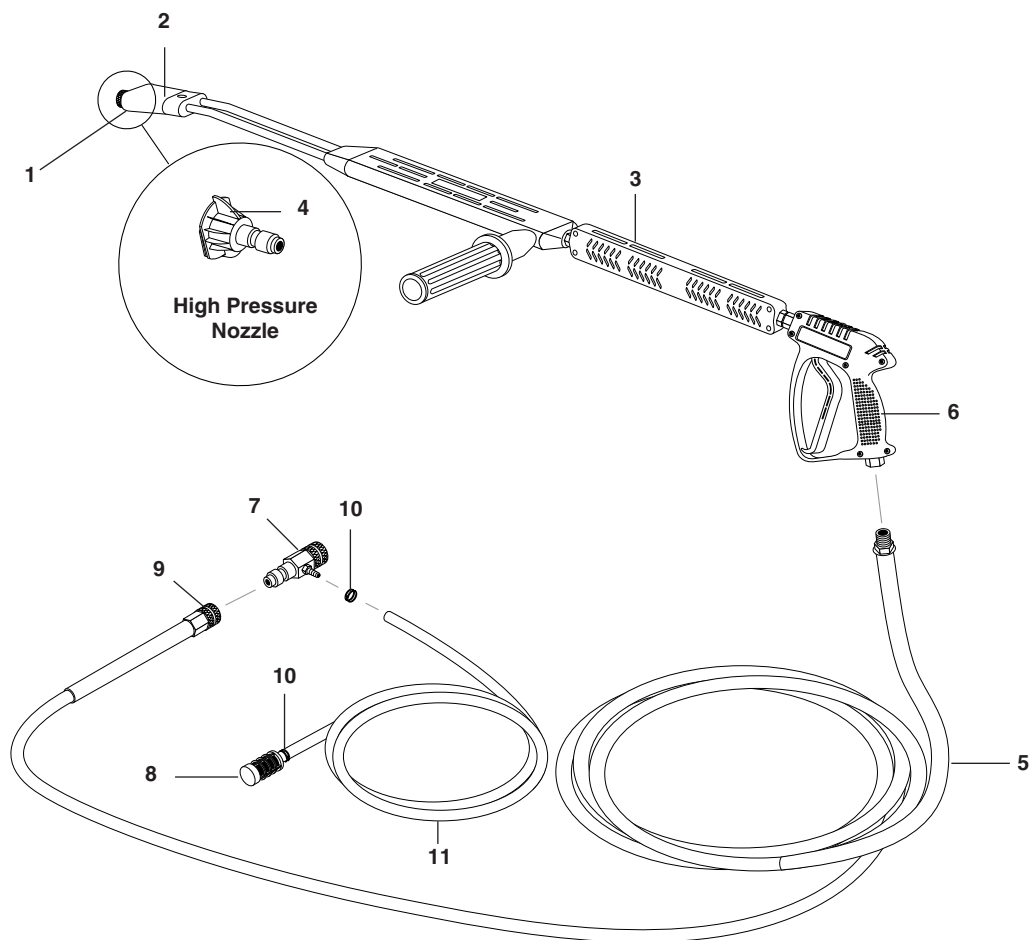

HOSE & SPRAY GUN ASSEMBLY PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY
1	826170	9.802-165.0 Coupler, 1/4" Male	1
	728733	9.802-096.0 ▲ Quick Coupler O-Ring, Small	1
2	4-06540	9.802-286.0 Nozzle Only, 1/8", Soap	1
3	878920	8.711-293.0 Wand, SS, VP, AL344 w/Coupler & Soap Nozzle	1
4	For Details, See Nozzles Specification Page		
5		8.739-112.0 Hose, 3/8" x 50', 1 Wire, Blue, TUFF Skin	1
6		8.749-171.0 Gun, Shut-off, Hotsy 5000 PSI, 10.5 GPM	1
7		9.802-216.0 Detergent Injector, Non-Adjust 3-5 GPM	1
8	875582	9.802-160.0 Strainer, 1/4" Hose Barb	1
9	826176	9.802-166.0 Coupler, 3/8" Female	1
	728734	9.802-100.0 ▲ Quick Coupler O-Ring, Large	1
10	823988	8.740-345.0 Clamp, Hose, UNI .46 - .54	1
11	961506	9.802-251.0 Tube, 1/4" x 1/2" Clear Vinyl	6 ft.

▲ Not Shown

SPECIFICATIONS

Model #	Motor HP	Motor #	Unloader	Pump	Pump #	Pump Pulley	Pulley #	Motor Pulley	Motor Pulley #	Pump Bushing
1710	2	9.802-339.0	8.715-504.0	HD3030H	8.904-729.0	AK 74H	9.802-369.0	AK32 x 5/8	9.804-004.0	24MM
1720	6	9.802-336.0	8.715-504.0	H300AR	8.715-269.0	2BK90H	8.715-593.0	2BK62H	8.715-588.0	22MM
1722	6	9.802-337.0	8.715-504.0	H300AR	8.715-269.0	2BK90H	8.715-593.0	2BK62H	8.715-588.0	22MM
1723	6	9.802-330.0	8.715-504.0	H300AR	8.715-269.0	2BK90H	8.715-593.0	2BK62H	8.715-588.0	22MM
1724	6	9.802-329.0	8.715-504.0	H300AR	8.715-269.0	2BK90H	8.715-593.0	2BK62H	8.715-588.0	22MM
1725	6	9.802-329.0	8.715-504.0	H300AR	8.715-269.0	2BK90H	8.715-593.0	2BK62H	8.715-588.0	22MM
1730	7.5	8.715-097.0	8.715-503.0	H300AR	8.715-269.0	2BK80H	8.715-592.0	2BK50H	8.715-583.0	22MM
1732	7.5	8.715-097.01	8.715-503.0	H300AR	8.715-269.0	2BK80H	8.715-592.0	2BK50H	8.715-583.0	22MM
1733	7.5	9.802-333.0	8.715-503.0	H300AR	8.715-269.0	2BK80H	8.715-592.0	2BK50H	8.715-583.0	22MM
1734	7.5	8.715-105.0	8.715-503.0	H300AR	8.715-269.0	2BK80H	8.715-592.0	2BK50H	8.715-583.0	22MM
1735	7.5	8.715-105.0	8.715-503.0	H300AR	8.715-269.0	2BK80H	8.715-592.0	2BK50H	8.715-583.0	22MM
1740	10	8.715-110.0	8.715-503.0	HC500AR	8.715-271.0	2BK80H	8.715-592.0	2BK80H	8.715-592.0	22MM
1742	10	8.715-110.01	8.715-503.0	HC500AR	8.715-271.0	2BK80H	8.715-592.0	2BK80H	8.715-592.0	22MM
1743	10	8.715-109.0	8.715-503.0	HC500AR	8.715-271.0	2BK80H	8.715-592.0	2BK80H	8.715-592.0	22MM
1744	10	8.715-112.0	8.715-503.0	HC500AR	8.715-271.0	2BK80H	8.715-592.0	2BK80H	8.715-592.0	22MM
1745	10	8.715-112.0	8.715-503.0	HC500AR	8.715-271.0	2BK80H	8.715-592.0	2BK80H	8.715-592.0	22MM
1750	10	8.715-110.0	8.715-503.0	HC950AR	8.715-272.0	2BK90H	8.715-593.0	2BK57H	9.803-299.0	25MM
1752	10	8.715-110.01	8.715-503.0	HC950AR	8.715-272.0	2BK90H	8.715-593.0	2BK57H	9.803-299.0	25MM
1753	10	8.715-109.0	8.715-503.0	HC950AR	8.715-272.0	2BK90H	8.715-593.0	2BK57H	9.803-299.0	25MM
1754	10	8.715-112.0	8.715-503.0	HC950AR	8.715-272.0	2BK90H	8.715-593.0	2BK57H	9.803-299.0	25MM
1755	10	8.715-112.0	8.715-503.0	HC950AR	8.715-272.0	2BK90H	8.715-593.0	2BK57H	9.803-299.0	25MM


Note: All Models Use 9.802-362.0 Unloader with Auto Start/Stop Option

SPECIFICATIONS

Model #	Pump Bushing #	Motor Bushing	Motor Bushing #	Belt	Belt #	Contactactor	Overload	Primary Fuse	Secondary Fuse	Tranformer
1710	9.802-402.0	N/A	N/A	AX38	9.802-410.0	8.724-268.0	NA	NA	NA	NA
1720	8.715-643.0	H x 1-1/8"	9.802-400.0	BX46	8.715-706.0	8.724-276.0	N/A	8.933-007.0	9.802-463.0	9.802-551.0
1722	8.715-643.0	H x 1-1/8"	9.802-400.0	BX46	8.715-706.0	8.724-276.0	N/A	8.933-007.0	9.802-463.0	9.804-556.0
1723	8.715-643.0	H x 1-1/8"	9.802-400.0	BX46	8.715-706.0	8.724-268.0	8.724-304.0	8.933-007.0	9.802-463.0	9.804-556.0
1724	8.715-643.0	H x 1-1/8"	9.802-400.0	BX46	8.715-706.0	8.724-268.0	8.724-304.0	8.933-007.0	9.802-463.0	9.802-551.0
1725	8.715-643.0	H x 1-1/8"	9.802-400.0	BX46	8.715-706.0	8.724-268.0	8.724-303.0	9.802-462.0	9.802-463.0	9.802-551.0
1730	8.715-643.0	H x 1-3/8"	9.802-401.0	BX42	8.715-703.0	8.724-276.0	8.724-306.0	8.933-007.0	9.802-463.0	9.802-551.0
1732	8.715-643.0	H x 1-3/8"	9.802-401.0	BX42	8.715-703.0	8.724-276.0	8.724-306.0	8.933-007.0	9.802-463.0	9.804-556.0
1733	8.715-643.0	H x 1-3/8"	9.802-401.0	BX42	8.715-703.0	8.724-268.0	8.724-305.0	8.933-007.0	9.802-463.0	9.804-556.0
1734	8.715-643.0	H x 1-3/8"	9.802-401.0	BX42	8.715-703.0	8.724-268.0	8.724-304.0	8.933-007.0	9.802-463.0	9.802-551.0
1735	8.715-643.0	H x 1-3/8"	9.802-401.0	BX42	8.715-703.0	8.724-268.0	8.724-312.0	9.802-462.0	9.802-463.0	9.802-551.0
1740	8.715-643.0	H x 1-3/8"	9.802-401.0	BX48	8.715-708.0	8.724-281.0	8.724-307.0	8.933-007.0	9.802-463.0	9.802-551.0
1742	8.715-643.0	H x 1-3/8"	9.802-401.0	BX48	8.715-708.0	8.724-281.0	8.724-307.0	8.933-007.0	9.802-463.0	9.804-556.0
1743	8.715-643.0	H x 1-3/8"	9.802-401.0	BX46	8.715-706.0	8.724-272.0	8.724-305.0	8.933-007.0	9.802-463.0	9.804-556.0
1744	8.715-643.0	H x 1-3/8"	9.802-401.0	BX46	8.715-706.0	8.724-272.0	8.724-305.0	8.933-007.0	9.802-463.0	9.802-551.0
1745	8.715-643.0	H x 1-3/8"	9.802-401.0	BX46	8.715-706.0	8.724-268.0	8.724-312.0	9.802-462.0	9.802-463.0	9.802-551.0
1750	9.802-403.0	H x 1-3/8"	9.802-401.0	BX46	8.715-706.0	8.724-281.0	8.724-307.0	8.933-007.0	9.802-463.0	9.802-551.0
1752	9.802-403.0	H x 1-3/8"	9.802-401.0	BX46	8.715-706.0	8.724-281.0	8.724-307.0	8.933-007.0	9.802-463.0	9.804-556.0
1753	9.802-403.0	H x 1-3/8"	9.802-401.0	BX43	9.802-420.0	8.724-272.0	8.724-305.0	8.933-007.0	9.802-463.0	9.804-556.0
1754	9.802-403.0	H x 1-3/8"	9.802-401.0	BX43	9.802-420.0	8.724-272.0	8.724-305.0	8.933-007.0	9.802-463.0	9.802-551.0
1755	9.802-403.0	H x 1-3/8"	9.802-401.0	BX43	9.802-420.0	8.724-268.0	8.724-312.0	9.802-462.0	9.802-463.0	9.802-551.0

HD PUMP EXPLODED VIEW

8.904-729.0 / 5-1206 HD 3030H

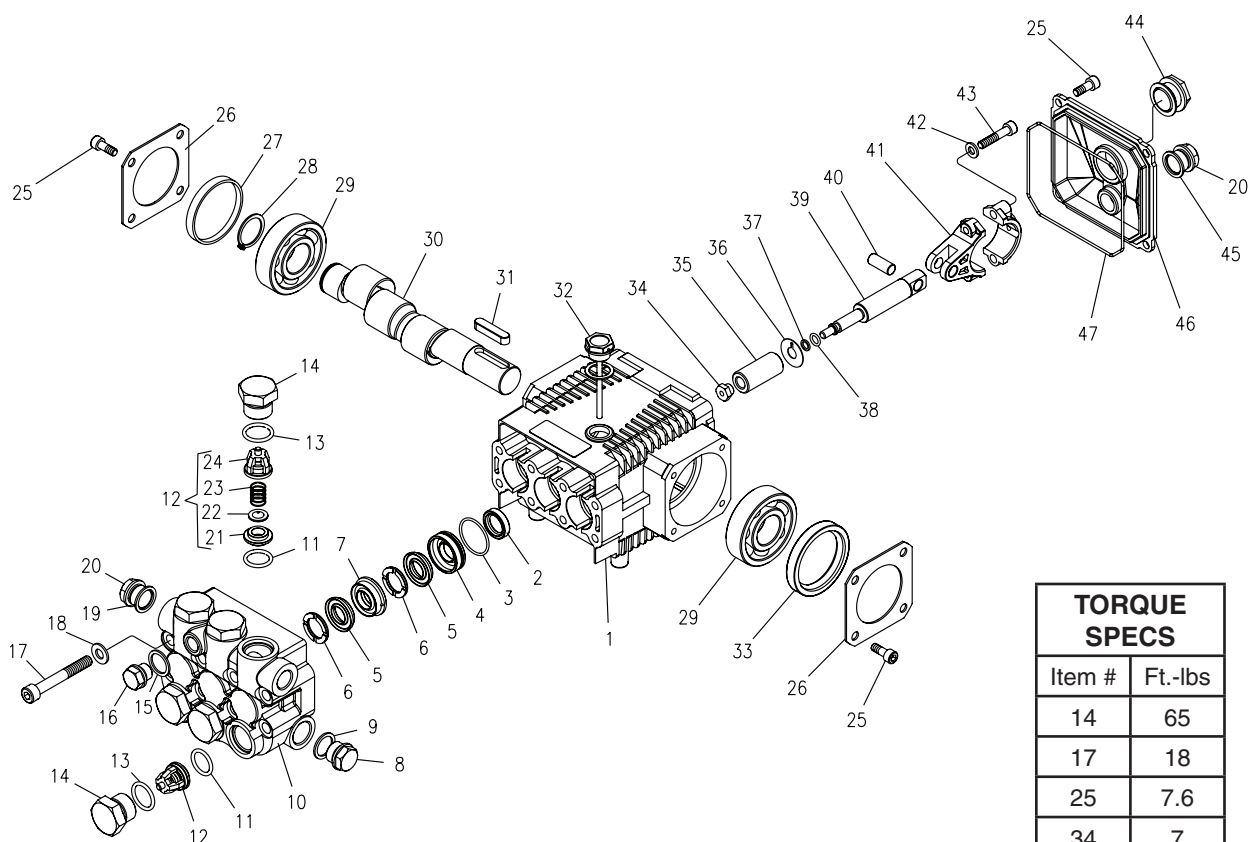

TORQUE SPECS	
Item #	Ft.-lbs
14	65
17	18
25	7.6
34	7
43	13

HD PUMP EXPLODED VIEW AND PARTS LIST

ITEM	PART NO.		DESCRIPTION	QTY
1	70-020292	9.803-938.0	Crankcase	1
2*	See Kits		Plunger Oil Seal	3
3*	70-060181	9.803-939.0	O-Ring Ø1.78 x 28.30	3
4*	70-120131	9.804-552.0	Pressure Ring 15 mm	3
5*	See Kits		"U" Seal, 15 mm	6
6*	70-030048	9.803-942.0	Support Ring 15 mm	6
7*	70-030052	9.804-075.0	Intermed. Ring 15 mm	3
8	70-160120	9.802-926.0	Brass Plug 1/2"	1
9	70-060307	9.803-199.0	Copper Washer 1/2"	1
10	70-160228	9.803-946.0	Manifold Housing	1
11*	70-060155	9.803-947.0	O-Ring Ø1.78 x 15.54	6
12*	See Kits		Valve Assembly	6
13*	70-060122	9.803-948.0	O-Ring Ø2.62 x 18.77	6
14	70-160147	9.803-949.0	Valve Plug	6
15	70-060308	9.803-950.0	Copper Washer 1/4"	1
16	70-160121	9.803-951.0	Brass Plug G 1/4"	1
17	70-180118	9.803-952.0	Manifold Stud Bolt	8

HD PUMP EXPLODED VIEW AND PARTS LIST


ITEM	PART NO.		DESCRIPTION	QTY
18	70-140001	9.802-884.0	Washer	8
19	70-060306	9.803-198.0	Copper Washer 3/8"	1
20	70-160117	9.802-925.0	Brass Plug 3/8"	2
25	70-180112	9.802-939.0	Screw	12
26	70-020318	9.803-953.0	Bearing Cover	2
27	70-020502	9.803-954.0	Bearing Seal	1
28	70-150003	9.802-914.0	Snap Ring	1
29	70-021300	9.803-955.0	Ball Bearing	2
30	70-000605	9.803-956.0	Crankshaft	1
31	70-020604	9.803-167.0	Crankshaft Key	1
32	70-160012	9.803-957.0	Oil Dipstick	1
33	70-000110	8.933-010.0	Crankshaft Seal	1
34*	70-030211	9.803-959.0	Plunger Nut	3
35*	70-120023	9.803-960.0	Plunger, 15 mm	3
36*	70-140027	9.803-962.0	Copper Spacer	3
37*	70-060130	9.803-963.0	O-Ring Ø1.78 x 5.28	3
38*	70-000913	9.803-156.0	Teflon Ring	3
39*	70-000320	9.803-964.0	Plunger Rod	3
40	70-150204	9.803-965.0	Connecting Rod Pin	3
41	70-010008	9.803-966.0	Connecting Rod	3
42	70-140102	9.803-218.0	Spring Washer	6
43	70-180132	8.933-020.0	Connecting Rod Screw	6
44	70-070005	9.803-202.0	Sight Glass	1
45	70-060302	9.803-197.0	Gasket	1
46	70-020352	9.803-968.0	Crankcase Cover	1
47	70-060104	9.803-969.0	O-Ring Ø2.62 x 107.62	1

* Available in kit (See below)

REPAIR KIT NUMBER	70-261412	70-261413	70-261404	70-260028	70-260826
KIT DESCRIPTION	*Plunger Seal 15mm	**Complete Seal Packing	Plunger 15mm	Complete Valve	Plunger Oil Seals
ITEM NUMBERS INCLUDED	3, 5, 6, 8, 9, 10	2, 3, 4, 5, 6, 7, 8, 9, 10	37, 38, 39, 40, 41	14, 15, 16	2
NO. OF CYLINDERS KIT WILL SERVICE	3	1	1	6	3

MT SERIES PUMP EXPLODED VIEW

HH306A 8.904-917.0
 HH306AR 8.715-269.0
 HH406A 8.715-251.0
 HHC506A 8.715-259.0
 HHC506AR 8.715-271.0

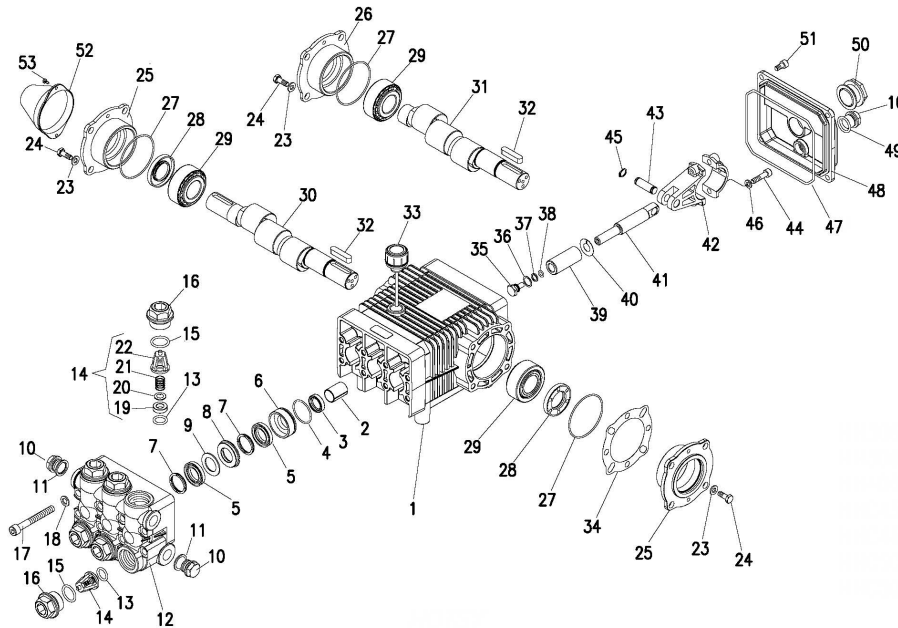

TORQUE SPECS	
Item #	Ft.-lbs
15	75
16	18
24	7.6
35	4.5
44	13
51	7.6

MT SERIES PUMP EXPLODED VIEW PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY
1	8.717-128.0	Crankcase, M-series	1
2	860361 9.803-196.0	Guide, Plunger	3
3	926653 9.803-141.0	Seal, Oil, Plunger	3
4	926658 9.803-189.0	O-ring, Press Ring, 1.78 x 31.47	3
5	8.915-904.0	Seal, U Sleeves 20mm	6
6	8.717-311.0	Ring, Pressure, 20mm	3
7	8.717-180.0	Support Ring, 20mm	6
8	8.915-905.0	Ring, Intermediate 20mm	3
9	8.915-906.0	Teflon Ring	3
10	915630 9.802-925.0	Plug, Brass 3/8	2
11	8.717-248.0	Washer, Copper 3/8	2
12	884471 8.717-514.0	Manifold, H306/H406/H506	1
13	8.717-227.0	O-ring, Valve Seat, 2.62 X 17.13	6
14*	See Kit	Check Valve Assembly	6
15	8.717-227.0	O-ring, Valve Cap, 2.62 x 17.13	6
16	8.717-497.0	Valve Cap	6
17	612693 8.717-526.0	Stud, Bolt Manifold	8

MT SERIES PUMP EXPLODED VIEW PARTS LIST


ITEM	PART NO.		DESCRIPTION	QTY
18	780560	9.802-884.0	Washer	8
23		8.915-907.0	Washer	8
24	735317	8.717-539.0	Scr Hex 6mm x 18mm	8
25		8.717-201.0	Bearing Housing	1
26		8.717-202.0	Bearing Housing Cover	1
27	926647	9.803-192.0	O-ring, 2.62 X 60.05	2
28	926650	9.803-140.0	Crankshaft Seal	2
29		8.717-116.0	Bearing, Roller	2
30	827390	8.717-046.0	Crankshaft, (HH406A)	1
	827391	8.717-047.0	Crankshaft (HHC506A)	1
	827393	8.717-049.0	Crankshaft, (HH306A)	1
31	827392	8.717-048.0	Crankshaft (HHC506AR)	1
	827397	8.717-053.0	Crankshaft HH306AR)	1
32	877249	8.717-150.0	Key, 8mm x 7mm x 25mm	1
33		8.717-484.0	Dipstick	1
34	944783	9.803-178.0	Shim	1
35	612691	9.802-936.0	Piston Bolt	3
36	944779	9.802-885.0	Spacer, Copper	3
37	926655	9.803-188.0	Ring, Teflon	3
38	926685	9.803-155.0	Ring, Teflon	1
39	941764	8.717-293.0	Plunger, 20mm	3
40	944782	9.802-888.0	Spacer, Copper	3
41	829903	9.803-144.0	Rod, Plunger	3
42	928641	9.802-158.0	Connecting Rod	3
43	914139	9.802-916.0	Pin, Connecting Rod	3
44	735312	9.803-238.0	Connecting Rod Screw	6
45	926692	9.802-913.0	Snap Ring	6
46	780564	9.803-218.0	Washer, Spring	6
47		8.717-243.0	O-ring, 2.62 X 126.67	1
48		8.717-141.0	Crankcase Cover	1
49		8.717-226.0	O-ring, 1.78 X 14	1
50	858429	9.803-202.0	Sight Glass, G3/4, w/Gasket	1
51	735313	9.802-939.0	Screw, Crankcase	4
52		8.915-910.0	Shaft Protector	1
53		8.915-911.0	Screw	2

* Available in kit (See below)

REPAIR KIT NUMBER	753094 8.717-684.0	753098 8.717-680.0	877648 8.717-584.0	877655 8.717-618.0	877656 8.717-617.0
KIT DESCRIPTION	Seal Packing 20 mm, 3 Cyl	Packing Assy. 20 mm	Check Valve	Plunger Oil Seal	Kit, Plunger, 20 mm
ITEM NUMBERS INCLUDED	4, 5, 7, 9	4, 5, 6, 7, 8, 9	12, 20, 21, 22, 23	3	35, 36, 37, 38, 39, 40
NO. OF CYLINDERS KIT WILL SERVICE	3	1	1	3	1

HC950A PUMP EXPLODED VIEW

8.715-272.0 HC950A

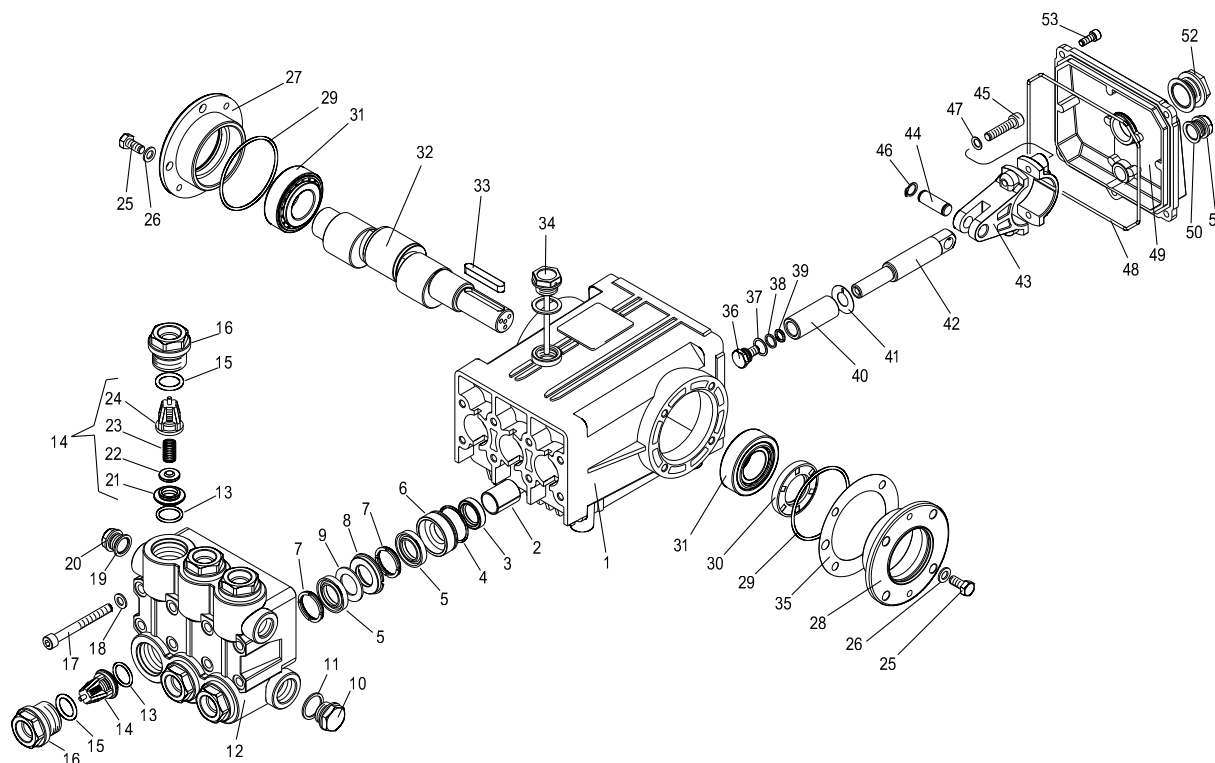

HC950A PUMP EXPLODED VIEW PARTS LIST

ITEM	PART NO.		DESCRIPTION	QTY
1	827325	8.717-122.0	Crankcase	1
2	860360	9.803-195.0	Plunger Guide	3
3	926652	9.804-587.0	Plunger Oil Seal	3
4	926659	9.803-190.0	"O" Ring Ø1.78 x 37.82	3
5		8.730-820.0	"U" Seal (25 mm)	6
6		8.730-878.0	Pressure Ring (25 mm)	3
7		8.730-856.0	Support Ring (25 mm)	6
8		8.730-854.0	Intermed. Ring (25 mm)	3
9		8.730-835.0	Back Ring (25 mm)	3
10	830922	9.803-285.0	Brass Plug, 3/4"	1
11		9.803-286.0	Copper Washer, 3/4"	1
12	783996	9.802-939.0	Manifold Housing	1
13	814932	8.717-237.0	"O" Ring Ø2.62 x 25.7	6
14	70-360450		Valve Assembly	6
15	814931	8.717-237.0	"O" Ring Ø3.53 x 26.58	6
16	829939	9.802-929.0	Valve Plug	6
17	875634	8.717-534.0	Manifold Stud Bolt	8
18	780560	9.802-884.0	Washer	8
19	936932		Copper Washer, 1/2"	1
20		9.802-926.0	Brass Plug, 1/2"	1

HC950A PUMP EXPLODED VIEW PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY
21	8.730-885.0	Valve Seat	6
22	8.730-885.0	Valve Plate	6
23	8.717-266.0	Valve Spring	6
24	8.717-254.0	Valve Cage	6
25	735314	Hexagonal Screw	8
26	780560	Washer	8
27	615374	Closed Bearing Housing	1
28	867750	Bearing Housing	1
29	926649	"O" Ring Ø2.62 x 71.12	2
30	926651	Crankshaft Seal	1
31	630930	Roller Bearing	2
32	753100	Crankshaft	1
33	835280	Crankshaft Key	1
34	944784	Oil Dip Stick	1
35	612690	Shim	1
36*	944780	Plunger Bolt	3
37*	926654	Copper Spacer	3
38*	926684	"O" Ring Ø1.78 x 10.82	3
39*	941767	Teflon Ring	3
40*	944781	Plunger (25 mm)	3
41*	829931	Copper Spacer	3
42	928640	Plunger Rod	3
43	914138	Connecting Rod	3
44	9.802-937.0	Connecting Rod Pin	3
45	926691	Connecting Rod Screw	6
46	936933	Snap Ring	6
47	855894	Spring Washer	6
48	827326	"O" Ring Ø2.62 x 152.07	1
49	9.803-197.0	Crankcase Cover	1
50	70-160117	Gasket, 3/8"	1
51	858429	Brass Plug, 3/8"	1
52	735313	Sight Glass, 3/4"	1
53	753097	Cover Screw	5

*	

Part available in kit only

Part available in kit also


SPARE PARTS KIT

ITEM	PART NUMBER	DESCRIPTION	QTY
4 - 5 - 7 - 9	753097 / 8.717-687.0	Plunger Seals (25 mm)	1
3 - 4 - 5 - 6 - 7 - 8 - 9	753093 / 8.717-683.0	Complete Seal Packing (25 mm)	3
36 - 37 - 38 - 39 - 40 - 41	877652 / 9.802-614.0	Plunger (25 mm)	3
13 - 14 - 15	753069 / 8.717-589.0	Complete Valve	6
3	877653 / 8.717-585.0	Plunger Oil Seal	1

VBR UNLOADER VALVE EXPLODED VIEW & PARTS LIST

8.715-503.0

8.715-504.0

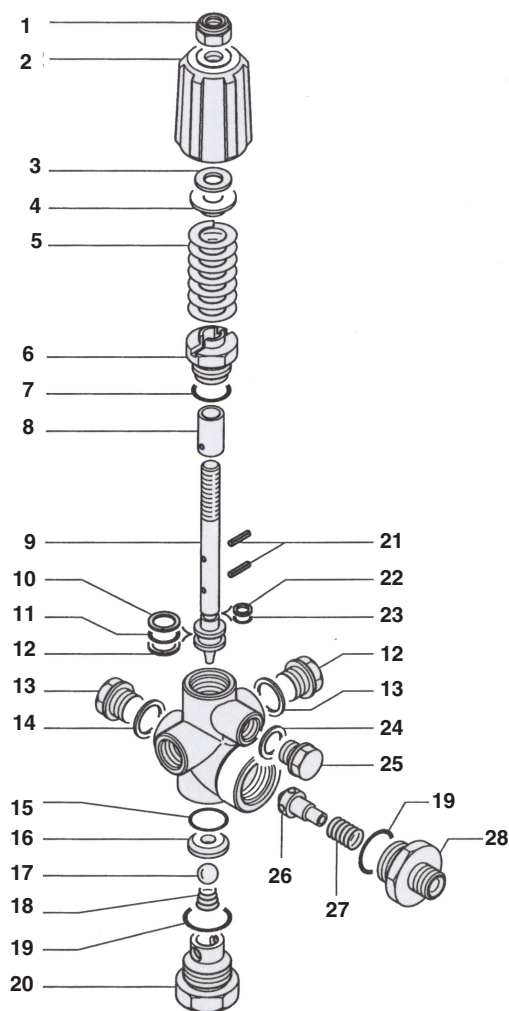


ITEM	PART NO.		DESCRIPTION	KIT	QTY
1	70-030400	8.717-192.0	Nut, Locking		1
2	70-090507	8.717-269.0	Handle, Red		1
	70-090506	8.931-691.0	Handle, Yellow		1
	70-090505	8.932-690.0	Handle, Green		1
	70-090508	8.932-692.0	Handle, Blue		1
3	70-140021	8.932-697.0	Space, Anti-friction	D	1
4	70-120204	8.932-693.0	Plate	D	1
5	70-090024	8.932-689.0	Spring	D	1
6	70-140712	8.717-403.0	Stem Nut	D	1
7	70-060119	9.803-191.0	O-Ring, Nut	C	1
8	70-080300	8.932-684.0	Spacer, Red		1
	70-080301	8.932-683.0	Spacer, Yellow		1
	70-080302	8.932-686.0	Spacer, Green		1
	70-080307	8.932-687.0	Spacer, Blue		1
9	70-120606	8.932-695.0	Stem	D	1
10	70-000901	8.717-078.0	O-Ring, Back up	C	2
11	70-060121	8.932-682.0	O-Ring, Stem	C	1
12	70-160117	9.802-925.0	Plug, 3/8		2
13	70-060306	9.803-198.0	Washer, 3/8		2
14	70-020413	8.717-146.0	Body		1
15	70-060122	9.803-948.0	O-Ring, Seat	B	1
16	70-150306	8.932-703.0	Seat	B	1
17	70-150400	8.730-888.0	Ball, 7/16	B	1
18	70-090011	8.932-688.0	Spring	B	1
19	70-060118	8.932-681.0	O-Ring, Connector	B	2
20	70-140703	8.932-698.0	Connector, Inlet		1
21	70-150505	8.932-705.0	Pin	C	1
22	70-000900	8.717-077.0	O-Ring, Backup 106	C	1
23	70-060120		O-Ring, Stem	C	1
24	70-060308	9.803-950.0	Washer, 1/4		1
25	70-160121	9.803-951.0	Plug, 1/4		1
26	70-110211	8.717-284.0	Poppet		1
27	70-090004	8.933-017.0	Spring	A	1
28	70-140704	9.802-891.0	Connector, Outlet	A	1

Kit "A"	70-262809	8.717-676.0	Outlet Kit
Kit "B"	70-261501	8.717-654.0	Inlet Kit
Kit "C"	70-261502	8.717-655.0	Stem Seal Kit
Kit "D"	70-261504	8.717-656.0	Stem Kit


WIRING DIAGRAM

Models 1720 and 1722

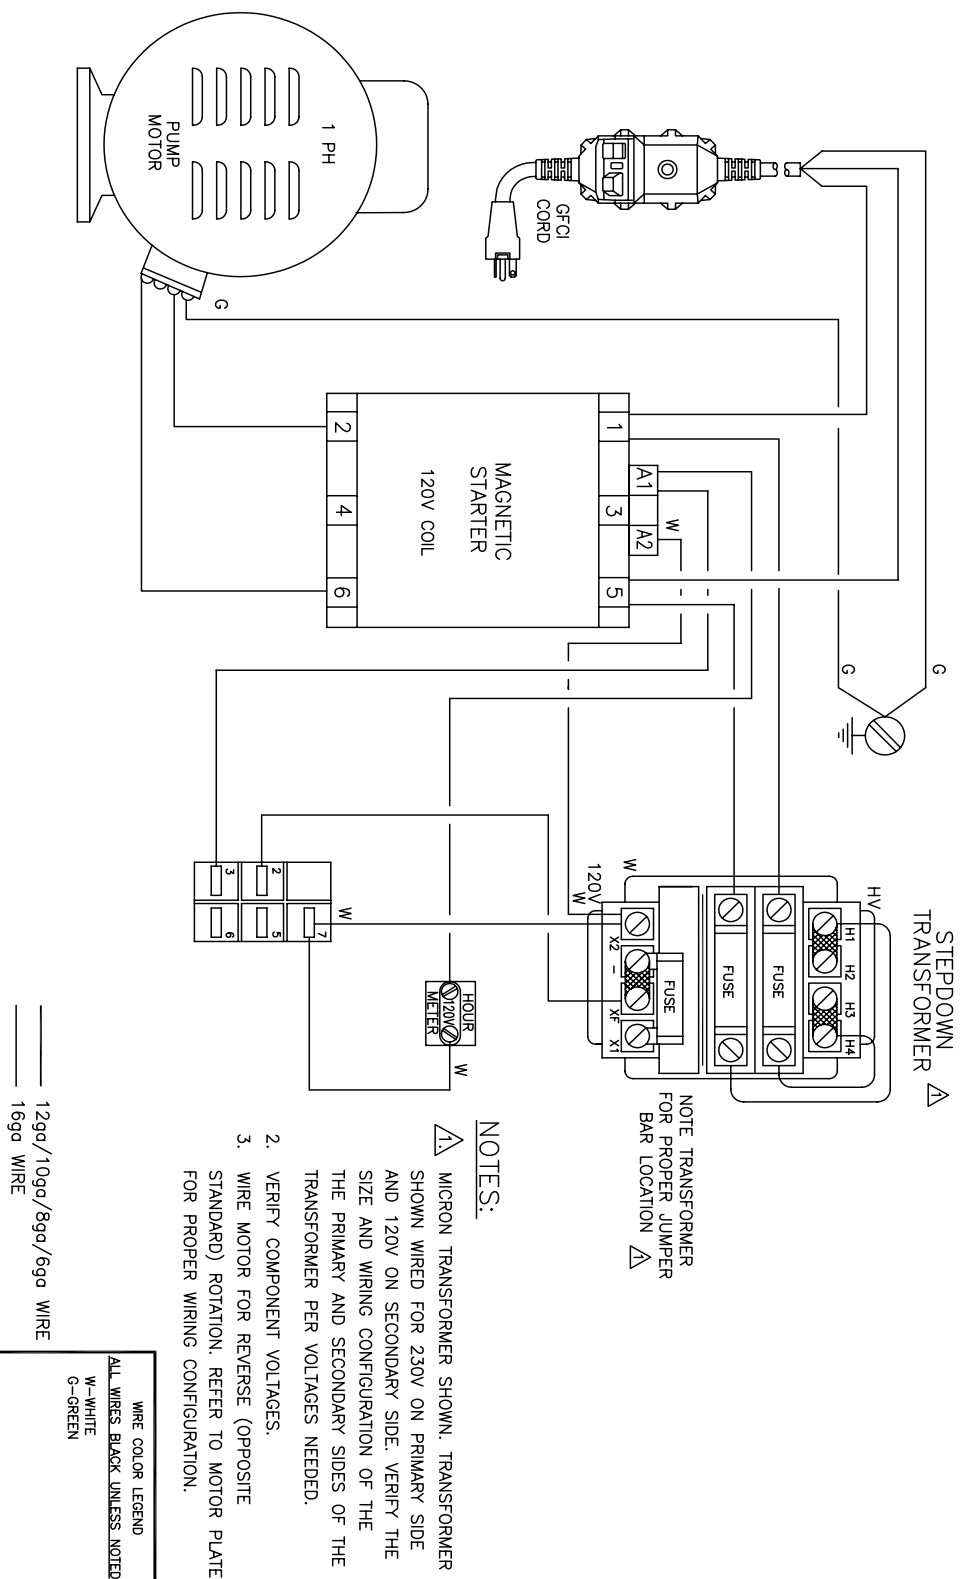

WIRING DIAGRAM

Models 1730,1732,1740,1742,1750,1752

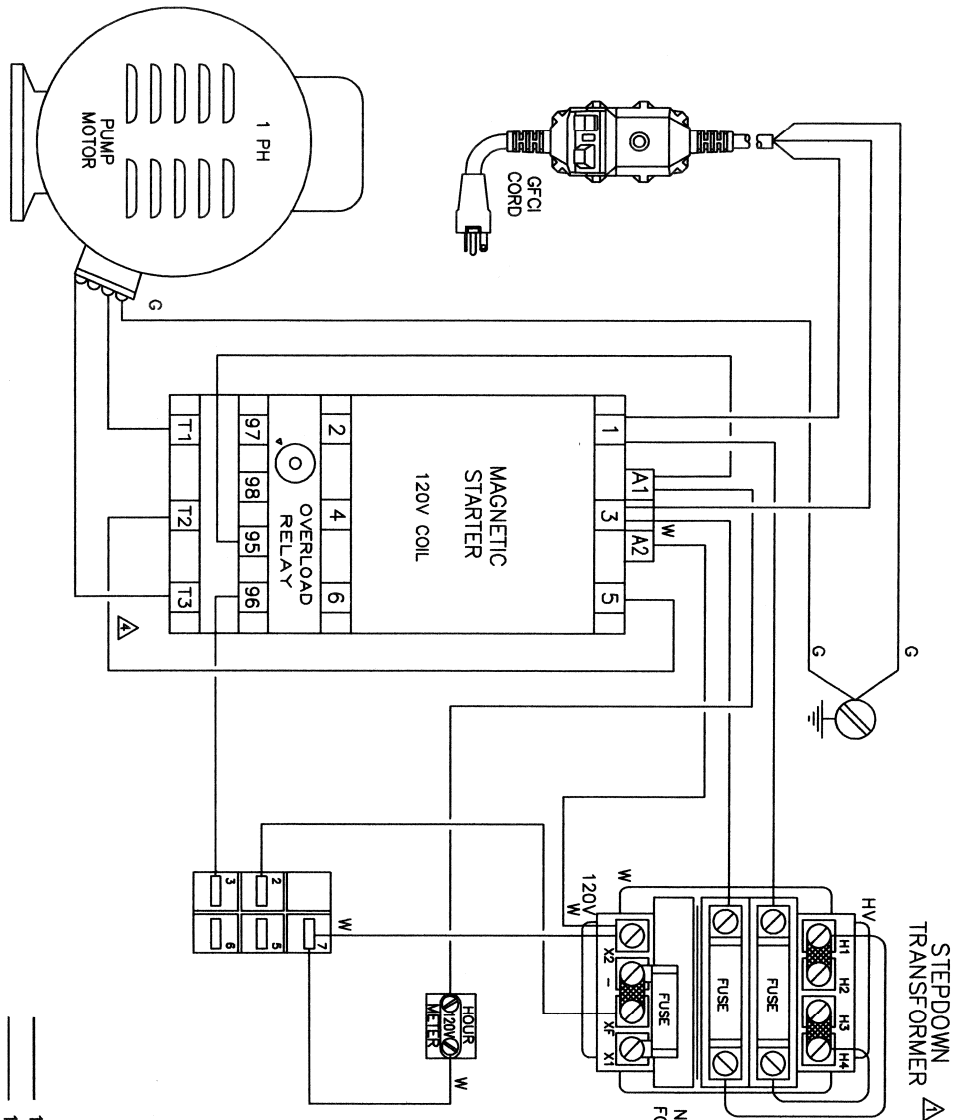


12ga/10ga/8ga/6ga WIRE
16ga WIRE

- NOTES:**
1. MICRON TRANSFORMER SHOWN. TRANSFORMER SHOWN WIRED FOR 230V ON PRIMARY SIDE AND 120V ON SECONDARY SIDE. VERIFY THE SIZE AND WIRING CONFIGURATION OF THE THE PRIMARY AND SECONDARY SIDES OF THE TRANSFORMER PER VOLTAGES NEEDED.
 2. VERIFY COMPONENT VOLTAGES.
 3. WIRE MOTOR FOR REVERSE (OPPOSITE STANDARD) ROTATION. REFER TO MOTOR PLATE FOR PROPER WIRING CONFIGURATION.
- WIRE SIZE:** 8ga: 1730, 1732
6ga: 1740, 1742, 1750, 1752

WIRE COLOR LEGEND
ALL WIRES BLACK UNLESS NOTED
W--WHITE
G--GREEN

WIRING DIAGRAM

Models 1723, 1724, 1725, 1733, 1734, 1735, 1743, 1744, 1745, 1753, 1754, 1755

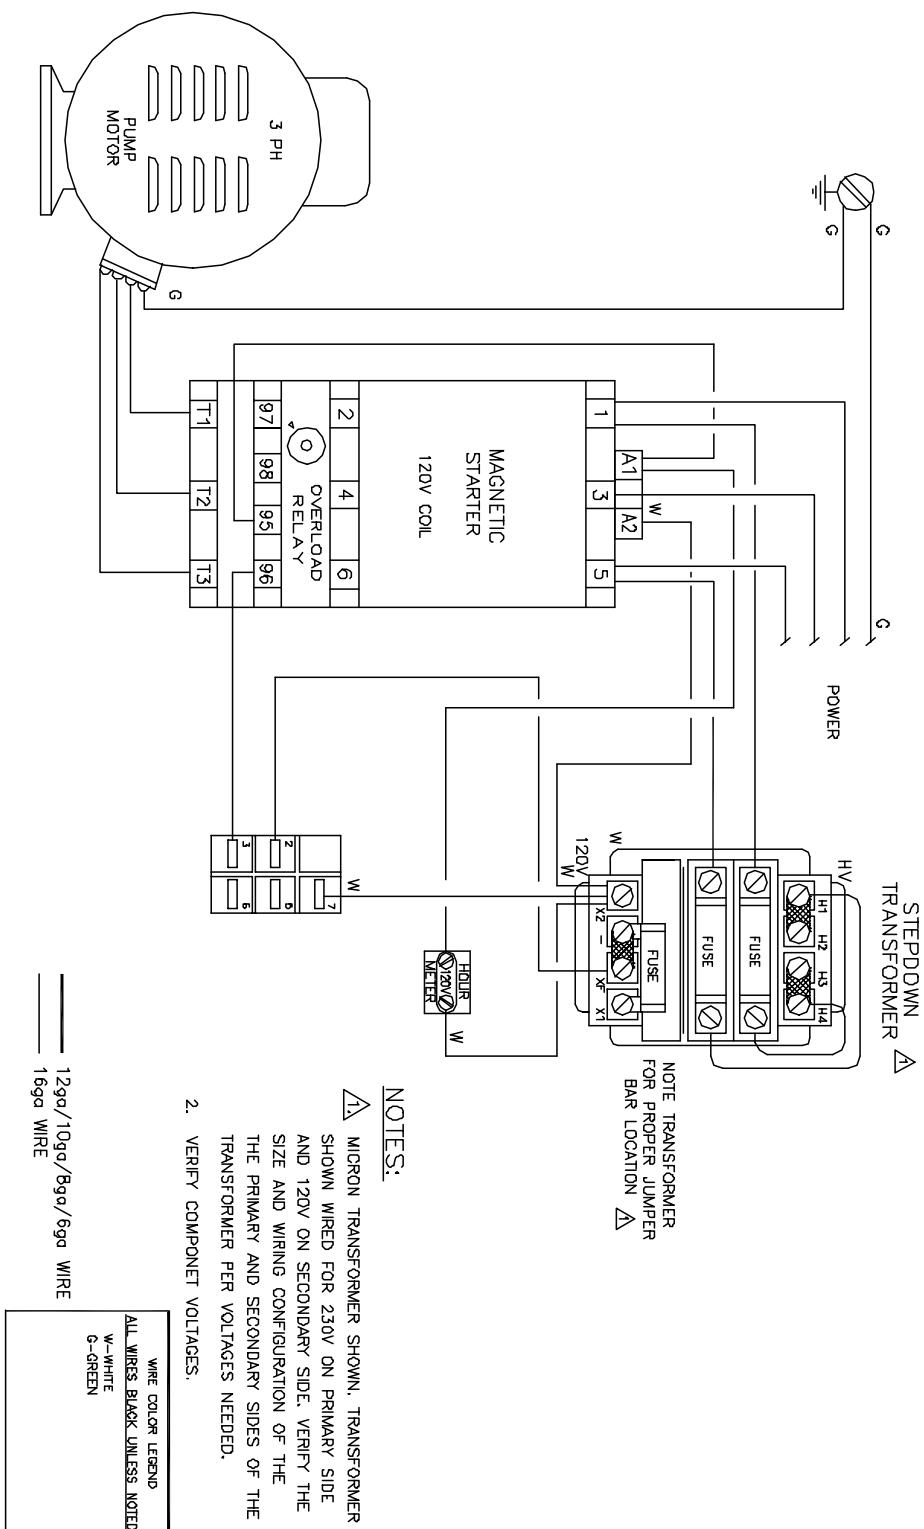


Models 1720 and 1722 w/Time Delay Shutdown




WIRING DIAGRAM

Models 1730,1732,1740,1742,1750,1752 w/Time Delay Shutdown

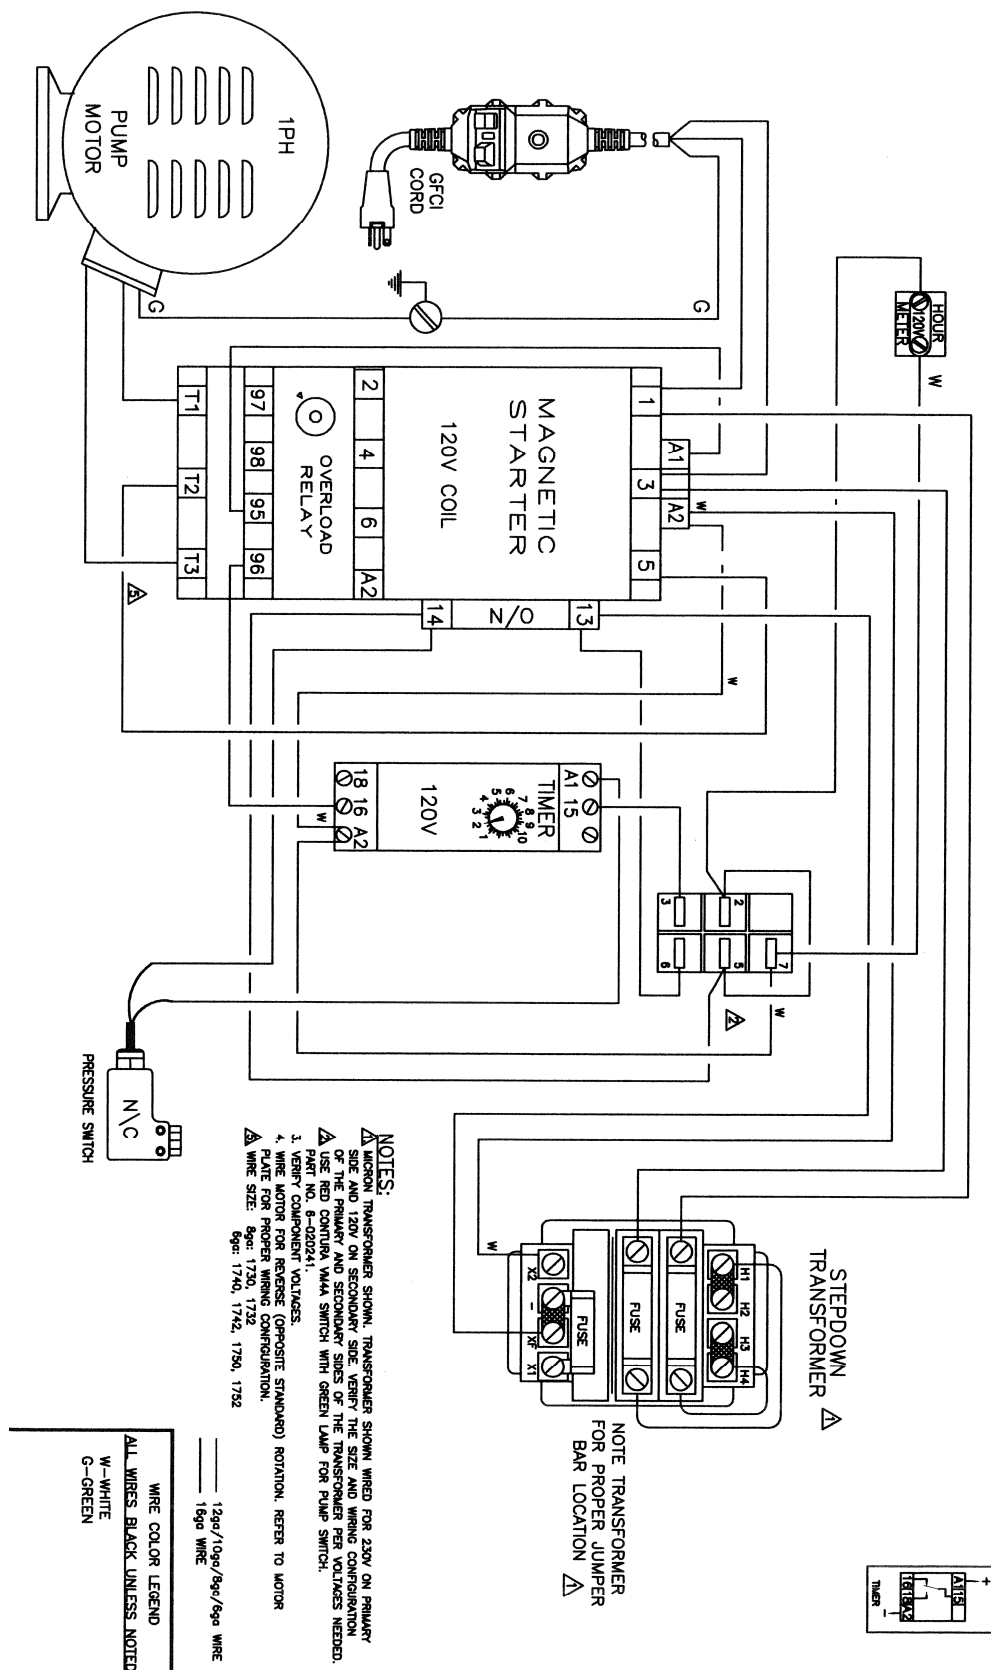

WIRING DIAGRAM

Models 1723,1724,1725,1733,1734,1735,1743,1744,1745,1753,1754,1755 w/Time Delay Shutdown

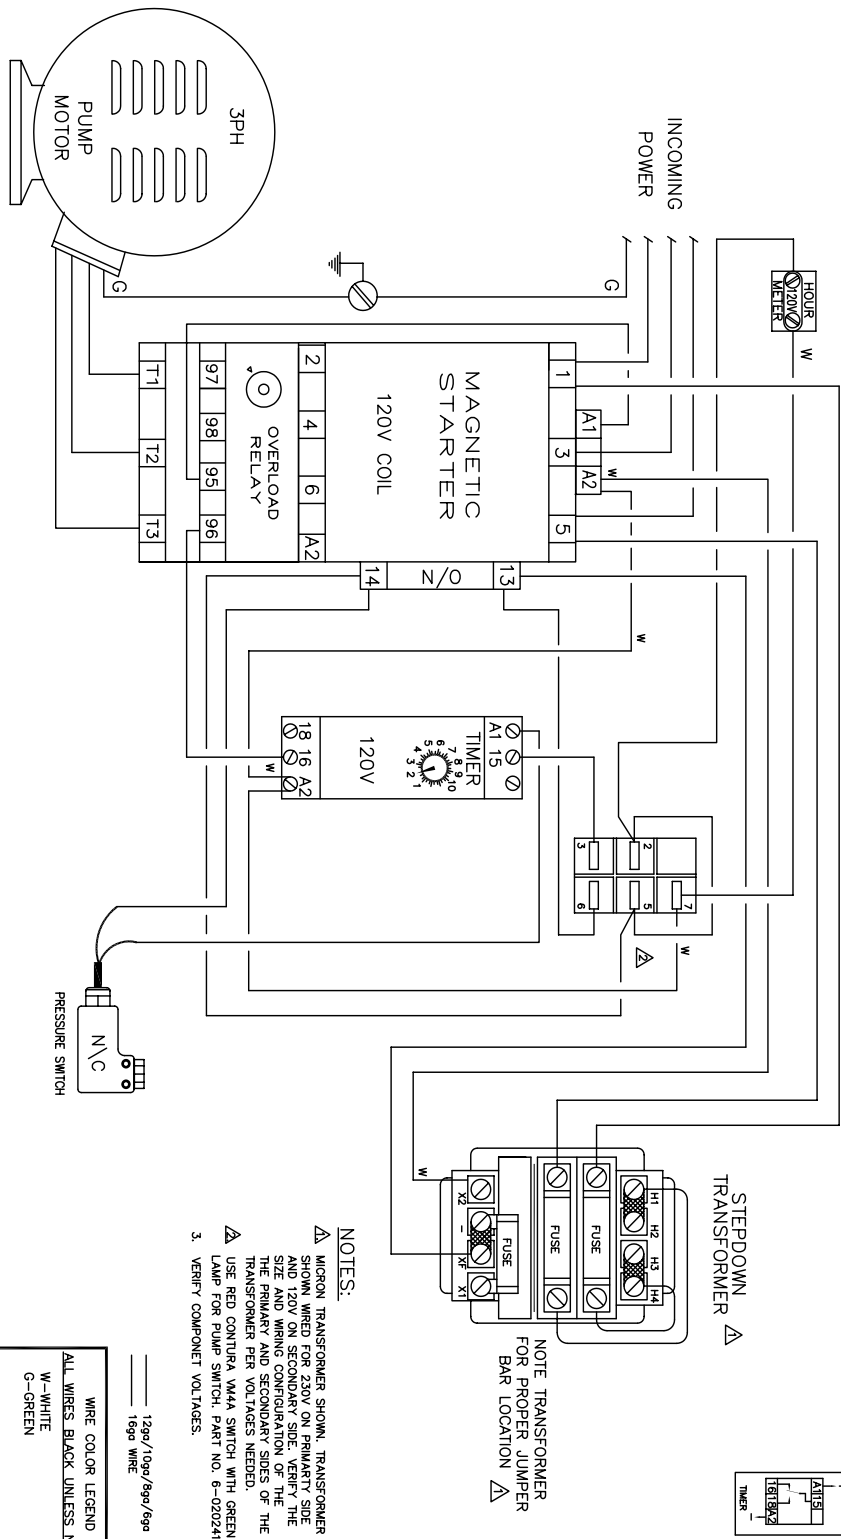

- NOTES:
1. MICRON TRANSFORMER SHOWN, TRANSFORMER SHOWN WIRING FOR 250V ON PRIMARY SIDE AND 120V ON SECONDARY SIDE. THE SIZE AND WIRING CONFIGURATION OF THE TRANSFORMER AND SECONDARY SIZES OF THE TRANSFORMER PER VOLTAGES NEEDED.
 2. USE RED CONTOUR LAMP WITH GREEN LAMP FOR PUMP SWITCH, PART NO. 6-020241.
 3. VERIFY COMPONENT VOLTAGES.



WIRE COLOR LEGEND
 W—WHITE
 G—GREEN
 ALL WIRES BLACK UNLESS NOTED

Model 1710



WIRING DIAGRAM

Model 1720 w/Time Delay Shutdown

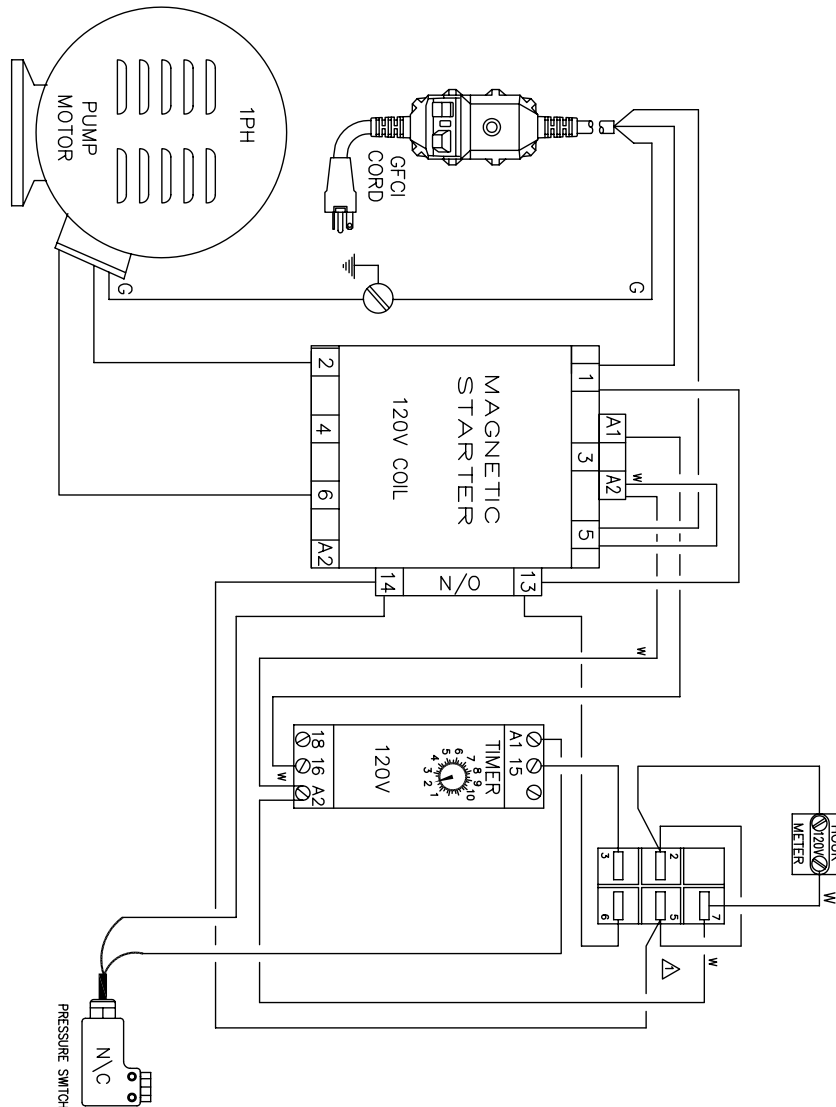

- NOTES:
1. USE RED CONTURA VMAA SWITCH WITH GREEN LAMP FOR PUMP SWITCH. PART NO. 6-020241.
 2. VERIFY COMPONENT VOLTAGES.
 3. WIRE MOTOR FOR REVERSE (OPPOSITE STANDARD) ROTATION. REFER TO MOTOR PLATE FOR PROPER WIRING CONFIGURATION.

WIRE COLOR LEGEND

12ga./10ga./8ga./6ga. WIRE

16ga. WIRE

ALL WIRES BLACK UNLESS NOTED

W-WHITE

G-GREEN

Models 1720 and 1722 with Auto Start/Stop



8.914-380.0 / 97-6419 • HOTSYS 1700 • Rev. 7/08

[illegible]

WIRE COLOR LEGEND


ALL WIRES BLACK UNLESS NOTE

W-WHITE
G-GREEN
R-RED

12ga/10ga
8ga/6ga WIRE
16ga WIRE


WIRING DIAGRAM

Models 1730, 1732, 1740, 1742, 1750, 1752, with Auto Start/Stop

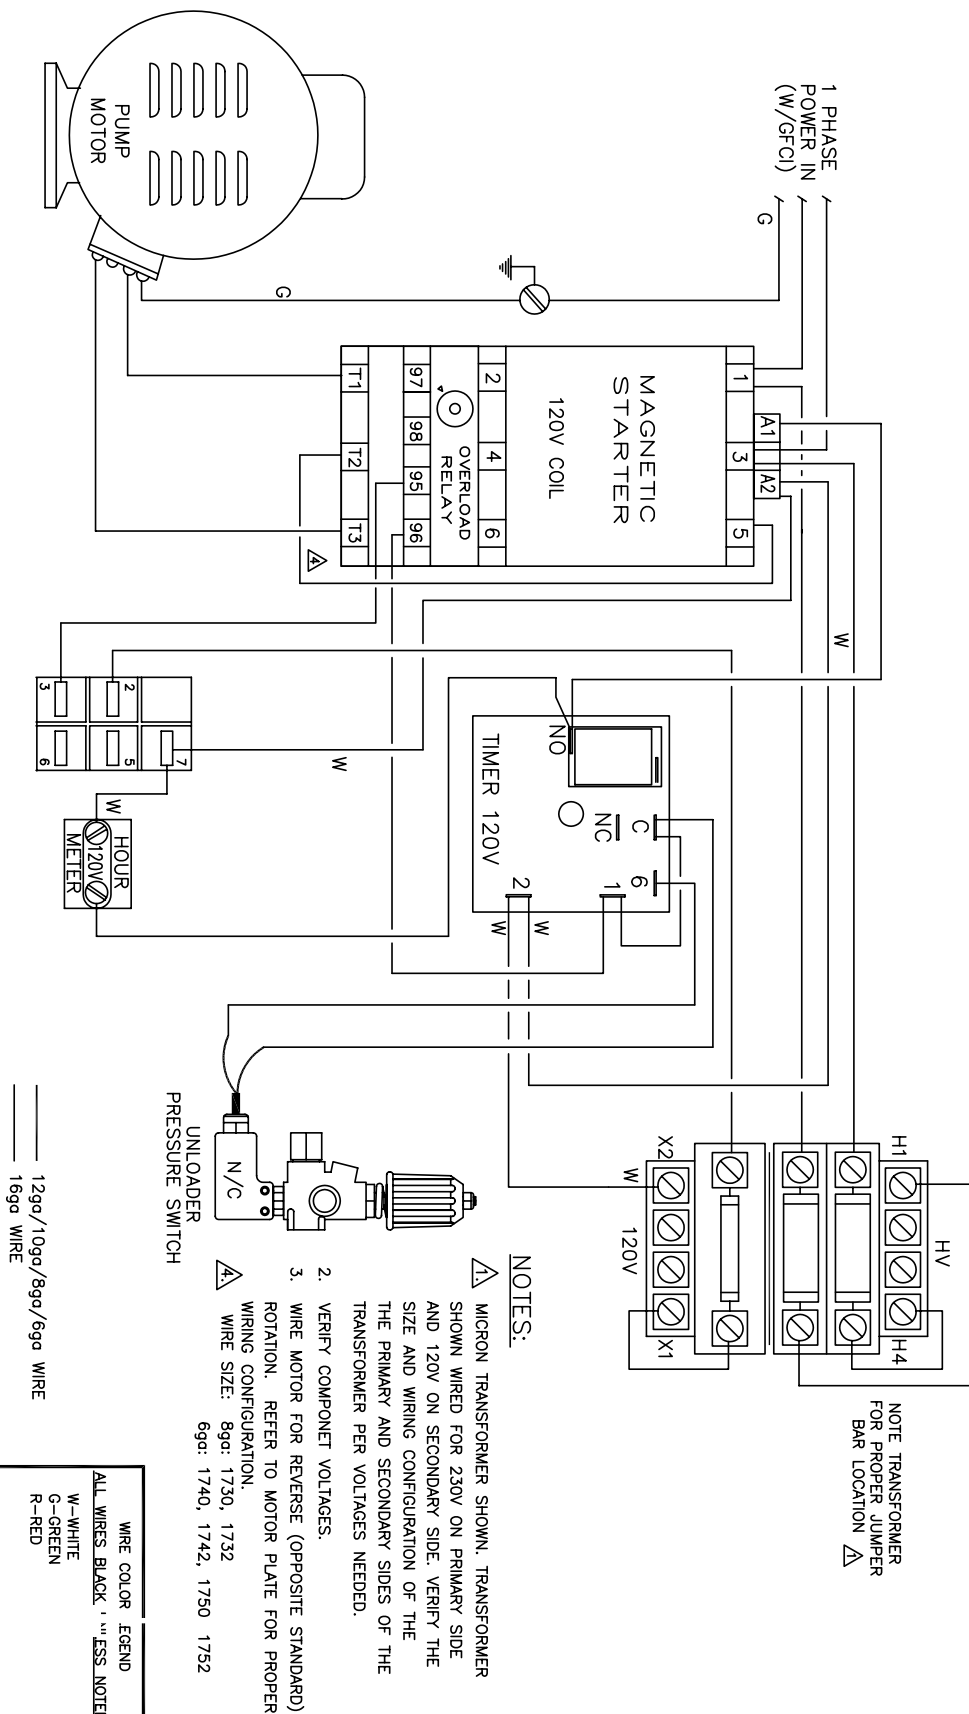

WIRING DIAGRAM

Models 1723, 1724, 1725, 1733, 1734, 1735, 1743, 1744, 1745, 1753, 1754, 1755 w/Auto Start/Stop

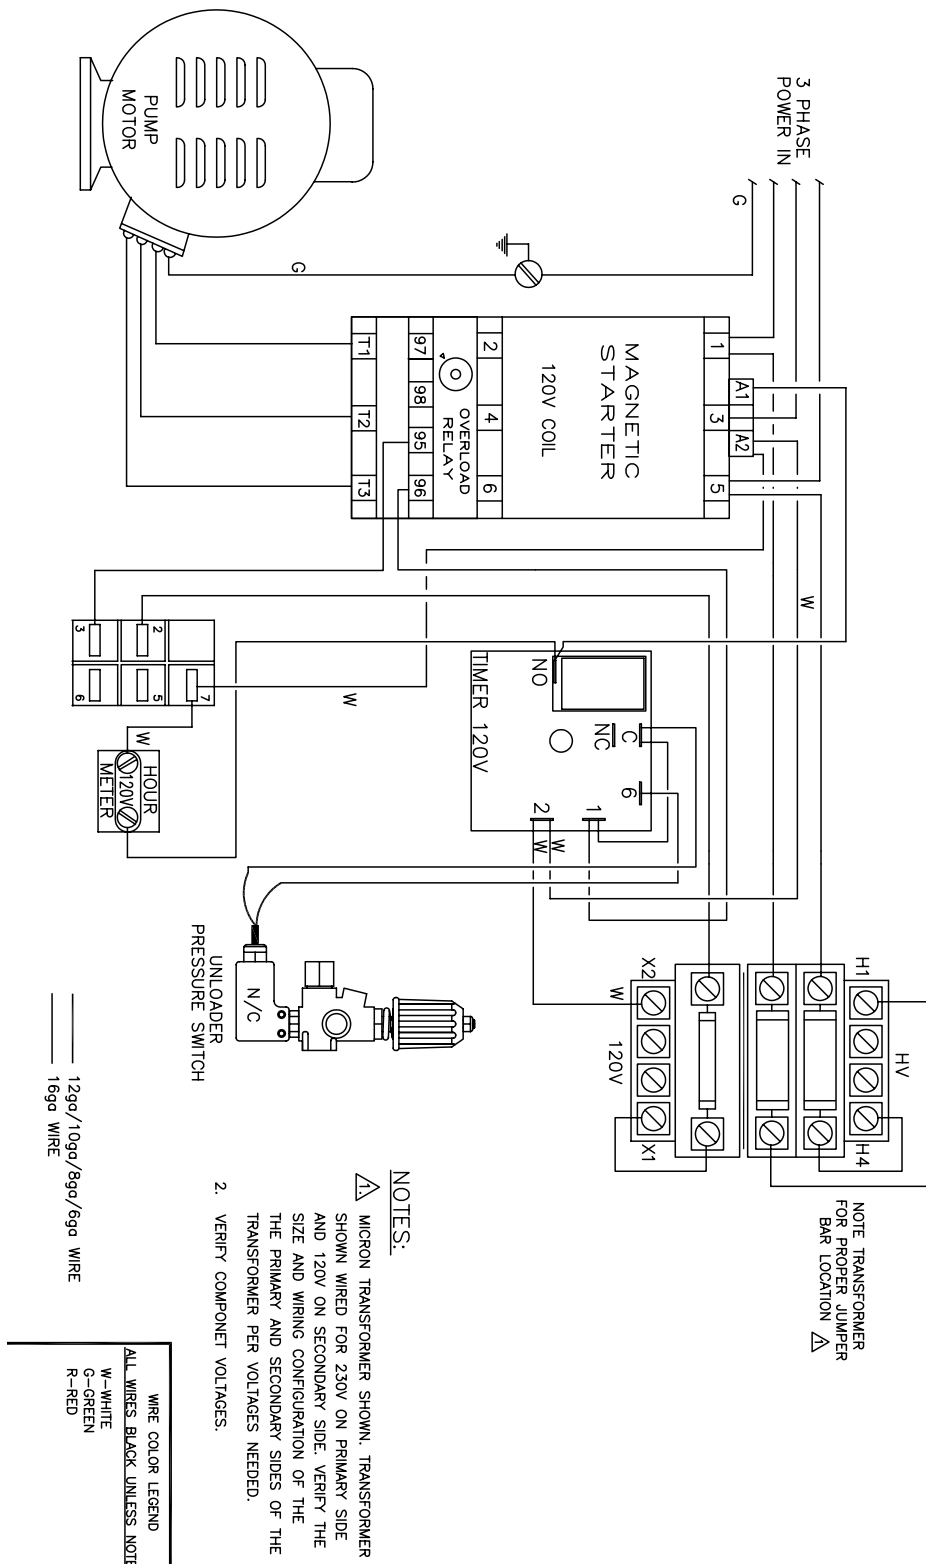



HOTSY LIMITED NEW PRODUCT WARRANTY PRESSURE WASHERS WHAT THIS WARRANTY COVERS

All Hotsy pressure washers are warranted by Hotsy to the original purchaser to be free from defects in materials and workmanship under normal use, for the periods specified below. This Limited Warranty is subject to the exclusions shown below, is calculated from the date of the original purchase, and applies to the original components only. Any parts replaced under this warranty will assume the remainder of the part's warranty period.

SEVEN YEAR PARTS AND ONE YEAR LABOR WARRANTY:

Components manufactured by Hotsy, such as frames, handles, top and bottom wraps, float tanks, fuel tanks, belt guards, and internal components on the oil-end of HOTSY manufactured pumps. General, AR, Liberty, Comet and swash and wobble plate pumps have a one year warranty. Heating coils have a five year warranty from date of original machine purchase.

ONE YEAR PARTS AND ONE YEAR LABOR WARRANTY:

All other components, excluding normal wear items as described below, will be warranted for one year on parts and labor. Parts and labor warranty on these parts will be for one year regardless of the duration of the original component manufacturer's part warranty.

WARRANTY PROVIDED BY OTHER MANUFACTURERS:

Motors, generators, and engines, which are warranted by their respective manufacturers, are serviced through these manufacturers' local authorized service centers. Hotsy is not authorized and has no responsibility to provide warranty service for such components.

WHAT THIS WARRANTY DOES NOT COVER

This warranty does not cover the following items:

1. Normal wear items, such as nozzles, spray guns, discharge hoses, wands, quick couplers, seals, filters, gaskets, O-rings, packings, pistons, pump valve assemblies, strainers, belts, brushes, rupture disks, fuses, pump protectors.
2. Damage or malfunctions resulting from accidents, abuse, modifications, alterations, incorrect installation, improper servicing, failure to follow manufacturer's maintenance instructions, or use of the equipment beyond its stated usage specifications as contained in the operator's manual.
3. Damage due to freezing, chemical deterioration, scale build up, rust, corrosion, or thermal expansion.
4. Damage to components from fluctuations in electrical or water supply.
5. Normal maintenance service, including adjustments, fuel system cleaning, and clearing of obstructions.
6. Transportation to service center, field labor charges, or freight damage.

WHAT YOU MUST DO TO OBTAIN WARRANTY SERVICE

In order to obtain warranty service on items warranted by Hotsy, you must return the product to your Authorized Hotsy Distributor, freight prepaid, with proof of purchase, within the applicable warranty period. If the product is permanently installed, you must notify your Authorized Hotsy Distributor of the defect. Your Authorized Hotsy Distributor will file a claim with Hotsy, who must subsequently verify the defect. In most cases, the part must be returned to Hotsy freight prepaid with the claim. For warranty service on components warranted by other manufacturer's, your Authorized Hotsy Distributor can help you obtain warranty service through these manufacturers' local authorized service centers.

LIMITATION OF LIABILITY

Hotsy's liability for special, incidental, or consequential damages is expressly disclaimed. In no event shall Hotsy's liability exceed the purchase price of the product in question. Hotsy makes every effort to ensure that all illustrations and specifications are correct, however, these do not imply a warranty that the product is merchantable or fit for a particular purpose, or that the product will actually conform to the illustrations and specifications. Our obligation under this warranty is expressly limited at our option to the replacement or repair at a service facility or factory designated by us, of such part or parts as inspection shall disclose to have been defective. **THE WARRANTY CONTAINED HEREIN IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY.** Hotsy does not authorize any other party, including authorized Hotsy Distributors, to make any representation or promise on behalf of Hotsy, or to modify the terms, conditions, or limitations in any way. It is the buyer's responsibility to ensure that the installation and use of Hotsy products conforms to local codes. While Hotsy attempts to assure that its products meet national codes, it cannot be responsible for how the customer chooses to use or install the product. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

HOTSY

www.hotsy.com




Form #8.914-380.0 / 97-6419 • Revised 7/08 • Printed in U.S.A.

BATCH CONTROLLERS

ProVu® • Model PD6210 Analog Input

ProVu® • Model PD6310 Pulse Input

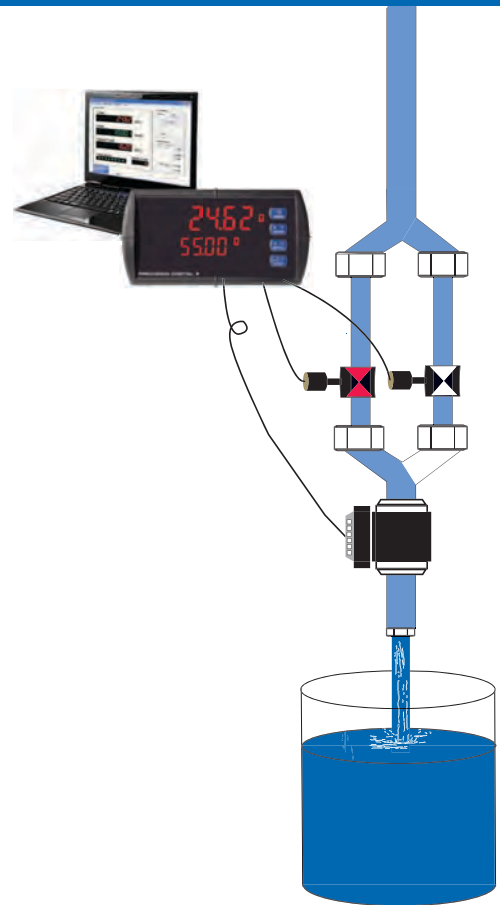

Two-Stage
Batch Control Example


PROVU®
SERIES

BATCH CONTROL FEATURES

- Start/Pause/Stop, Change Batch with Front Buttons
- Display Batch Total, Rate, Grand Total, Count or Preset
- Single or Multi-Stage Batch Control (Up to 8 Relays)
- Automatic Overrun Correction
- Rate in Units per Second, Minute, Hour, or Day
- Automatic or Manual Batch Control
- Low or High Flow Alarms while Batching
- 9 Digit Grand Total with Overflow Feature
- Count Up or Down with Each Batch
- Program and Control with a Computer Using MeterView Pro

ADDITIONAL FEATURES

- PD6210: 0-20 mA, 4-20 mA, 0-5 V, 1-5 V, and ± 10 V Inputs
- PD6310: Pulse, Open Collector, NPN, PNP, TTL, Switch Contact, Sine Wave (Coil), Square Wave Inputs
- Large Dual-Line 6-Digit Display, 0.60" & 0.46"
- NEMA 4X, IP65 Front
- 85-265 VAC or 12/24 VDC Input Power
- Sunlight Readable Display Models
- 2 or 4 Relays + Isolated 4-20 mA Output Options
- External 4-Relay & Digital I/O Expansion Modules
- USB, RS-232, & RS-485 Modules for Modbus® RTU

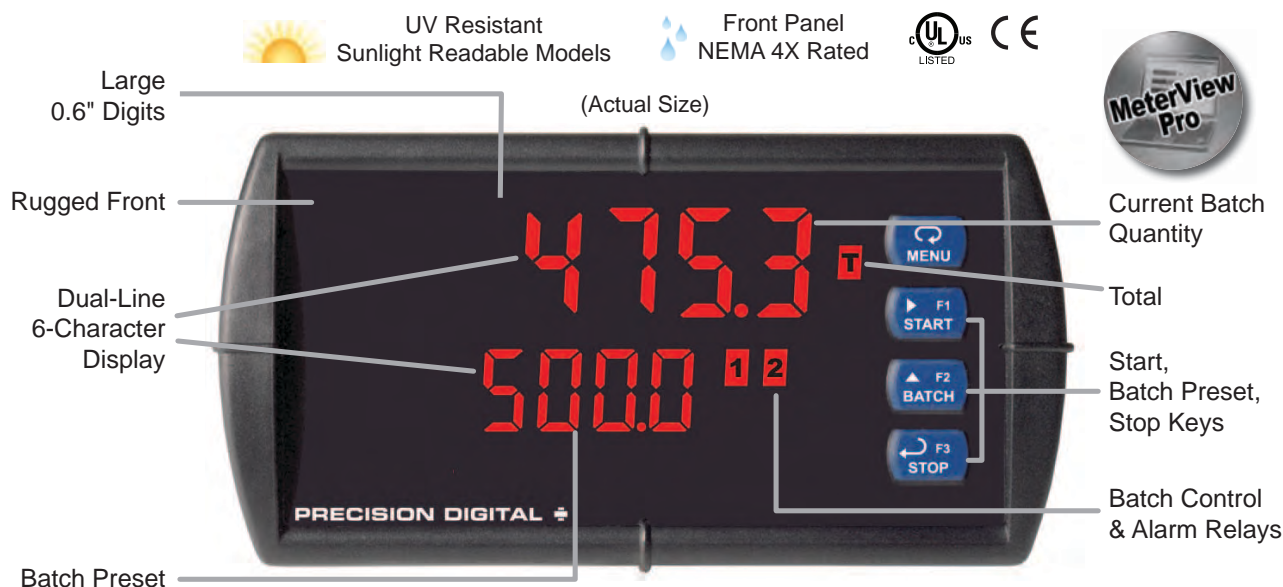

INTUITIVE BATCH CONTROL

The front panel has intuitive buttons and displays that make operating the batch controller clear and easy right out of the box. START, BATCH, and STOP buttons come setup by default for batch controller operation. The START button is used to begin a batching process. The BATCH button is used to quickly access the preset value. The STOP button can be pressed once to pause a batch, or twice to cancel a batch in progress. The upper and lower displays can be easily configured for your application need. The STOP button may be used to easily cycle the lower display information while the batch is stopped.

Easily Choose Your Display Information



Batch Total & Preset

The preset on the lower display provides even quicker access to the preset menu just by using the arrow keys to change the value.



Batch Total & Rate

The rate on the lower display may be alternated with units for variable flow batching systems. Rate alarms may also be used during the batch process.



Batch Total & Batch Count

The batch count on the lower display, tracks completed batches. The count may be set back to 0 with the reset menu.



Batch Total & Grand Total

A grand total with overflow digits for up to a 9 digit total may be displayed in the lower display, with password protection and non-resettable programmable features.

Clearly Labeled Displays

The upper display alternates the display to show the controller state when in pause or stop mode. When displaying rate, grand total, batch count, or preset, the lower display alternates between the display value and the function or unit of measure.



Batch Total & Preset



Alternating Display

Grand Total Displays Up to 9 Digits

These batch controllers can display up to nine digits of total flow with the grand total feature. In the diagrams below, the batch controller is displaying 532,831,470 by toggling between a display of "oF 532" and "831470". Notice the (GT with arrow ▲ symbol) is lit up indicating the display is in a grand total overflow mode.



Simple to Program

The user friendly dual-line display makes the ProVu easy to set up & program. No jumpers to set for input selection. All setup & programming are done via the front panel.



Input Setup




Display Setup

BATCH CONTROLLER CAPABILITIES


A ProVu batch controller can be programmed for a wide variety of applications. Setup is easy for single or multi-stage batching. Automatic overrun correction keeps the batch size accurate, even over time and with system wear. It can record grand total, or non-resettable grand total with a time base of seconds, minutes, hours or days. The user can program a conversion factor, and configure a non-resettable grand total, and password protection.

Single and Multi-Stage Batching

The ProVu can be used as a single or multi-stage batch controller. Relays assigned to the total act as batch control relays, with additional relays beyond the first including a preclose value. The preclose deactivates the relay before the batch is finished, to allow slower fill rates and a more accurate batch finish. With expansion module relays, up to eight-stage batching is possible. Each additional stage batching relay has an individually programmable preclose amount.

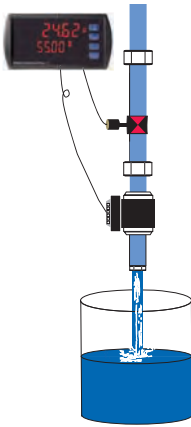

Single Stage Batch Control

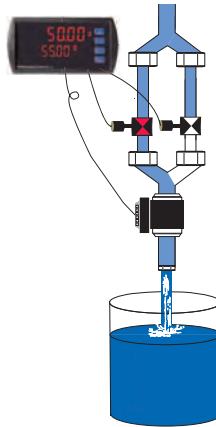

Multi-Stage Batch Control

Manual or Automatic Batch Control

Batches may be started manually with the START front panel button, or with a remote digital input trigger. Batches may also be programmed to start automatically after a 0 to 999.9 second delay after the end of the last completed batch. A manually stopped batch will not automatically restart. The START button or digital input must be used.

Automatic Overrun Correction

The ProVu batch controller will correct for batch overrun or shortages automatically. By tracking the amount the batch was off by, the controller will automatically adjust the batch by modifying the batch relay deactivation time.

Quick Preset Changes

The front panel BATCH key is configured by default to access the preset menu. The preset may be changed quickly and easily between batches without the need to enter setup menus.



Non-Resettable Grand Total

The user can set up the grand total to be non-resettable by entering a specific password. Once this is done, the grand total can never be reset.

Total Conversion Factor

The user can enter a conversion factor that allows the controller to display total in different units than the rate. For instance, an operator could measure flow rate in gallons per minute and grand total in hundredths of acre-feet.

Grand Total & Rate Alarms

The ProVu's four internal and four external relays can be set up to alarm when the grand total reaches a user-defined set point or when the rate is above or below a certain value. Rate alarms are only activated when the batching process is running. A variety of reset modes are available and the user can also program time delays and fail-safe operation.

Relay Outputs

The ProVu has up to four 3 A Form C relays (SPDT) with multiple programmable functions. One (relay 1) should always be used for batch control. Other relays may be configured as additional batch relays, with or without preclose for multi-stage batching or as alarms for the rate or grand total. Each alarm has multiple power loss fail-safe options. Alarm relays can be configured for proper protective action upon input loop break. Alarm relay ON and OFF delay times are user adjustable. Up to eight front panel indicators show alarm and/or relay state. All alarm relays can be configured for 0-100% deadband. Rate alarms are only active while a batch is running.

Relay Operation/Configuration

There are powerful relay functions that can be configured in the ProVu controller, including:

- Single and multiple stage batch control with preclose
- Manual and automatic batch control modes
- Rate alarms during batch process
- Grand total alarms
- Sampling function
- User selectable fail-safe operation
- Relay action for loss (break) of 4-20 mA input signal (PD6210)
- Time delay (on and off), independent for each alarm relay

Analog Output

The isolated analog retransmission signal can be configured to represent the batch total, grand total, maximum (peak) value, minimum (valley) value, the value for any of the eight relay set points, manual setting control, or Modbus input. While the output is nominally 4-20 mA, the signal will accurately accommodate under- and over-ranges from 1 to 23 mA.

Isolated Transmitter Power Supplies

A powerful 24 V @ 200 mA power supply is a standard feature on the ProVu controller. It can be configured for 5, 10, or 24 V (default) by means of a simple internal jumper (see manual). An additional power supply (24 V @ 40 mA) is standard with the 4-20 mA output option.

Four Types of Password Protection

The ProVu offers 4 types of password protection. Level 1 protection allows the operator use of only the 3 pre-configured function keys on the front panel without a password. Level 2 protection allows the operator use of only the function keys and the ability to change set points without a password. Level 3 protection restricts the function keys and all configuration menus without a password. Grand total reset protection prevents the total from being reset manually.

Environmentally Protected

The ProVu has standard UV protection, a NEMA 4X front panel, extremely durable face plate, performs in wide ambient operating temperatures, and is CE Certified (high noise and RF immunity).

Optional SunBright Display Models

ProVu's SunBright display models have an extraordinarily bright LED display. They are perfect for applications where the controller is in direct sunlight or in applications where visibility may be impaired by smoke, fog, dust, or distance. This option is available on all ProVu models.



Rugged

A unique front panel design makes the ProVu nearly impenetrable in typical applications. Here, the ProVu easily survives a direct hit on the display from a heavy 2" solid stainless steel ball dropped from eight feet.

FIELD EXPANSION MODULES

Add functionality to the ProVu in the field with easy-to-install external expansion modules. Add RS-232, RS-422/485, or USB communications, I/O modules (up to 2), and 4-relay expansion module. The menu items for these modules do not appear until the module is connected, simplifying the basic menu. Relay and digital I/O modules are shown below with optional DIN rail mounting kit, P/N PDA1002.



PDA1044 I/O Expansion Module

Four digital inputs and four digital outputs are available per expansion module. The ProVu controller will accept two of these modules. External digital inputs can function similarly to the front panel function keys.

PDA1004 Relay Expansion Module


An external module containing four 3 A Form A (SPST) relays can be added to the ProVu at anytime. Removable screw terminal blocks accept 12 to 22 AWG wire.

PDA1232, PDA1485, & PDA8008 Communication Modules

Serial communications on the ProVu can be added anytime with external PDA1232 (RS-232), PDA1485 (RS-422/485), or PDA8008 (USB) communication adapters.

METERVIEW® PRO SOFTWARE

Configure, monitor, control, and datalog a ProVu PD6210 or PD6310 from a PC using MeterView Pro Software (available for free download at www.predig.com) and a serial adapter.

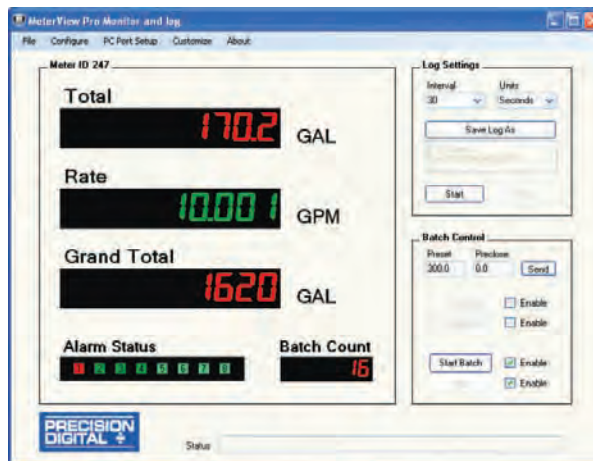

Batch Control From a Computer

Through MeterView Pro Software, the preset and relay 2 preclose may be easily changed from the main control window shown above. The total and grand total may be reset with just the click of a button. The batch controller may be started, paused, and stopped through the control window, for full featured batch controller operation.

Fully Program the Controller

All the programming parameters of the controller may be configured from MeterView Pro Software. The configuration file may be saved for later use, and saved configuration files may be loaded into the software for download into the ProVu.

DIGITAL COMMUNICATIONS

Modbus® RTU Serial Communications

With the purchase of a serial communication adapter, ProVu controllers can communicate with any Modbus Master device using the ever-popular Modbus communications protocol that is included in every ProVu. Below are some examples of other things that can be done with ProVu's Modbus communications.

- Start, pause, stop, or change preset values
- Send a 6-character message to the lower display upon an event
- Remote user control (i.e. change set points, acknowledge alarms)
- Read rate, total, grand total, batch count, etc.



Modbus PV Input



Remote Message


Controller Copy

The Copy feature is used to copy (or clone) all the settings from one ProVu to other ProVu controllers in about 20 seconds! The Copy function is a standard feature on all controllers. It does not require a communications adapter, only an optional cable assembly, P/N PDA1200. See the ordering information for complete details.

MANUAL MULTI-STAGE BATCH CONTROL OPERATION


System Setup

- Both valves are closed with an empty barrel in place. The batched total is displayed in the upper display, the preset is selected for the lower display.

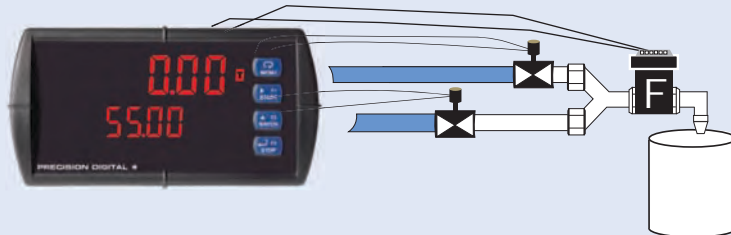


Batch Start

- The START button is pressed, with both valves open. The barrel begins to fill.

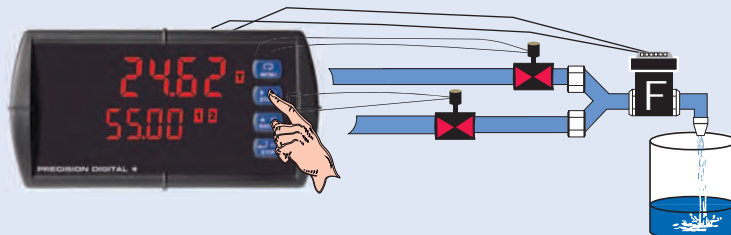


Preclose Valve

- When the batch total reaches a value of 50.00 (Preset [55.00] – Preclose [5.00]) the full-flow valve closes. The fill rate of the tank slows as a result.

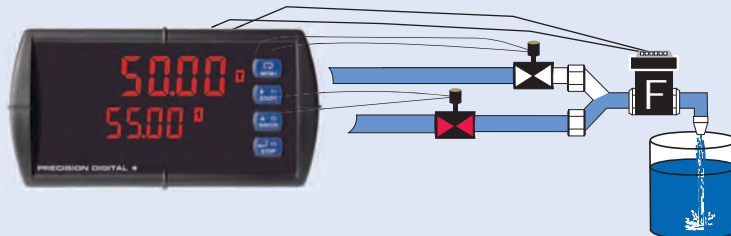


Completed Batch

- When the batch total equals the preset amount, the restricted-flow valve closes. The barrel is now full. If some overrun occurs, the next batch will adjust for this offset amount to maintain accuracy.

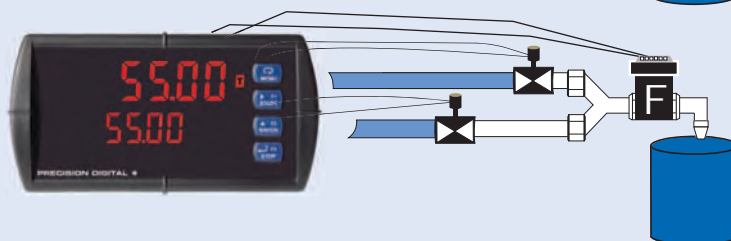


Change Preset

- After placing a new, empty barrel, a new preset fill amount may be selected with the BATCH key, while the process is stopped.

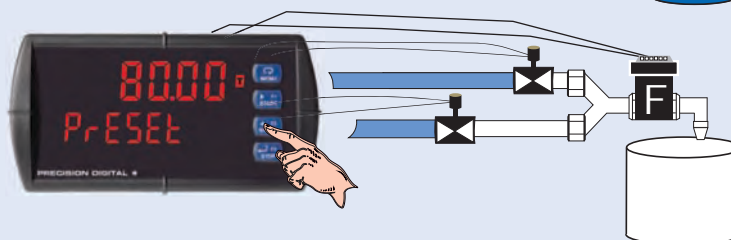


Begin New Batch

- Press the START key and a new batch will begin. With both valves open, the process continues.

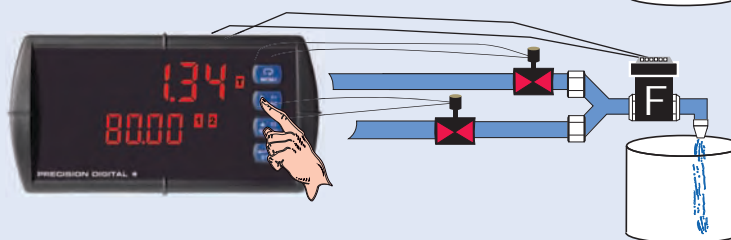

Pause/Stop

- At any time, the STOP button may be pressed, once to Pause the process, or twice to cancel the batch, which stops the process.

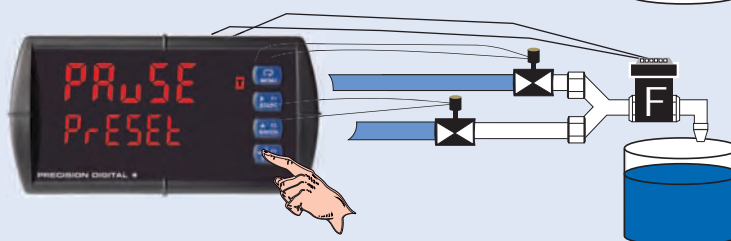

VALVE KEY LEGEND

FLOWMETER



5

SOLENOID
VALVE

= VALVE CLOSED

= VALVE OPEN

NEMA 4, NEMA 4X, AND EXPLOSION-PROOF ENCLOSURES

Thermoplastic and stainless steel NEMA 4X, and painted steel NEMA 4 enclosures are available. Also available is the ProtEX-MAX for hazardous area applications requiring explosion-proof enclosures. Visit our website at www.predig.com for more information.



PDA2811
Plastic Low-Cost



PD8 Series
ProtEX-MAX




Enclosure Selection
Utility Online

CONNECTIONS


PD6210

- Form C (SPDT) relays
- Two isolated power supplies available even on 12/24 VDC input power models
- Removable terminal blocks
- 2 or 4 relays + isolated 4-20 mA output option

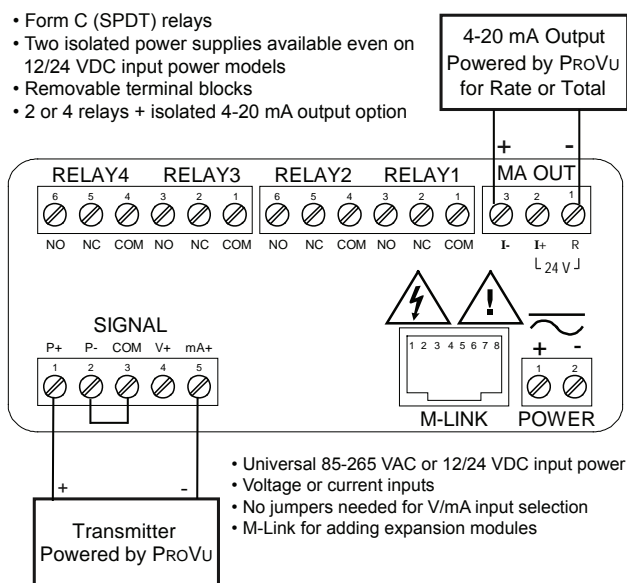

PD6310

- Form C (SPDT) relays
- Two isolated power supplies available even on 12/24 VDC input power models
- Removable terminal blocks
- 2 or 4 relays + isolated 4-20 mA output option

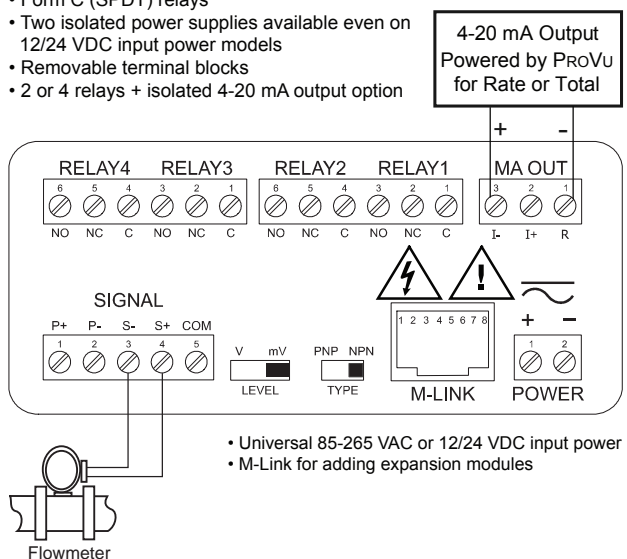

SPECIFICATIONS

Except where noted all specifications apply to operation at +25°C.

General

Display: Upper display: 0.60" (15 mm) high. Lower display: 0.46" (12 mm) high. Both displays are 6 digits (-99999 to 999999), red LEDs with leading zero blanking.

Default Display Assignment: The upper display shows batch total. The lower display shows rate with alternating units, and can be switched to show grand total, batch count, or preset with the STOP key.

Custom Display Assignment: The upper and lower displays may be assigned to rate, total, grand total, batch count, preset, set points, units (lower display only), alternating R & T, R & GT, preset & rate, max & min, or a Modbus display register. Any rate display may be programmed to alternate with a custom unit or tag.

Alternating Display: Displays alternate every 10 seconds when display is selected or the batch is paused.

Display Intensity: Eight user selectable intensity levels

Display Update Rate: 5/second (200 ms)

Overrange: Display flashes 999999

Underrange: Display flashes -99999

Front Panel: NEMA 4X, IP65

Operating Methods: Three programmable front panel buttons (default START, BATCH, STOP), digital inputs, PC and MeterView Pro software, and Modbus registers.

Programming Methods: Four front panel buttons, digital inputs, PC and MeterView Pro software, Modbus registers, or cloning using Copy function.

Noise Filter: Programmable from 2 to 199 (0 will disable filter)

Filter Bypass: Programmable from 0.1 to 99.9% of calibrated span.

Recalibration: All ranges are calibrated at the factory. Recalibration is recommended at least every 12 months.

Max/Min Display: Max (Peak) / min (Valley) readings reached by the process are stored until reset by the user or until power is cycled.

Password: Three programmable passwords restrict modification of programmed settings and two prevent resetting the totals. Pass 1: Allows use of function keys. Pass 2: Allows use of function keys, digital inputs, and editing set/reset points. Pass 3: Restricts all programming, function keys, and digital inputs. Gtotal password: Prevents resetting the grand total manually.

Non-Volatile Memory: All programmed settings are stored in non-volatile memory for a minimum of ten years if power is lost.

Power Options: 85-265 VAC 50/60 Hz, 90-265 VDC 20 W max, or jumper selectable 12/24 VDC $\pm 10\%$, 15 W max.

Fuse: Required external fuse: UL Recognized, 5 A max, slow blow; up to 6 controllers may share one 5 A fuse.

Isolated Transmitter Power Supply: Terminals P+ & P-: 24 VDC $\pm 5\%$ @ 200 mA max (standard), (12/24 VDC powered models rated @ 100 mA max). 5 or 10 VDC @ 50 mA max, selectable with internal jumper J4.

Normal Rejection Mode: Greater than 60 dB at 50/60 Hz (PD6210)

Isolation: 4 kV input/output-to-power line. 500 V input-to-output or output-to-P+ supply.

Overvoltage Category: Installation Overvoltage Category II: Local level with smaller transient overvoltages than Installation Overvoltage Category III.

Environmental: Operating temperature range: -40 to 65°C. Storage temperature range: -40 to 85°C. Relative humidity: 0 to 90% non-condensing.

Connections: Removable screw terminal blocks accept 12 to 22 AWG wire, RJ45 for external relays, digital I/O, and serial communication adapters.

Enclosure: 1/8 DIN, high impact plastic, UL 94V-0, color: black

Mounting: 1/8 DIN panel cutout required: 3.622" x 1.772"

(92 mm x 45 mm). Two panel mounting bracket assemblies are provided.

Tightening Torque: Screw terminal connectors: 5 lb-in (0.56 Nm)

Weight: 9.5 oz. (269 g)

Overall Dimensions: 4.68" x 2.45" x 5.64"

(119 mm x 62 mm x 143 mm) (W x H x D)

UL File Number: UL & c-UL Listed. E160849; 508 Industrial Control Equipment.

Warranty: 3 years parts & labor

PD6210 Analog Input

Inputs: Field selectable: 0-20, 4-20 mA, ± 10 VDC (0-5, 1-5, 0-10 V), Modbus PV (Slave)

Accuracy: $\pm 0.03\%$ of calibrated span ± 1 count, square root & programmable exponent accuracy range: 10-100% of calibrated span

Temperature Drift: 0.005% of calibrated span/ $^{\circ}\text{C}$ max from 0 to 65 $^{\circ}\text{C}$ ambient, 0.01% of calibrated span/ $^{\circ}\text{C}$ max from -40 to 0 $^{\circ}\text{C}$ ambient

Signal Input Conditioning: Linear, square root, programmable exponent, or round horizontal tank volume calculation.

Multi-Point Linearization: 2 to 32 points

Programmable Exponent: 1.0001 to 2.9999

Low-Flow Cutoff: 0-999999 (0 disables cutoff function)

Decimal Point: Up to five decimal places or none: dddddd, dddddd, dddddd, dddddd, or dddddd.

Calibration Range:

Input Range	Minimum Span Input 1 & 2
4-20 mA	0.15 mA
± 10 V	0.10 V

An error message will appear if input 1 and input 2 signals are too close together.

Input Impedance: Voltage ranges: greater than 1 M Ω .

Current ranges: 50 - 100 Ω (depending on resettable fuse impedance).

Input Overload: Current input protected by resettable fuse, 30 VDC max. Fuse resets automatically after fault is removed.

PD6310 Pulse Input

Inputs: Field selectable: Pulse or square wave 0-5 V, 0-12 V, or 0-24 V @ 30 kHz; TTL; open collector 4.7 k Ω pull-up to 5 V @ 30 kHz; NPN or PNP transistor, switch contact 4.7 k Ω pull-up to 5 V @ 40 Hz; coil (sine wave) 40 mVp-p min @ 10 kHz; Modbus PV (Slave)

Low Voltage Mag Pickup (Isolated): Sensitivity: 40 mVp-p to 8 Vp-p

Minimum Input Frequency: 0.001 Hz - Minimum frequency is dependent on high gate setting.

Maximum Input Frequency: 30,000 Hz (10,000 for Low Voltage Mag Pickup)

Input Impedance: Pulse input: Greater than 300 k Ω @ 1 kHz. Open collector/switch input: 4.7 k Ω pull-up to 5 V.

Accuracy: $\pm 0.03\%$ of calibrated span ± 1 count

Display Update Rate: Total: 10/sec, Rate: 10/sec to 1/1000 sec

Temperature Drift: Rate display is not affected by changes in temperature.

Multi-Point Linearization: 2 to 32 points

Low-Flow Cutoff: 0-999999 (0 disables cutoff function)

Decimal Point: Up to five decimal places or none: dddddd, dddddd, dddddd, dddddd, or dddddd.

Calibration: May be calibrated using K-factor, scale using internal calibration, or calibrate by applying an external calibration signal.

K-Factor: Field programmable K-factor converts input pulses to rate in engineering units. May be programmed from 0.00001 to 999,999 pulses/unit.

Calibration Range: Input 1 signal may be set anywhere in the range of the controller; input 2 signal may be set anywhere above setting.

Filter: Programmable contact de-bounce filter, 40 to 999 Hz maximum input frequency allowed with low speed filter.

Time Base: Second, minute, hour, or day

Low Gate: 0.1-99.9 seconds; this function determines how often the incoming pulses are calculated and the rate display is updated.

High Gate: 2.0-99.9 seconds; this function determines how long to wait for pulses before the display goes to zero. This function is used to display slow pulse rates.

Note: The combination of the low and high gate functions makes it possible to have a fast display update for fast pulse rates while displaying slow pulse rates, if needed. For example: If the low gate is set to 1.0 second and the high gate to 99.9 second, with a fast pulse rate the display is updated every second; with a slow pulse rate the controller is capable of waiting up to 99.9 seconds before calculating the rate, making it possible to display a very slow rate down to 1 pulse/99.9 second (0.001 pulse/second).

Batch Controller

Rate Display Indication: 0 to 999999, lead zero blanking. "R" LED illuminates while displaying rate.

Total Displays & Grand Total Overflow: 0 to 999,999; automatic lead zero blanking. "T" LED is illuminated while displaying batch total and "GT" for grand total. Up to 999,999,999 with total-overflow feature. "oF" is displayed to the left of grand total overflow and \blacktriangle LED is illuminated.

Batch Total Decimal Point: Up to five decimal places or none: dddddd, dddddd, dddddd, dddddd, or dddddd.
Total decimal point is independent of rate decimal point.

Totalizer: Calculates total based on rate and field programmable multiplier to display total in engineering units. Time base must be selected according to the time units in which the rate is displayed.

Total Conversion Factor: 0.00001 to 999,999

Batch Preset: 0.00001 to 999,999 based on batch total decimal point.

Automatic Batch Restart Delay: 00000.1 to 999.9 seconds. The batch will automatically restart after completion of the last batch.

Grand Total Rollover: Totalizer rolls over when display exceeds 999,999,999. Relay status reflects the display value.

Grand Total Alarms: Up to seven, user selectable under Setup menu. Any set point can be assigned to grand total and may be programmed anywhere in the range of the controller for grand total alarm indication. Note that Relay 1 should always be assigned to batch control (EOLRL).

Grand Total Reset: Via front panel button, external contact closure on digital inputs, automatically via user selectable preset value and time delay, or through serial communications.

Grand Total Reset Password: A grand total password may be entered to prevent resetting the grand total from the front panel.

Non-Resettable Grand Total: The grand total can be programmed as a non-resettable total by entering the password "050873".

Caution: Once the Grand Total has been programmed as "non-resettable" the feature cannot be disabled.

Relays

Rating: 2 or 4 SPDT (Form C) internal and/or 4 SPST (Form A) external; rated 3 A @ 30 VDC and 125/250 VAC resistive load; 1/14 HP (≈ 50 W) @ 125/250 VAC for inductive loads

Noise Suppression: Noise suppression is recommended for each relay contact switching inductive loads.

Relay Assignment: Relays may be assigned to batch control, sampling, rate, or grand total alarms.

Preclose: 0-100% of batch size, individually user programmable for each additional batch control relay beyond the first.

Alarm Deadband: 0-100% of span, user programmable

High or Low Alarm: User may program any alarm for high or low trip point. Unused alarm LEDs and relays may be disabled (turned off).

Batching Relay Operation: Single or (2 to 8) multi-relay batching with optional preclose for multi-stage operation. Each additional relay may be programmed with an individual preclose value.

Alarm Relay Operation: Automatic (non-latching), latching (requires manual acknowledge), sampling (based on rate or grand total), pump alternation control (2 to 8 relays), off (disable unused relays), and manual on/off control mode. Alarms are active only when the batch is running.

Alarm Relay Reset: User selectable via front buttons, digital inputs, or PC

1. Automatic reset only (non-latching), when input passes the reset point or total is reset to zero.
2. Manual reset only, when batch is stopped (latching).
3. Manual reset only after alarm condition has cleared (latching)

Note: Front panel button or digital input may be assigned to acknowledge relays programmed for manual reset. This replaces one of the standard batch control function keys. Only the PAUSE/STOP key function is possible during a batch process, so manual reset may only be done when the controller is in STOP mode.

Deadband: 0-100% of span, user programmable

Time Delay: 0 to 999.9 seconds, on & off relay time delays. Programmable and independent for each relay.

Fail-Safe Operation: Programmable and independent for each relay.

Note: Relay coil is energized in non-alarm condition. In case of power failure, relay will go to alarm state.

Auto Initialization: When power is applied, relays will reflect the state of the input. Alarms are active only when the batch is running.

Isolated 4-20 mA Transmitter Output

Output Source: Rate/process, total, grand total, max, min, set points 1-8, manual control setting, or Modbus input

Scaling Range: 1.000 to 23.000 mA for any display range

Calibration: Factory calibrated: 4.000 to 20.000 = 4-20 mA output

Analog Output Programming: 23.000 mA maximum for all parameters: Overrange, underrange, max, min, and break

Accuracy: $\pm 0.1\%$ FS ± 0.004 mA

Temperature Drift: 0.4 μ A/°C max from 0 to 65°C ambient,

0.8 μ A/°C max from -40 to 0°C ambient

Note: Analog output drift is separate from input drift.

Isolated Transmitter Power Supply: Terminals I+ & R: 24 VDC $\pm 5\%$ @ 40 mA maximum, may be used to power the 4-20 mA output or other devices. Present on both AC & DC powered units.

External Loop Power Supply: 35 VDC maximum

Output Loop Resistance:

Power supply	Minimum	Maximum
24 VDC	10 Ω	700 Ω
35 VDC (external)	100 Ω	1200 Ω

Serial Communications

Protocol: Modbus® RTU

Controller Address/Slave ID: 1 - 247

Baud Rate: 300 - 19,200 bps

Transmit Time Delay: Programmable between 0 and 199 ms or transmitter always on for RS-422 communication

Data: 8 bit (1 start bit, 1 or 2 stop bits)

Parity: Even, odd, or none with 1 or 2 stop bits

Byte-to-Byte Timeout: 0.01 - 2.54 seconds

Turn Around Delay: Less than 2 ms (fixed)

Note: Refer to the PD6000/PD7000 Modbus Register Tables located at www.predig.com for details.

Digital I/O Expansion Module

Channels: 4 digital inputs & 4 digital outputs per module

System: Up to 2 modules for a total of 8 inputs & 8 outputs

Digital Input Logic: High: 3 to 5 VDC Low: 0 to 1.25 VDC

Digital Output Logic: High: 3.1 to 3.3 VDC Low: 0 to 0.4 VDC

Source Current: 10 mA maximum

Sink Current: 1.5 mA minimum

+5 V Terminal: To be used as pull-up for digital inputs only.

4-Relay Expansion Module

Relays: Four Form A (SPST) rated 3 A @ 30 VDC and 125/250 VAC resistive load; 1/14 HP (≈ 50 watts) @ 125/250 VAC for inductive loads.

ORDERING INFORMATION


ProVu® PD6210 Analog Input		
85-265 VAC Model	12/24 VDC Model	Options Installed
PD6210-6R2	PD6210-7R2	2 Relays
PD6210-6R4	PD6210-7R4	4 Relays
PD6210-6R5	PD6210-7R5	2 Relays & 4-20 mA Output
PD6210-6R7	PD6210-7R7	4 Relays & 4-20 mA Output
To order SunBright display models replace the "R" with "H" (i.e. PD6210-6H2) Note: 24 V flowmeter power supply standard on all models.		

ProVu® PD6310 Pulse Input		
85-265 VAC Model	12/24 VDC Model	Options Installed
PD6310-6R2	PD6310-7R2	2 Relays
PD6310-6R4	PD6310-7R4	4 Relays
PD6310-6R5	PD6310-7R5	2 Relays & 4-20 mA Output
PD6310-6R7	PD6310-7R7	4 Relays & 4-20 mA Output
To order SunBright display models replace the "R" with "H" (i.e. PD6310-6H2) Note: 24 V flowmeter power supply standard on all models.		

Accessories	
Model	Description
PDA1002	DIN Rail Mounting Kit for Two Expansion Modules
PDA1004	4-Relay Expansion Module
PDA1044	4 Digital Inputs & 4 Digital Outputs Module
PDA1200	Controller Copy Cable
PDA1232	RS-232 Serial Adapter
PDA1485	RS-422/485 Serial Adapter
PDA7485-I	RS-232 to RS-422/485 Isolated Converter
PDA7485-N	RS-232 to RS-422/485 Non-Isolated Converter
PDA8008	USB serial adapter
PDA8232-N	USB to RS-232 Non-Isolated Converter
PDA8485-I	USB to RS-422/485 Isolated Converter
PDA8485-N	USB to RS-422/485 Non-Isolated Converter
PDX6901	Suppressor (snubber): 0.01 μ F/470 Ω , 250 VAC
PDA2811	Plastic NEMA 4X Enclosure for 1 Batch Controller
PDA2812	Plastic NEMA 4X Enclosure for 2 Batch Controllers

See www.predig.com/esu for additional enclosures.

DIMENSIONS

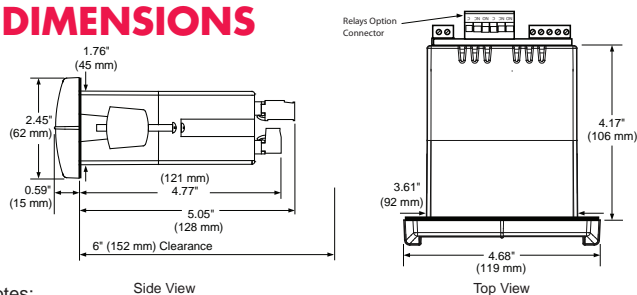

Notes:

1. Panel cutout required: 1.772" x 3.622" (45mm x 92mm)
2. Panel thickness: 0.040 - 0.250" (1.0mm - 6.4mm)
3. Mounting brackets lock in place for easy mounting
4. Clearance: Allow 6" (152 mm) behind the panel

Your Local Distributor is:

Disclaimer

The information contained in this document is subject to change without notice. Precision Digital Corporation makes no representations or warranties with respect to the contents hereof, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. ©2011 Precision Digital Corporation. All rights reserved.

LDS6210_B 07/11

FOR INFORMATION ON FOLLOWING COMPONENTS PLEASE SEE THE
PDF FILES ON THE MAIN INDEX OF THE DISC.

DYNAQUIP ELECTRIC SOLENOID

ENVIROMAG 2000 FLOW METER

EVIROMAG FLOW METER CONVERTER